


DIFFERENTIAL [C66M-R, C66MX-R]

id0515ma284200

Purpose, Function

- The differential absorbs the rotation speed of the inside and outside wheel of a wheel set when the vehicle is cornering.


Construction

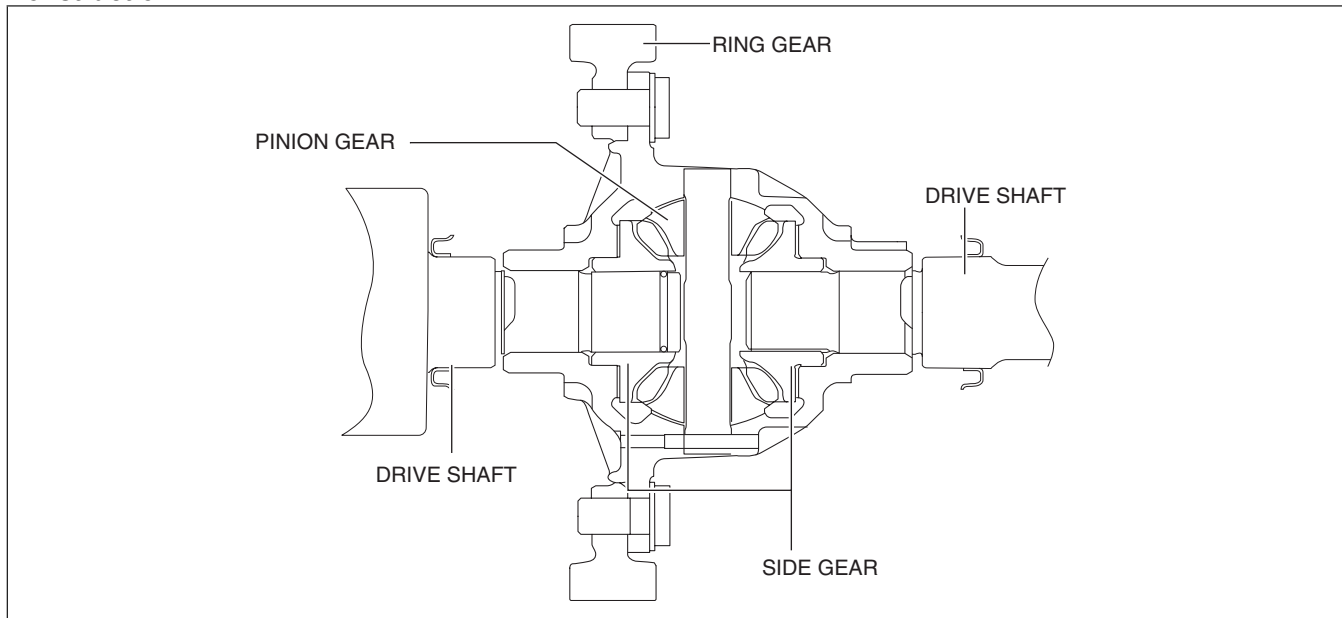

ac5wzn00001182


Operation

Driving in a straight line

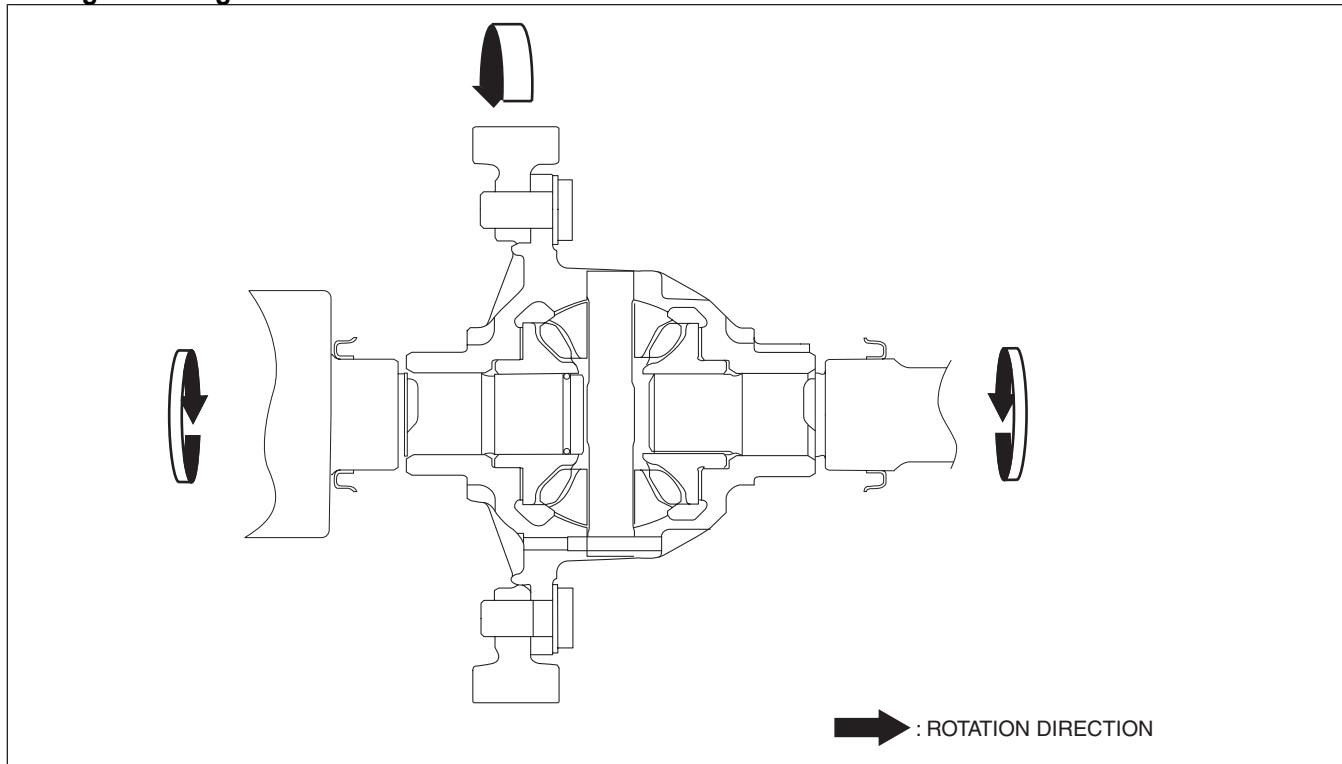

am3uun00001802

Cornering

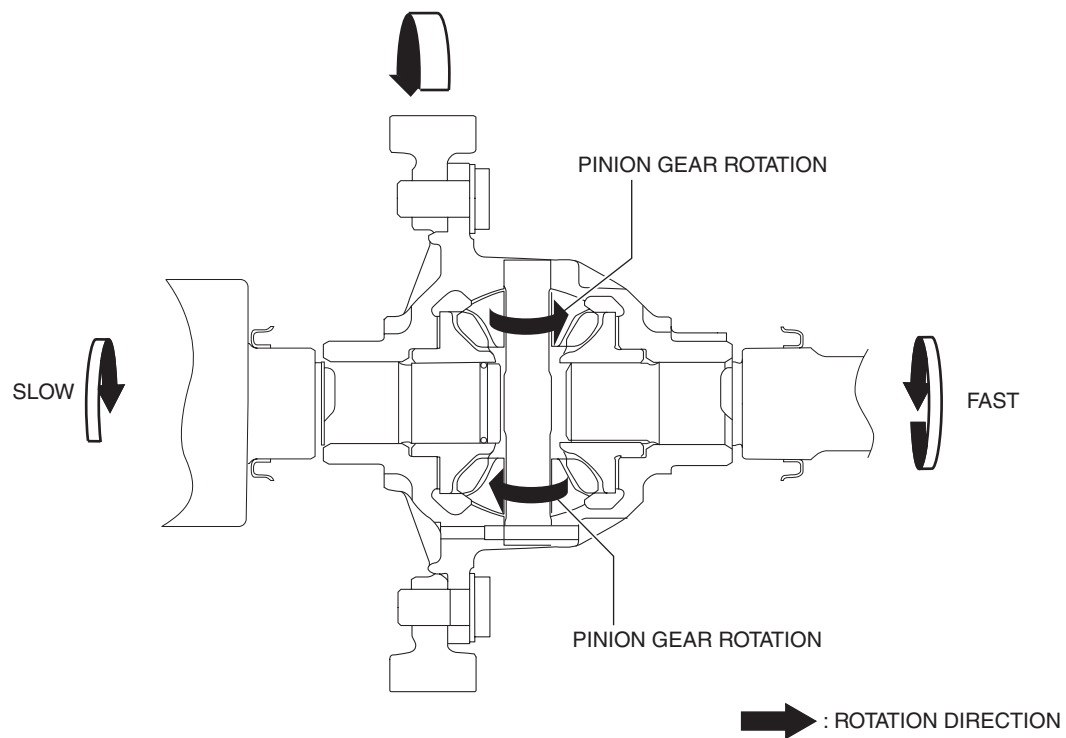

am3uun00001803