


EGR COOLER INSPECTION [SKYACTIV-D 2.2]

id0116e1099800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the EGR cooler. (See EGR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Verify that there is airflow from port B when pressure is applied from port A.
 - If there is no airflow, replace the EGR cooler. (See EGR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

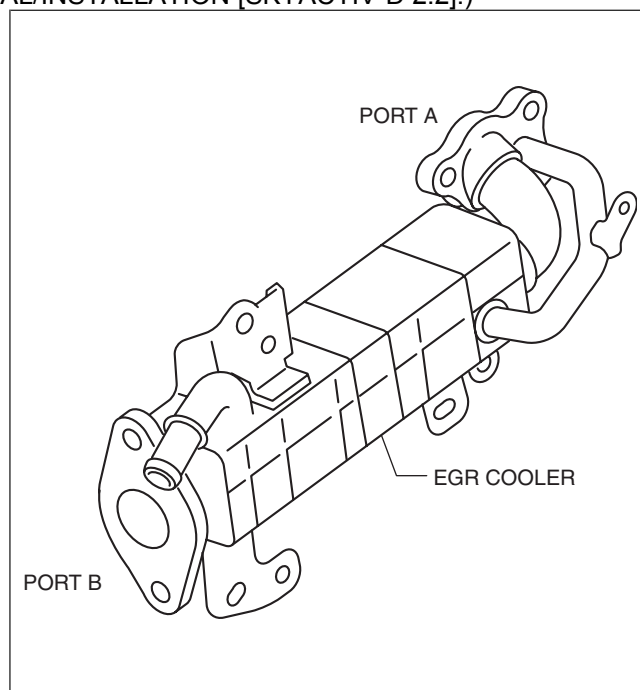

ac5wzw00004754