


RUNNING LIGHT SYSTEM

id091800011700

Outline


- When the ignition is switched ON, the running light system automatically illuminates the running lights, parking lights, taillights and license plates lights.

Structural View

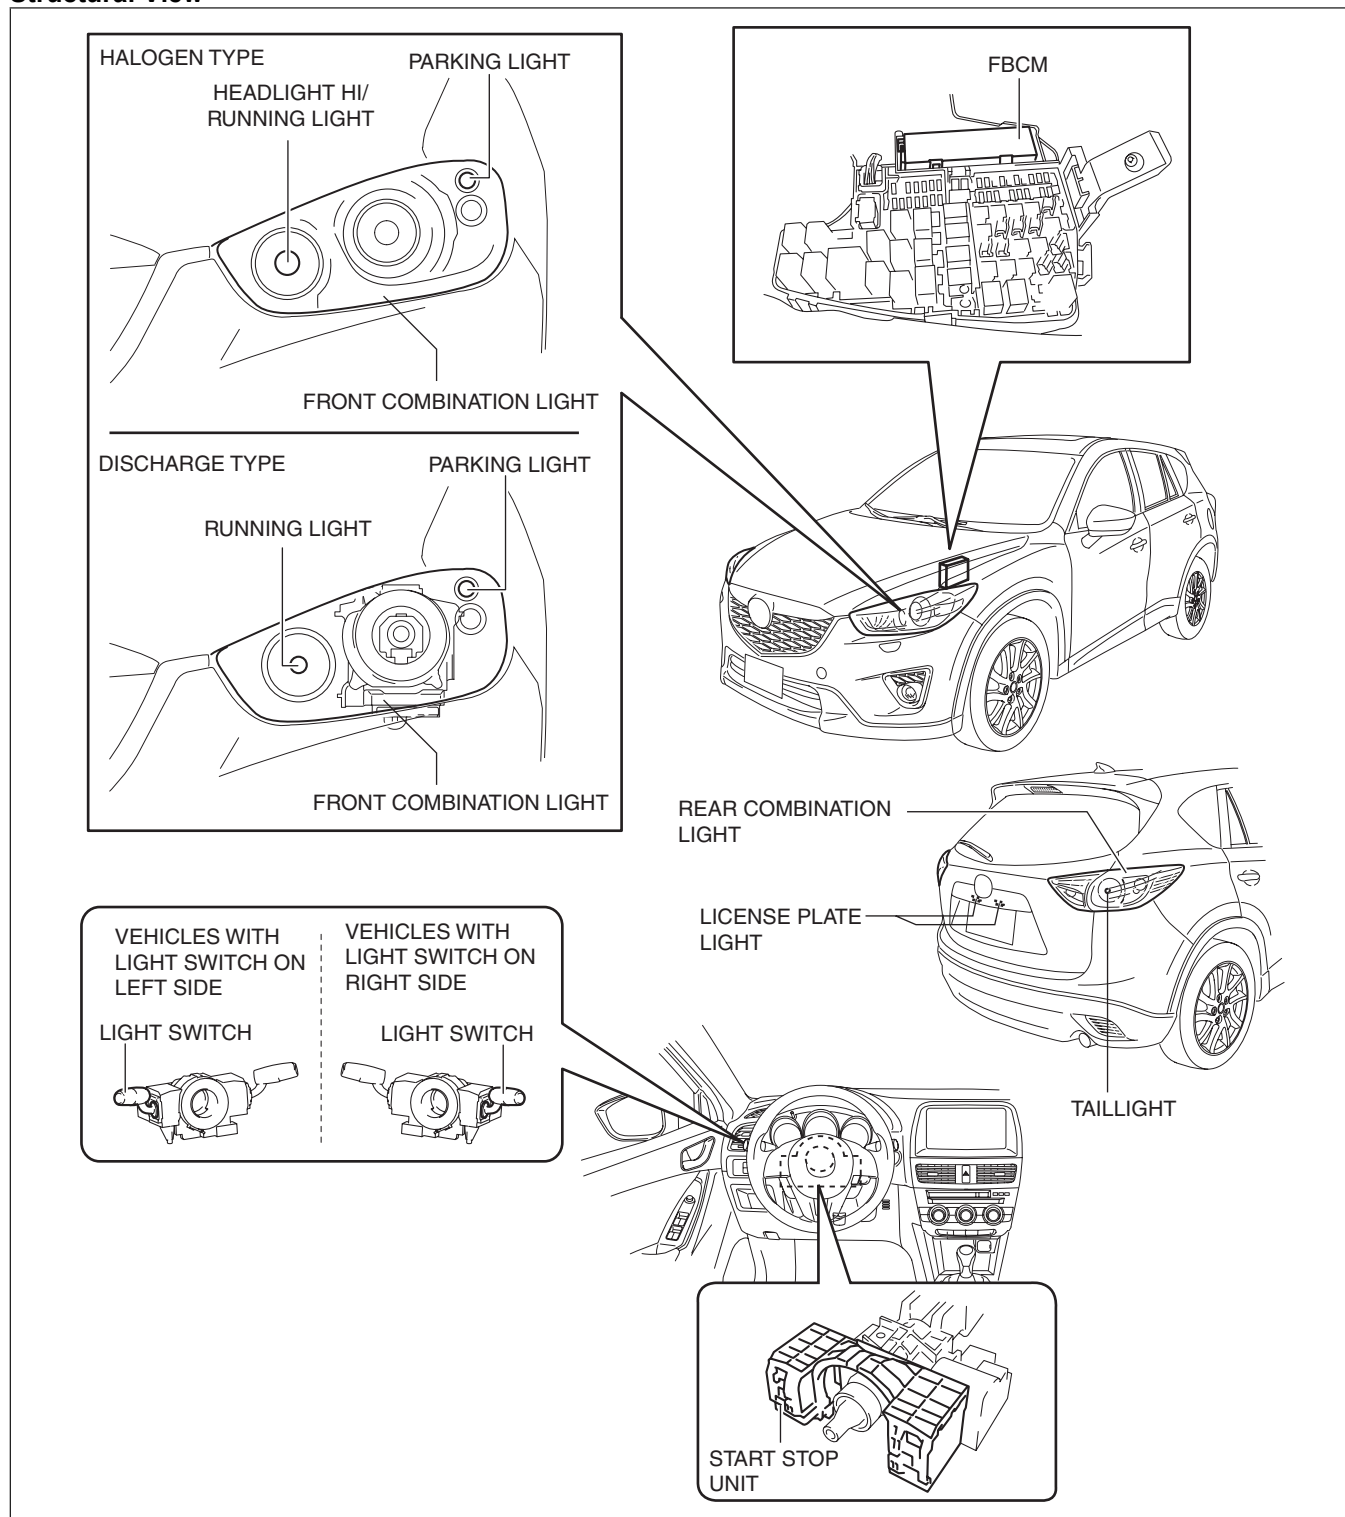

ac5wzn00001396

System Wiring Diagram

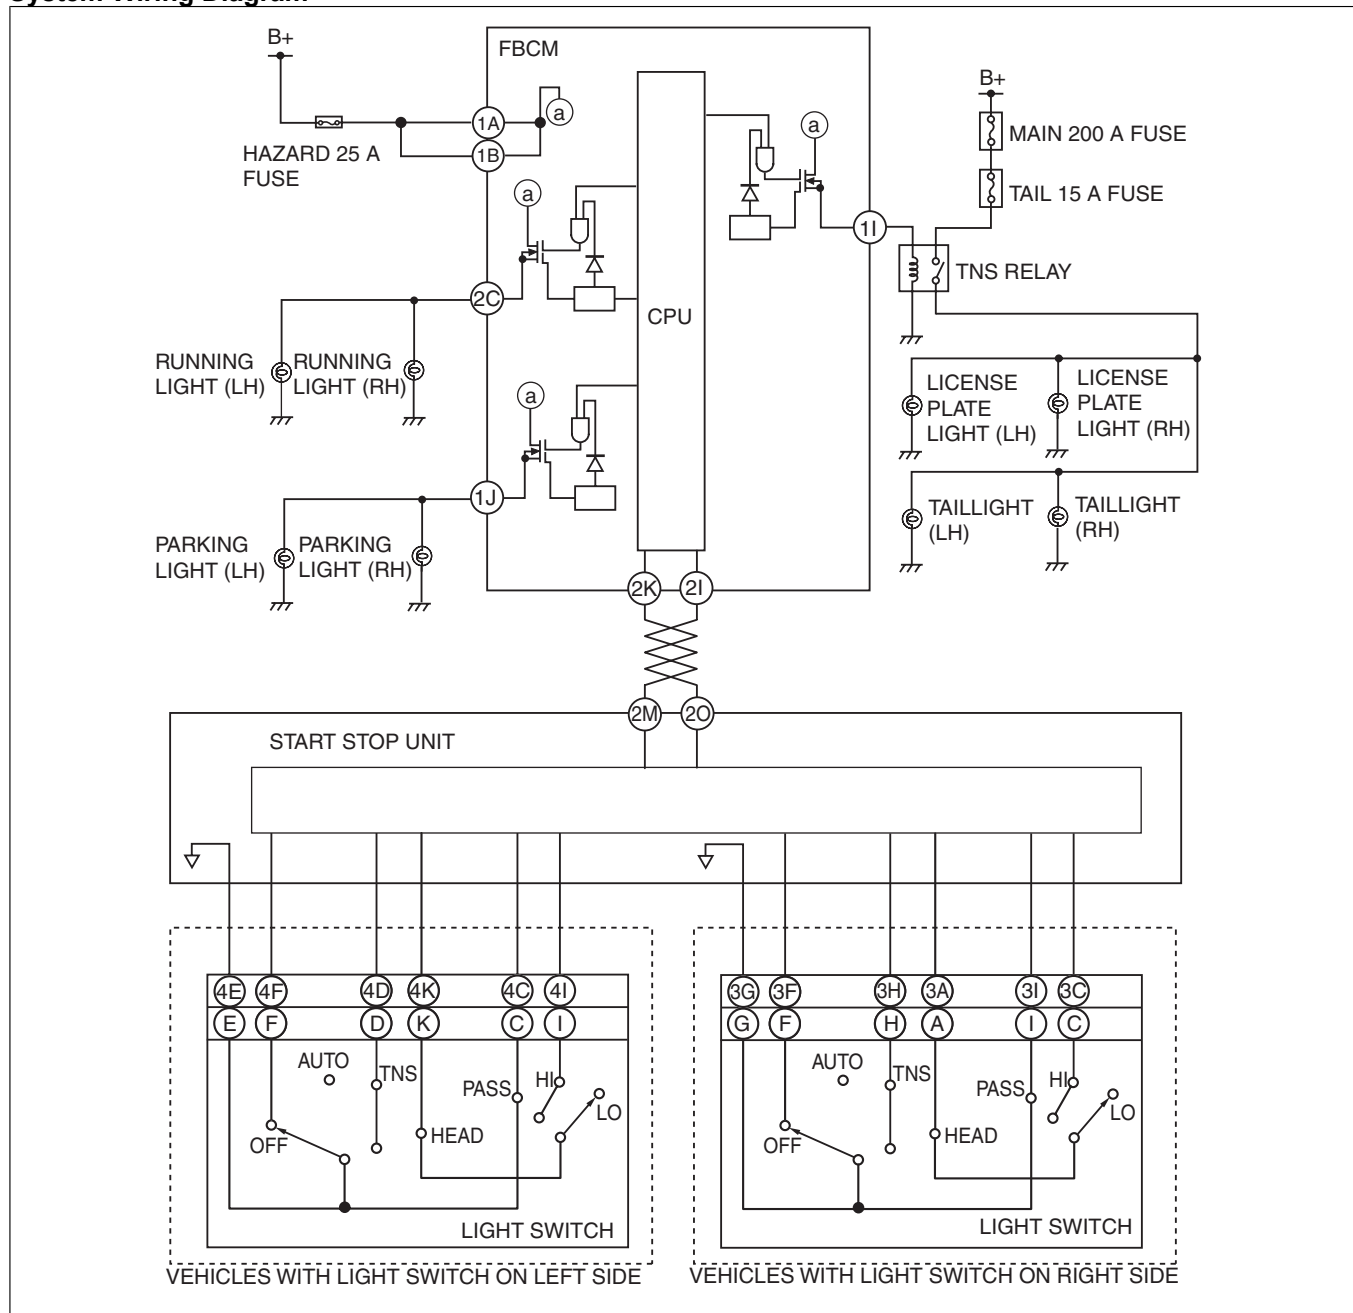

ac5wzn00001397

Operation

- The front body control module (FBCM) turns on the running light mode when the following conditions are met, and turns on the running lights and exterior lights.

Operation condition

ENGINE SWITCH	LIGHT SWITCH		DIMMER SWITCH	RUNNING LIGHT BULB	EXTERIOR LIGHT	ILLUMINATION LIGHT	RUNNING LIGHT MODE
	TNS	HEAD					
OFF	OFF	OFF	LO	OFF	OFF	OFF	OFF
			PASS	ON	OFF	OFF	
			HI	OFF	OFF	OFF	
	ON	OFF	LO	OFF	ON	ON	
			PASS	ON	ON	ON	
			HI	OFF	ON	ON	
		ON	LO	ON	ON	ON	
			PASS	ON	ON	ON	
			HI	ON	ON	ON	
ON	OFF	OFF	LO	ON	ON	OFF	ON
			PASS	ON	ON	OFF	
			HI	ON	ON	OFF	
	ON	OFF	LO	OFF	ON	ON	OFF
			PASS	ON	ON	ON	
			HI	OFF	ON	ON	
		ON	LO	ON	ON	ON	
			PASS	ON	ON	ON	
			HI	ON	ON	ON	