


## ASSIST HANDLE REMOVAL/INSTALLATION

id091700801800


### Removal

1. Insert a tape-wrapped flathead screwdriver into the service hole and remove the assist handle covers.

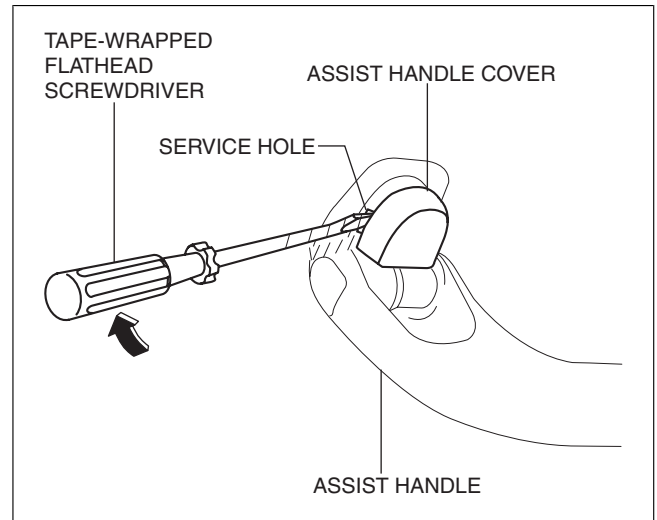

ac5wzw00001669

2. Remove the assist handle in the direction of the arrow (1) and (2), while detach clips.

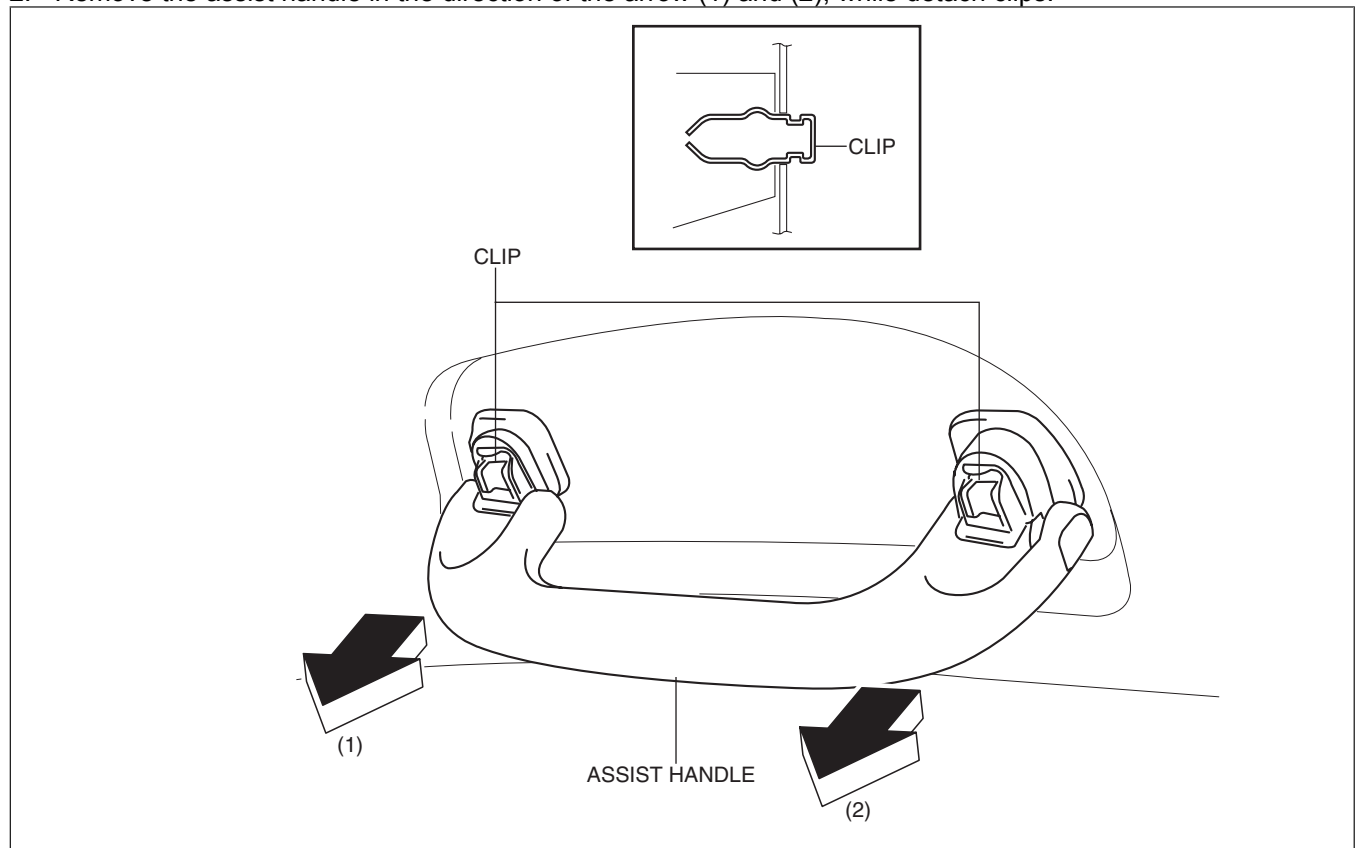


ac5wzw00001670

### Note

- Remove the assist handle by shaking it up and down.


### Installation

1. Push the assist handle in the direction of the arrow shown in the figure.

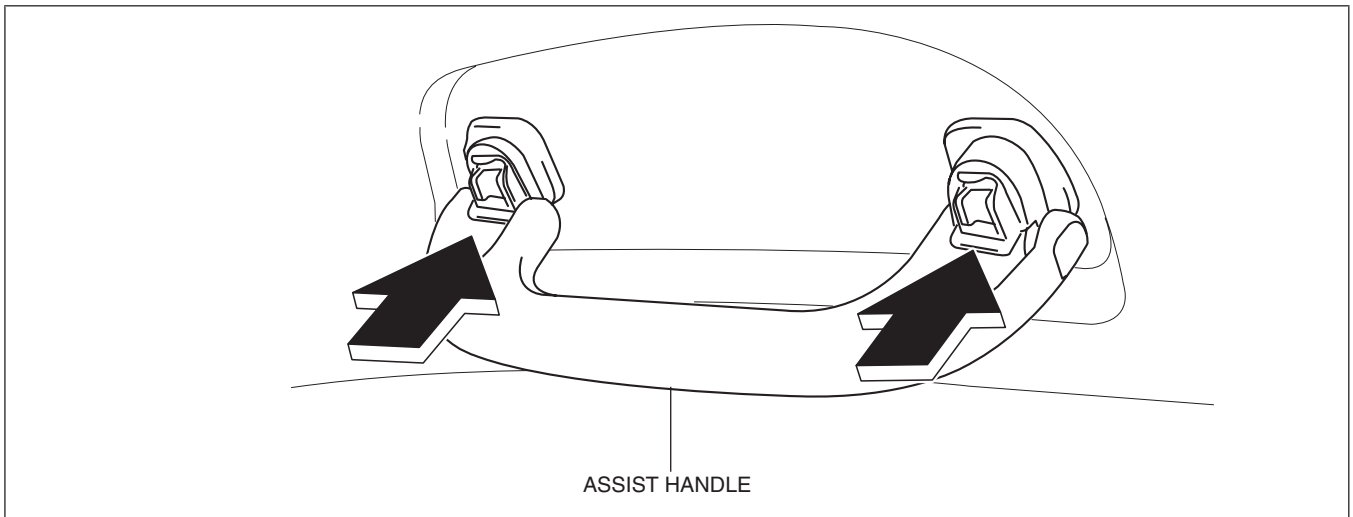

ac5wzw00001671

2. Push the assist handle cover assembled to install the assist handle.

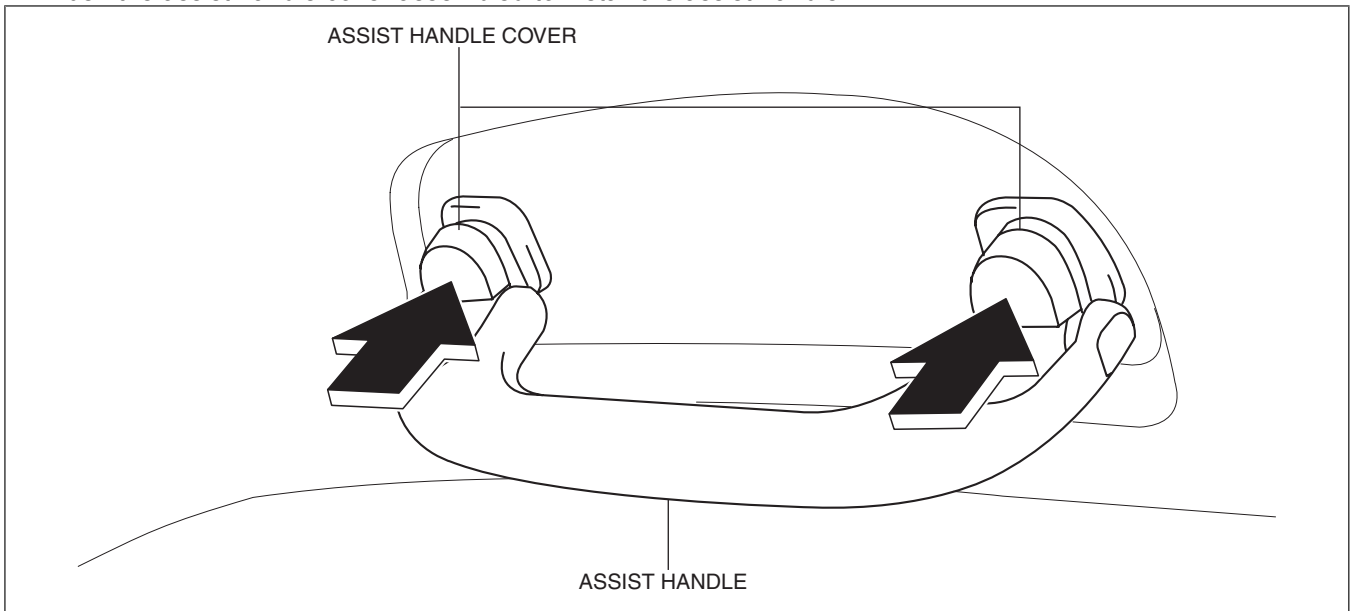

ac5wzw00001672