

ENGINE OIL DATA RESET [SKYACTIV-D 2.2]

id0140z7444700

Using the M-MDS

1. Connect the M-MDS to the DLC-2.
2. After the vehicle is identified, select the following item from the initial screen of the M-MDS.
 - (1) Select the "Powertrain".
3. Then, select the items from the screen menu in the following order.
 - (1) Select the "Data Reset".
 - (2) Select the "Engine oil".
4. Perform the procedure according to the directions on the screen.

Without Using the M-MDS


Note

- DTC P1905:00 may be detected by grounding the test terminal to the body. In this case, DTC P1905:00 is automatically erased by disconnecting the test terminal ground.

1. Switch the ignition ON (engine off).
2. Short the connection between body ground and test terminal using a jumper wire.
3. Repeatedly depress and release the accelerator pedal five times **within 5 s**.

Note

- If the engine oil data reset is completed correctly, the glow indicator light flashes five times.
4. Verify that the glow indicator light flashes five times.
 - If flashing of the glow indicator light cannot be verified, repeat the procedure from Step 1.
 5. Detach the jumper wire from the test terminal.
 6. Switch the ignition off.

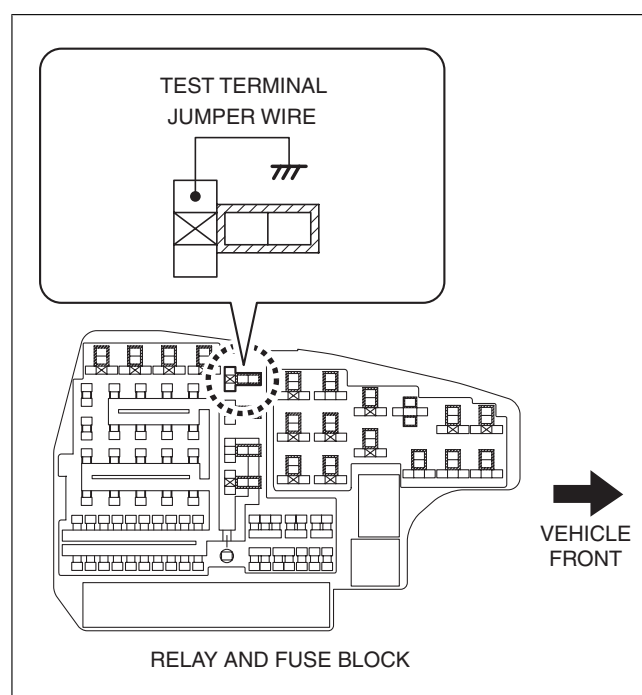

ac5wzw00006493