


## TRANSFER OIL SEAL REPLACEMENT [FW6AX-EL, GW6AX-EL]

id0316g6800400


### Transfer oil seal (LH)

1. Drain the transfer oil. (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)
2. Remove the transfer from the vehicle. (See TRANSFER REMOVAL/INSTALLATION [FW6AX-EL].) (See TRANSFER REMOVAL/INSTALLATION [GW6AX-EL].)
3. Insert a tape-wrapped flathead screwdriver into the lip area of the oil seal (LH) as shown in the figure and remove the oil seal (LH).

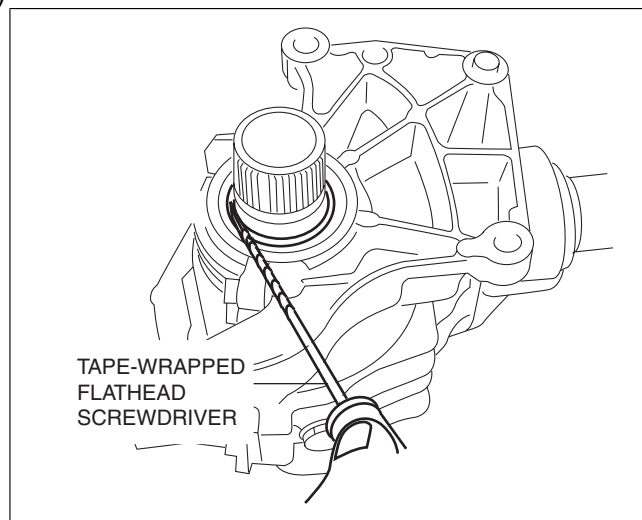

ac5uuw00000098

4. Using the **SST** and a hammer, tap the new seal into place.

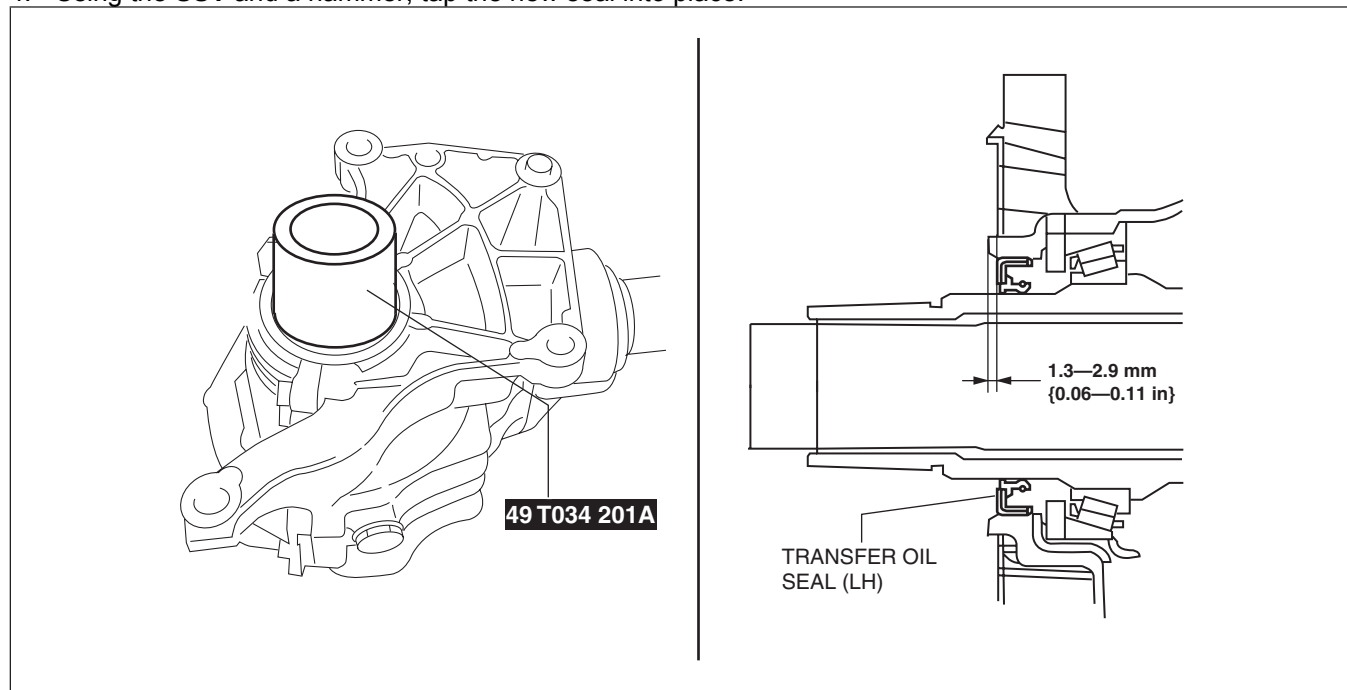


ac5wzw00002333

5. Apply the lip of the oil seal with transfer oil.
6. Install the transfer to the vehicle. (See TRANSFER REMOVAL/INSTALLATION [FW6AX-EL].) (See TRANSFER REMOVAL/INSTALLATION [GW6AX-EL].)
7. Add the specified amount and type of oil. (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)

### Transfer oil seal (RH) No.1


1. Remove the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)

2. Insert a flathead screwdriver into the notch of the transfer and remove the oil seal (RH) No.1.

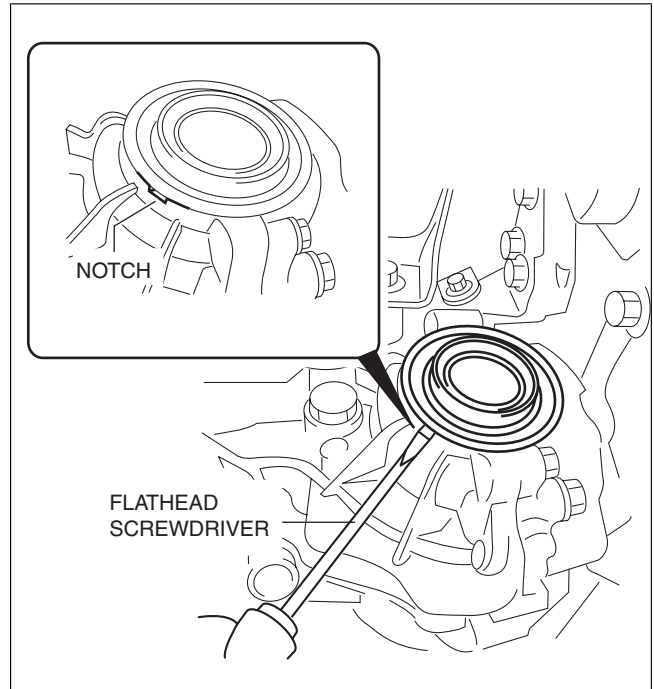

ac5uuw00000100

3. Using the **SST** and a hammer, tap the new seal into place.
4. Apply the lip of the oil seal with transfer oil.
5. Install the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)

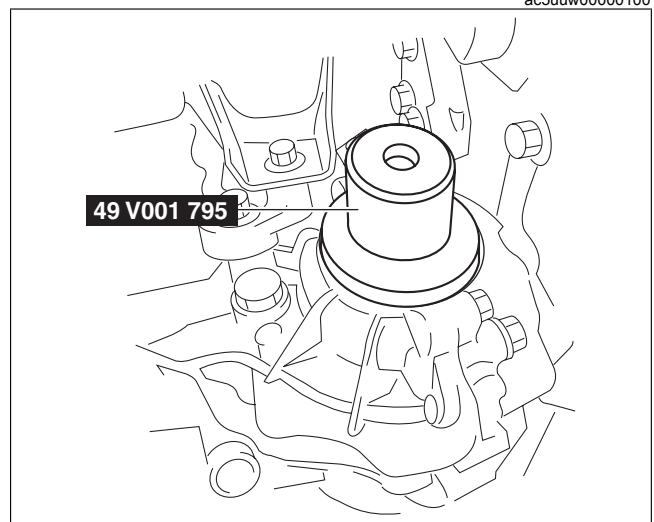


ac5wzw00002334

### Transfer oil seal (RH) No.2


1. Drain the transfer oil. (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)
2. Remove the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
3. Remove the transfer oil seal (RH) No.1. (See Transfer oil seal (RH) No.1.)

4. Insert a tape-wrapped flathead screwdriver into the lip area of the oil seal (RH) No.2 as shown in the figure and remove the oil seal (RH) No.2.

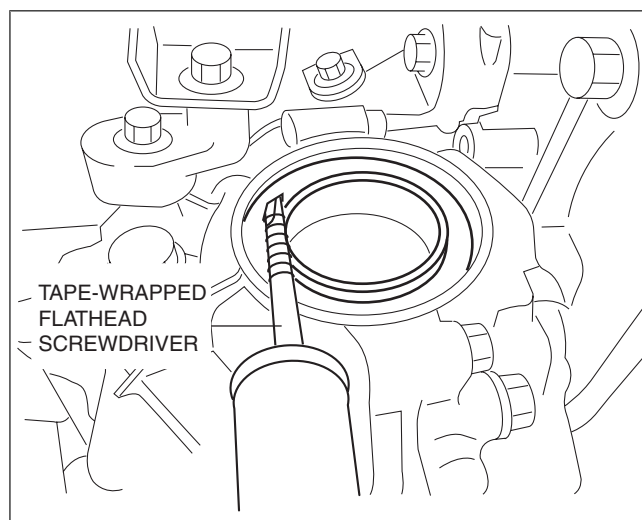

ac5wzw00002336

5. Using the **SST** and a hammer, tap the new seal into place.

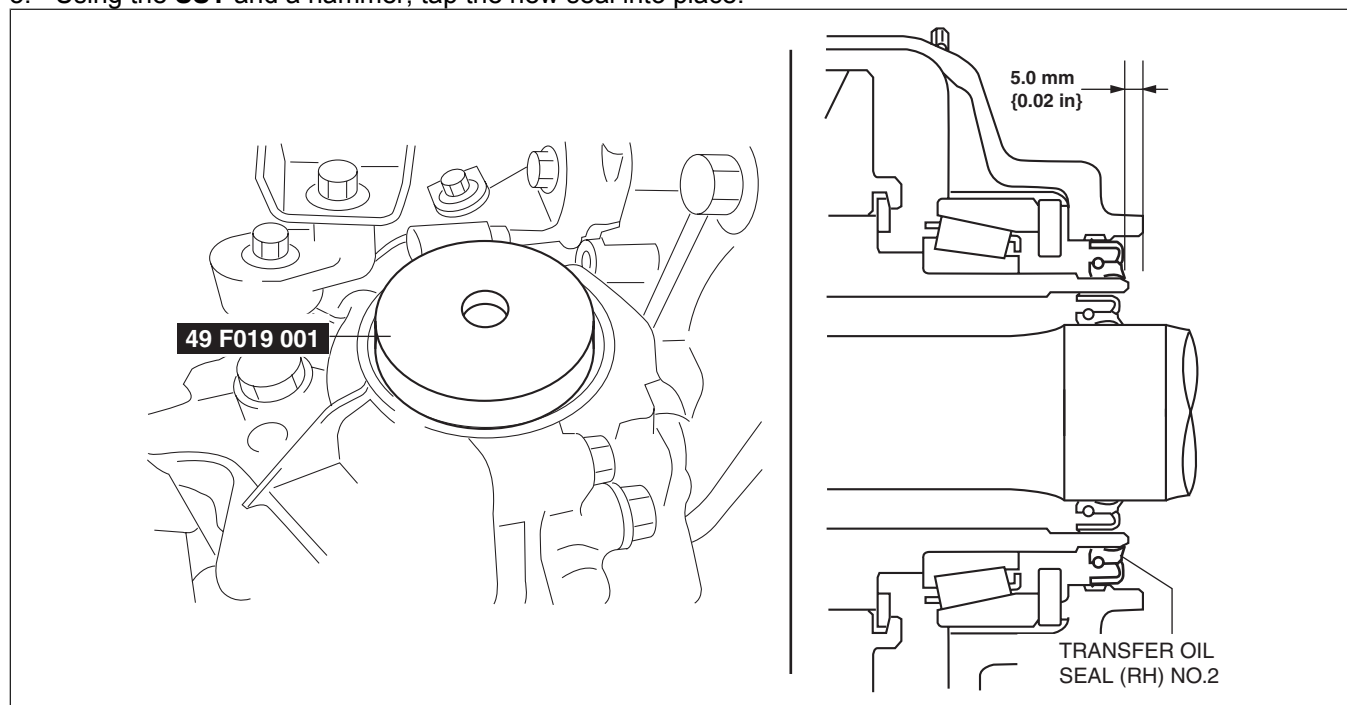


ac5wzw00002739

6. Apply the lip of the oil seal with transfer oil.
7. Install the transfer oil seal (RH) No.1 (See Transfer oil seal (RH) No.1.)
8. Install the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
9. Add the specified amount and type of oil. (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)

### Transfer oil seal (RH) No.3


1. Drain the transfer oil. (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)
2. Remove the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
3. Remove the transfer oil seal (RH) No.1 (See Transfer oil seal (RH) No.1.)

4. Remove the oil seals using a tape-wrapped flathead screwdriver.

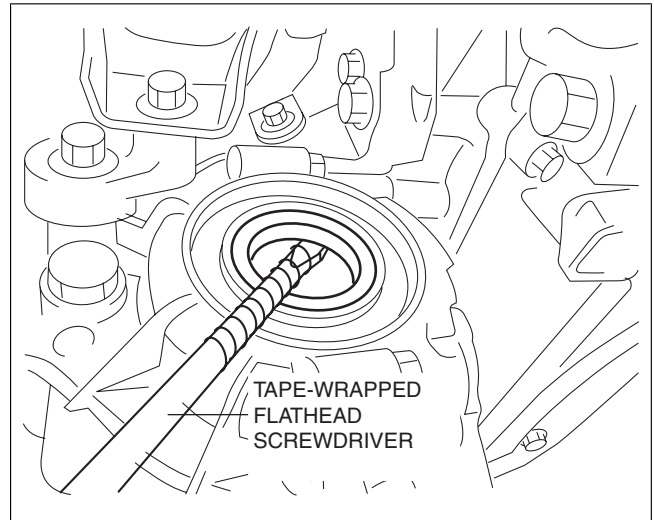

ac5uuw00000102

5. Using the **SST** and a hammer, tap the new seal into place.

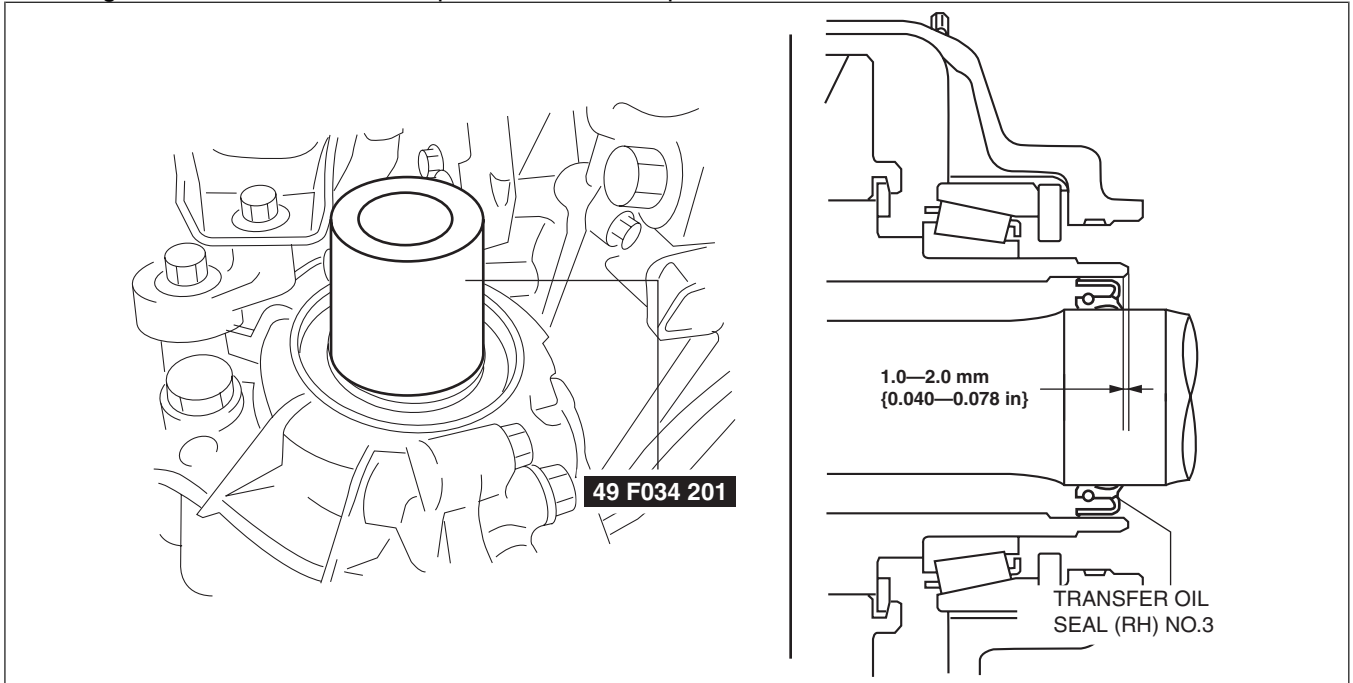

ac5wzw00002335

6. Apply the lip of the oil seal with transfer oil.
7. Install the transfer oil seal (RH) No.1 (See Transfer oil seal (RH) No.1.)
8. Install the front drive shaft (RH). (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
9. Add the specified amount and type of oil. (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)