


PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION

id081000804100

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the following parts:
 - (1) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (5) Lower panel (passenger-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
4. Remove the PAD switch in the direction of the arrow (2) shown in the figure while pressing the tabs in the direction of the arrow (1).
5. Install in the reverse order of removal.
6. Switch the ignition ON (engine off or on).
7. Verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.
 - If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.

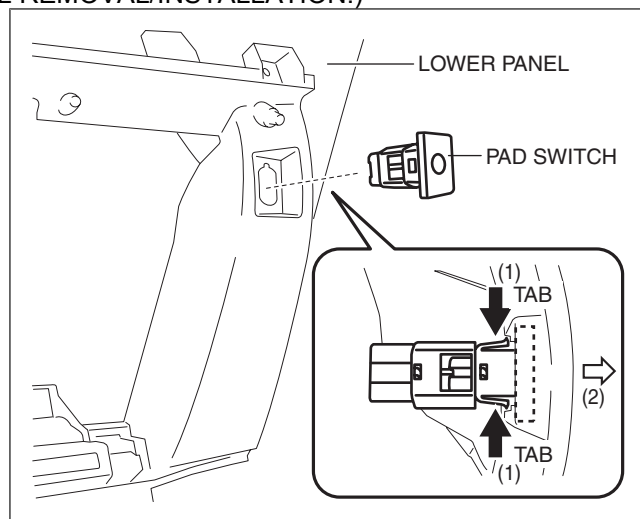

ac5wzw00002059