


REDUCTION PLANETARY GEAR DISASSEMBLY

id051700661300

Structural View

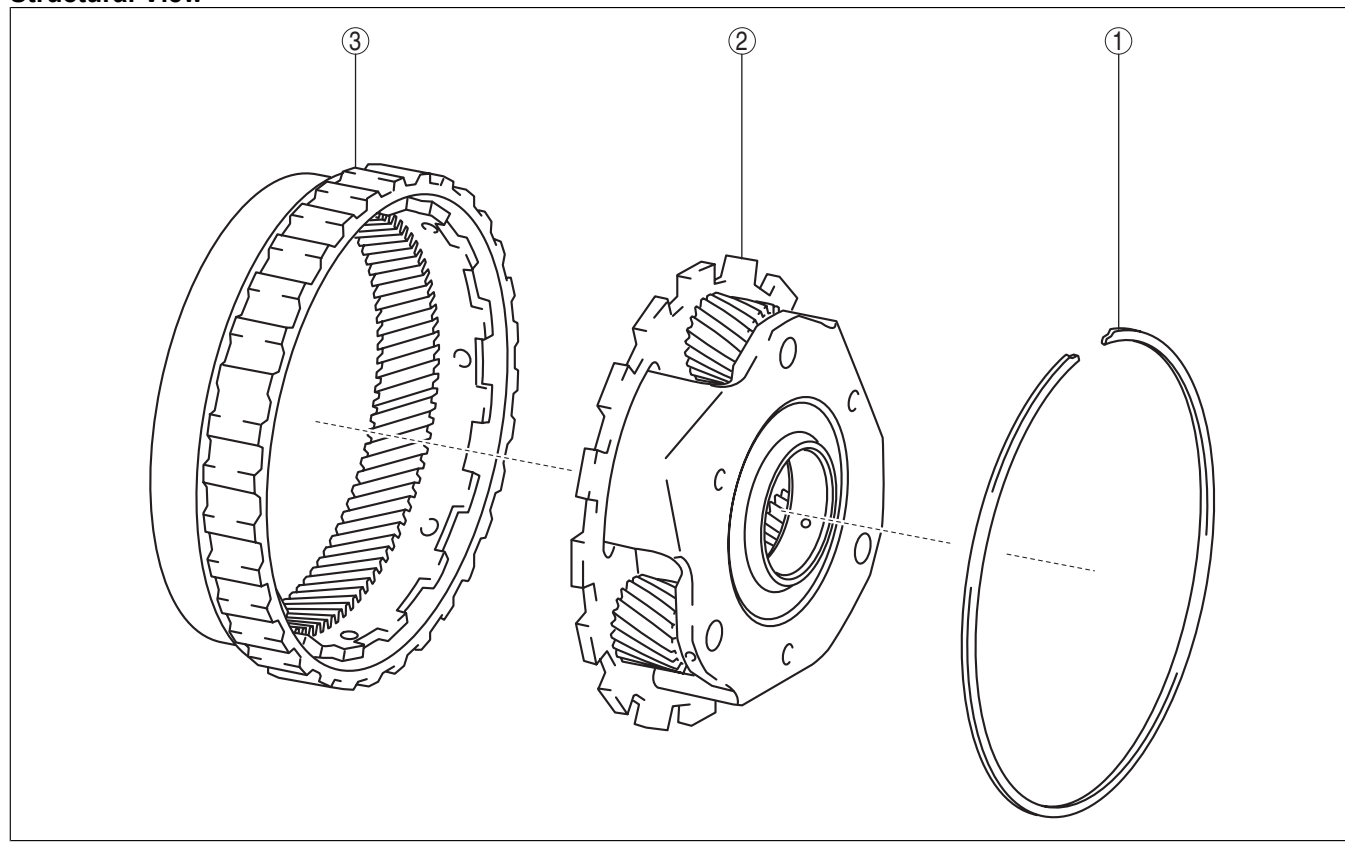

azzjjw00001496

1	Snap ring
2	Reduction planetary carrier

3	Rear internal gear
---	--------------------

Disassembly Procedure


1. Perform the following inspection:

Caution

- If there is no malfunction based on the results of the inspection, it is not necessary to disassemble the reduction planetary gear.


- Visual inspection of parts (See VISUAL INSPECTION OF PARTS [FW6A-EL])(See VISUAL INSPECTION OF PARTS [FW6AX-EL])
- Reduction planetary gear inspection (See REDUCTION PLANETARY GEAR INSPECTION)
- If there is a malfunction, disassemble the reduction planetary gear and replace the malfunctioning part with a new part.

2. Remove the snap ring.

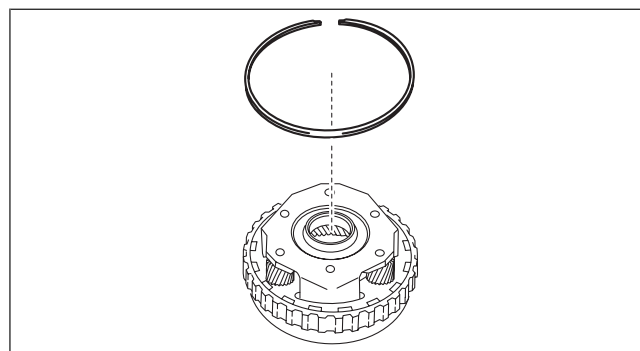

azzjjw00000872

-
3. Remove the reduction planetary carrier.
 4. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)

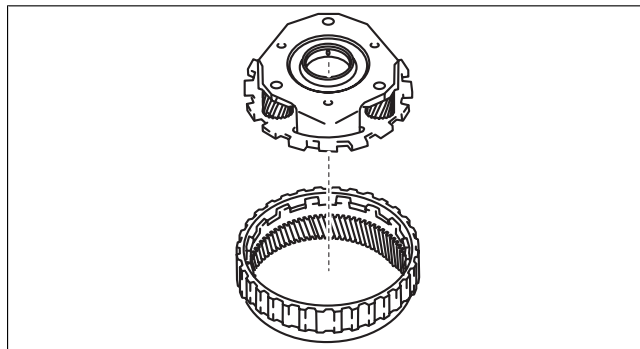

azzjw00000873