


## SHIFT CONTROL MODULE DISASSEMBLY

id051500170100

1. Disassemble the shift control module in the order shown in the figure.

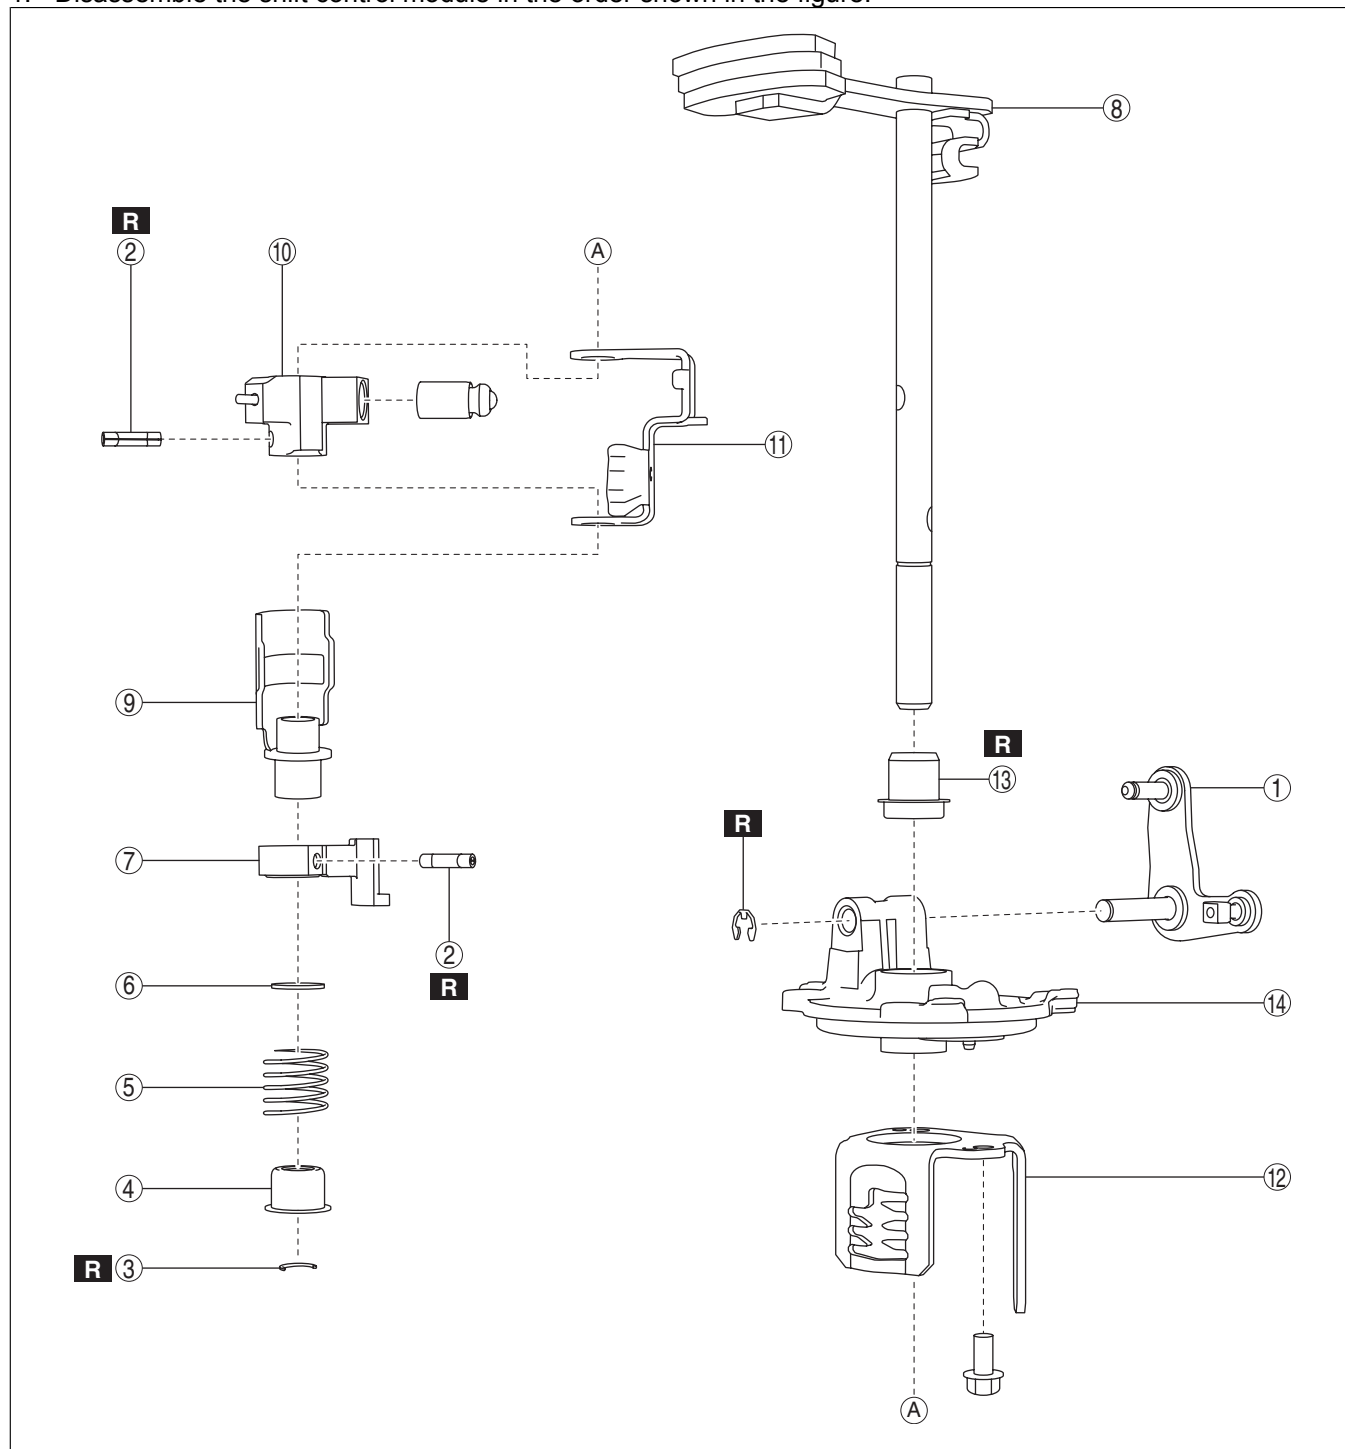


bc62zm00000014

1	Select lever
2	Pin (See Pin Removal Note.)
3	Clip (See Clip Removal Note.)
4	Spring seat
5	Spring
6	Washer
7	Switch pin

8	Shift lever
9	Interlock sleeve
10	Control lever component
11	Holder plate
12	Guide plate
13	Oil seal
14	Control case

### Pin Removal Note

1. Secure the shift control module in a vise.

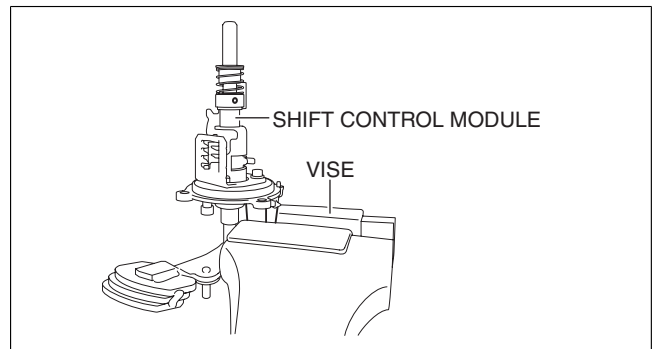


bc62zm00000015

2. Mark the switch pin and interlock sleeve.


#### Note

- The switch pin has a particular installation direction.

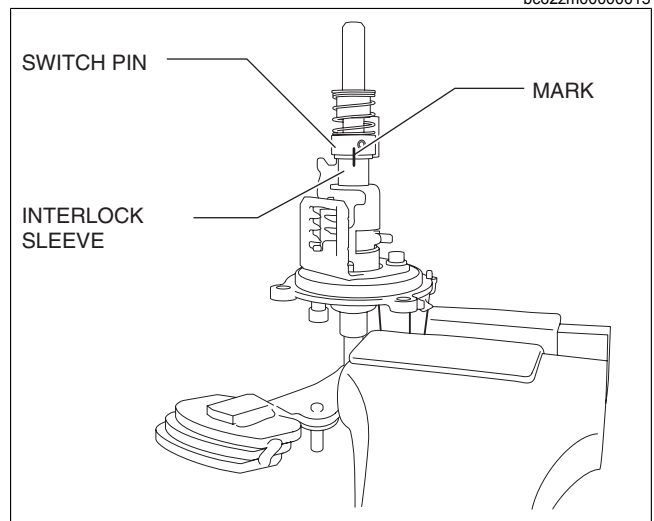


bc62zm00000016

3. Remove the pin from the switch pin using a punch.

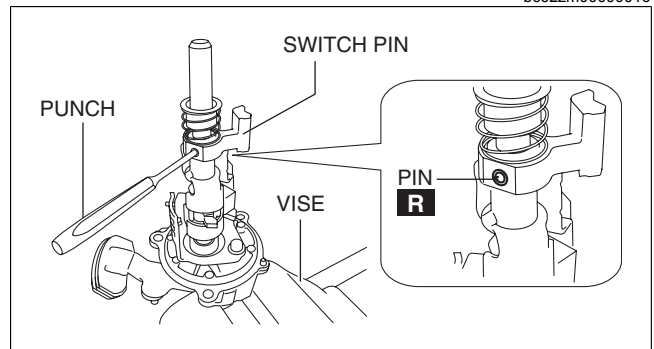


bc62zm00000017

4. Move the shift lever to set the guide pin to the 5GR position of the guide plate.

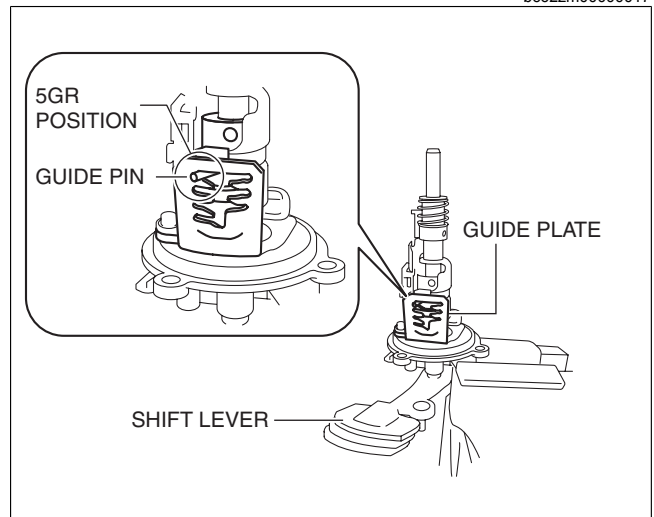

bc62zm00000018

5. Remove the pin from the control lever component using a punch.

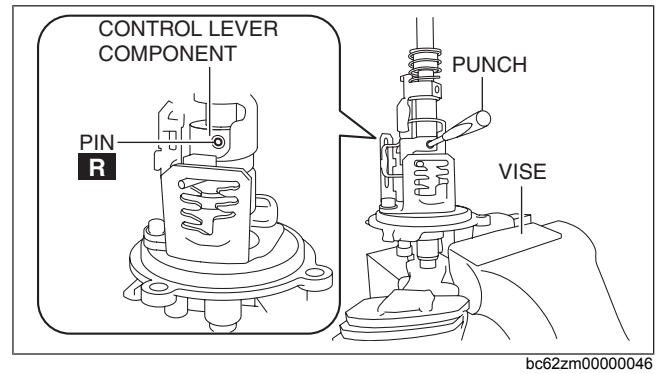

**Clip Removal Note**

1. Move the guide pin to the position shown in the figure for the guide plate.
2. Push down the spring seat by hand.
3. Detach the clip.

