

BLOW-BY-HEATER [SKYACTIV-D 2.2]


id0140z7258800

Purpose/Function

- Warms the inside of the ventilation pipe during extremely cold temperatures to prevent moisture in the blow-by gas from freezing.

Construction


- The blow-by heater is installed in the engine room.

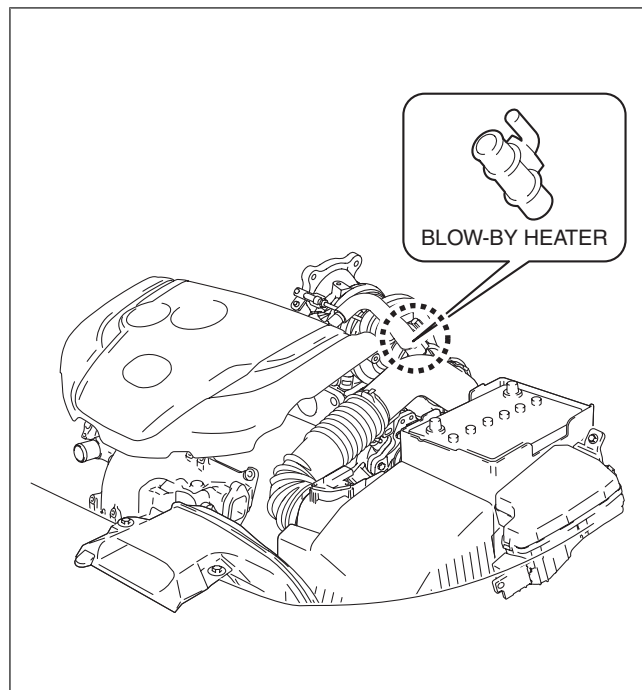

ac5wzn00002366

Operation

- When the battery voltage is supplied from the blow-by heater relay to the blow-by heater according to the signal from the PCM, it operates to warm the inside of the ventilation pipe.

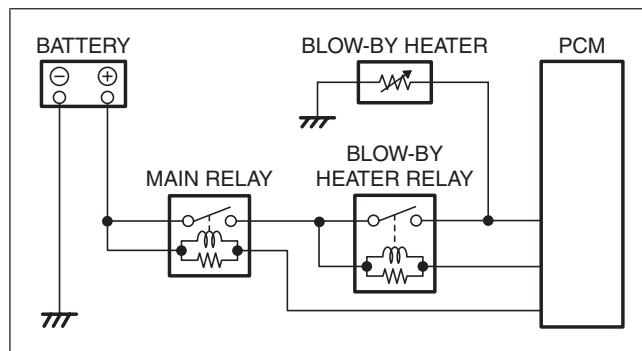

ac5wzn00002367

Fail-safe

- Function not equipped.