

GLOW PLUG [SKYACTIV-D 2.2]


id0113z7706200

Purpose, Function

- The glow plug raises the compression temperature by preheating the inside of the combustion chamber.


Construction

- The glow plugs are installed to the cylinder head.

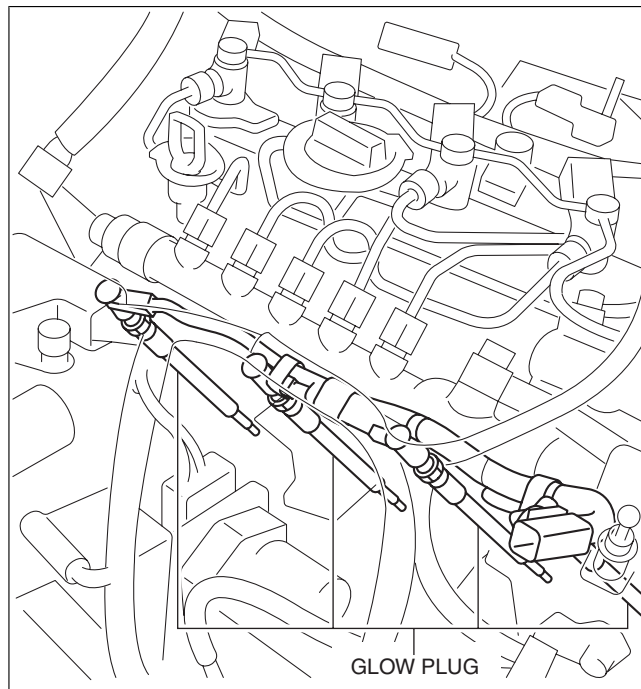

ac5wzn00002199

- Quick warming-type ceramic glow plugs have been adopted which reduce the time required to start the engine by quickly increasing the temperature.

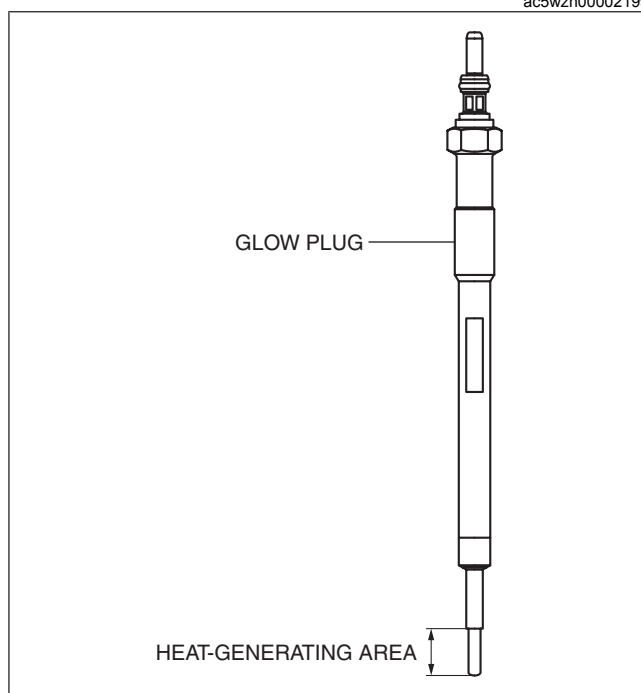

ac5wzn00002200

Operation

- The glow plugs generate heat by the power supplied from the glow control module.

