

Caution

- Vehicle specifications differ depending on the vehicle identification number (VIN).

- Type A VIN:

- JM0 KE***** 100001—

- JM6 KE***** 100001—

- JM8 KE***** 100001—

- JMZ KE***** 100001—


- Type B VIN:

- JM0 KE***** 200001—

- JM6 KE***** 200001—

- JM8 KE***** 200001—

- JMZ KE***** 200001—

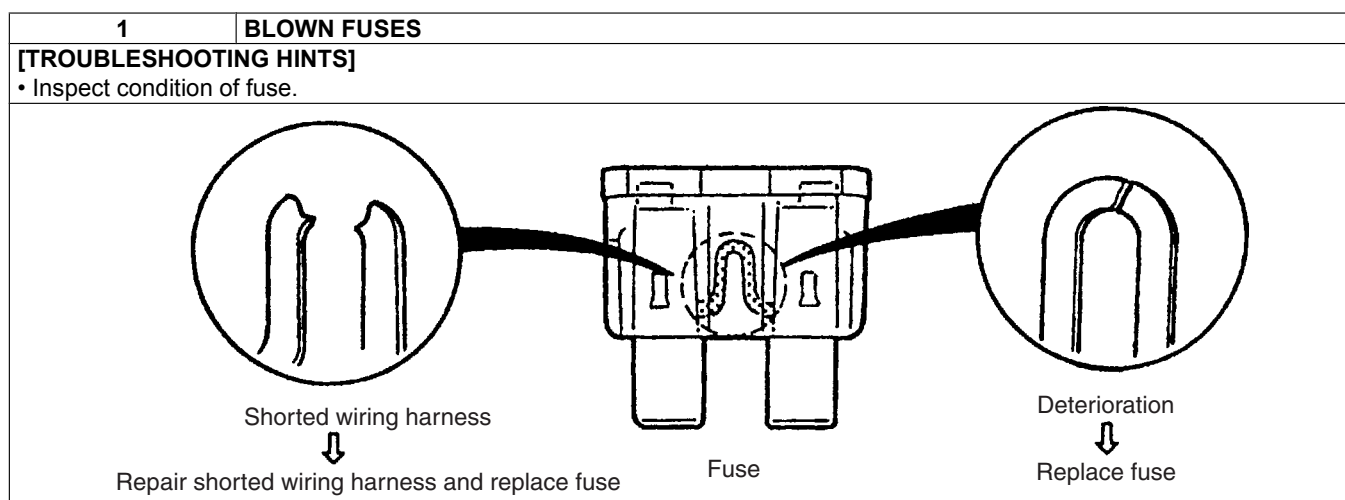

Damaged fuse	Related fuse, wiring harness
MAIN	<ul style="list-style-type: none"> FAN DE fuse ADD FAN DE fuse FUEL WARM fuse*1 IG2 fuse ENG.+B fuse ENG.MAIN fuse IG1 relay
FAN DE	<ul style="list-style-type: none"> Cooling fan relay No.1
ADD FAN DE	<ul style="list-style-type: none"> Cooling fan relay No.2
FUEL WARM*1	<ul style="list-style-type: none"> Fuel warmer
STARTER	<ul style="list-style-type: none"> Generator Starter
GLOW	<ul style="list-style-type: none"> DCDC DE fuse Glow control module
DCDC DE	<ul style="list-style-type: none"> DC-DC converter
AUDIO2	<ul style="list-style-type: none"> Ignition relay (ACC_STAB)
METER2	<ul style="list-style-type: none"> Ignition relay (IG1_STAB)
C/U IG1	<ul style="list-style-type: none"> DC-DC converter Ignition relay (IG1_STAB)
IG2	<ul style="list-style-type: none"> ACC relay Starter relay
ENG.+B	<ul style="list-style-type: none"> Current sensor PCM DLC-2
ENG.MAIN	<ul style="list-style-type: none"> Main relay
ENGINE.IG1	<ul style="list-style-type: none"> PCM

Damaged fuse	Related fuse, wiring harness
ENGINE1	<ul style="list-style-type: none"> • Glow control module • MAF sensor/IAT sensor No.1 • OCV • Engine oil solenoid valve • A/F sensor
ENGINE2	<ul style="list-style-type: none"> • Wastegate solenoid valve • Compressor bypass solenoid valve • Regulating solenoid valve • PCM
ENGINE3	<ul style="list-style-type: none"> • Blow-by heater relay • Cooling fan relay No.1 • Cooling fan relay No.2
GLOW SIG ^{*2}	<ul style="list-style-type: none"> • Ground

*1 : With fuel warmer

*2 : Type B VIN