


HVAC CONTROL SYSTEM LOCATION INDEX [MANUAL AIR CONDITIONER]

id0740a2803600

L.H.D.

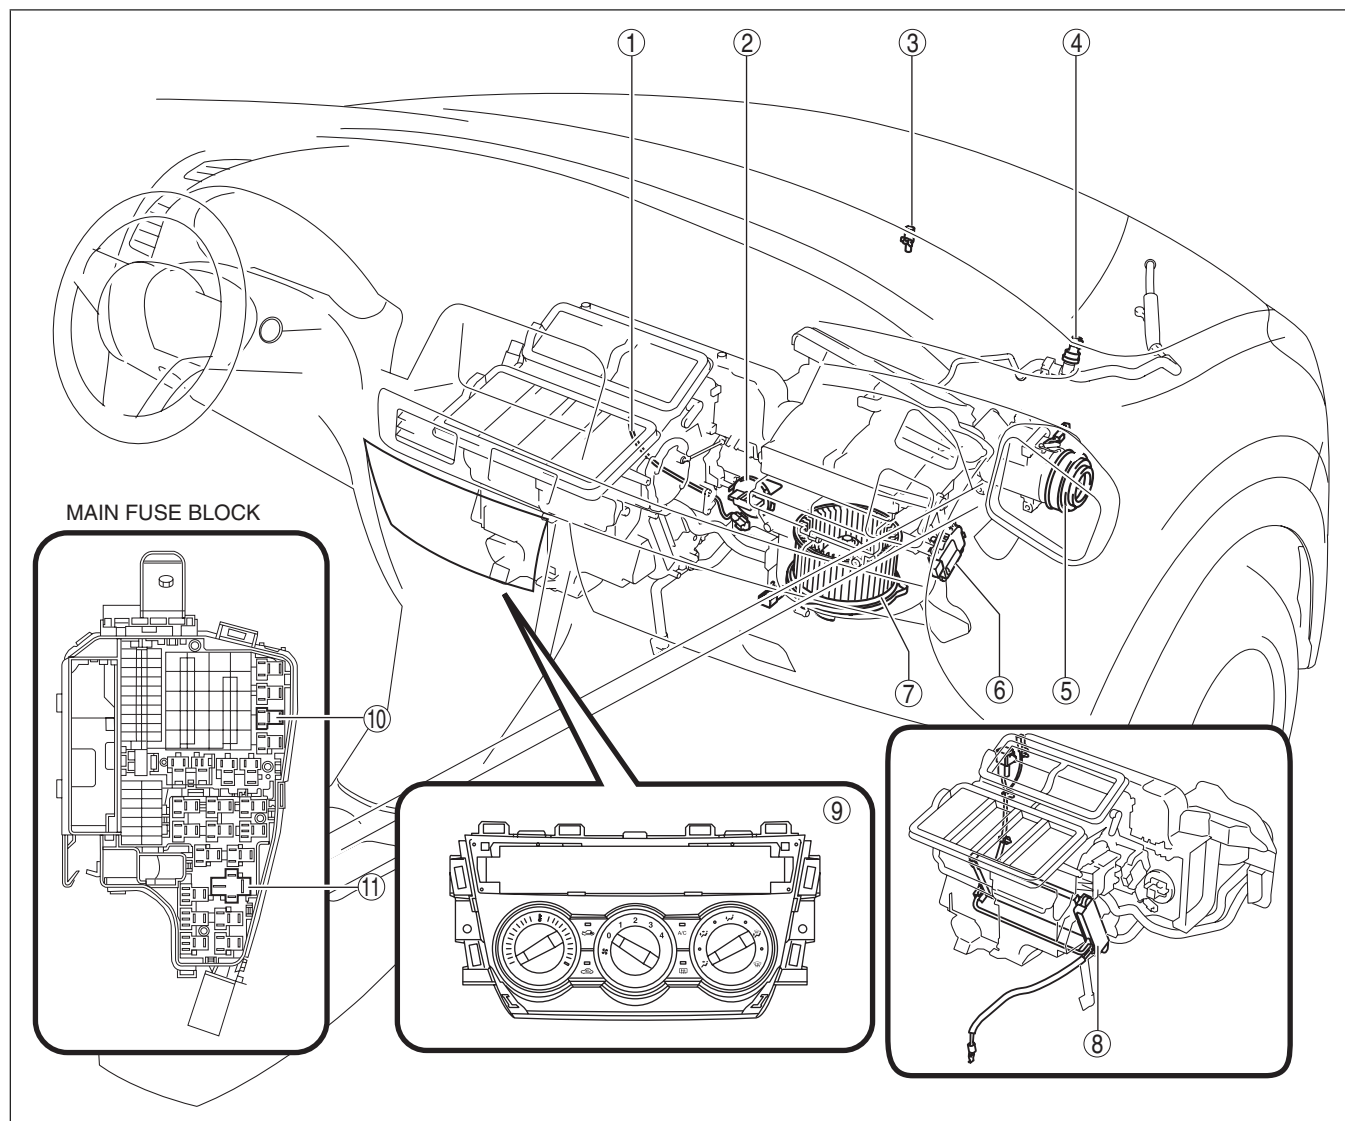


ac5wzw00001921

1	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)	4	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
2	Resistor (See RESISTOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See RESISTOR INSPECTION [MANUAL AIR CONDITIONER].)	5	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ASSEMBLY [MANUAL AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [MANUAL AIR CONDITIONER].) (See MAGNETIC CLUTCH INSPECTION [MANUAL AIR CONDITIONER].)
3	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)	6	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
		7	Blower motor (See BLOWER MOTOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See BLOWER MOTOR INSPECTION [MANUAL AIR CONDITIONER].)

8	PTC heater (with PTC heater) (See PTC (POSITIVE TEMPERATURE COEFFICIENT) HEATER REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See PTC (POSITIVE TEMPERATURE COEFFICIENT) HEATER INSPECTION [MANUAL AIR CONDITIONER].)
9	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See CLIMATE CONTROL UNIT DISASSEMBLY/ ASSEMBLY [MANUAL AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [MANUAL AIR CONDITIONER].) (See FAN SWITCH INSPECTION [MANUAL AIR CONDITIONER].)

10	A/C relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
11	Blower relay (See RELAY LOCATION.) (See RELAY INSPECTION.)

R.H.D.

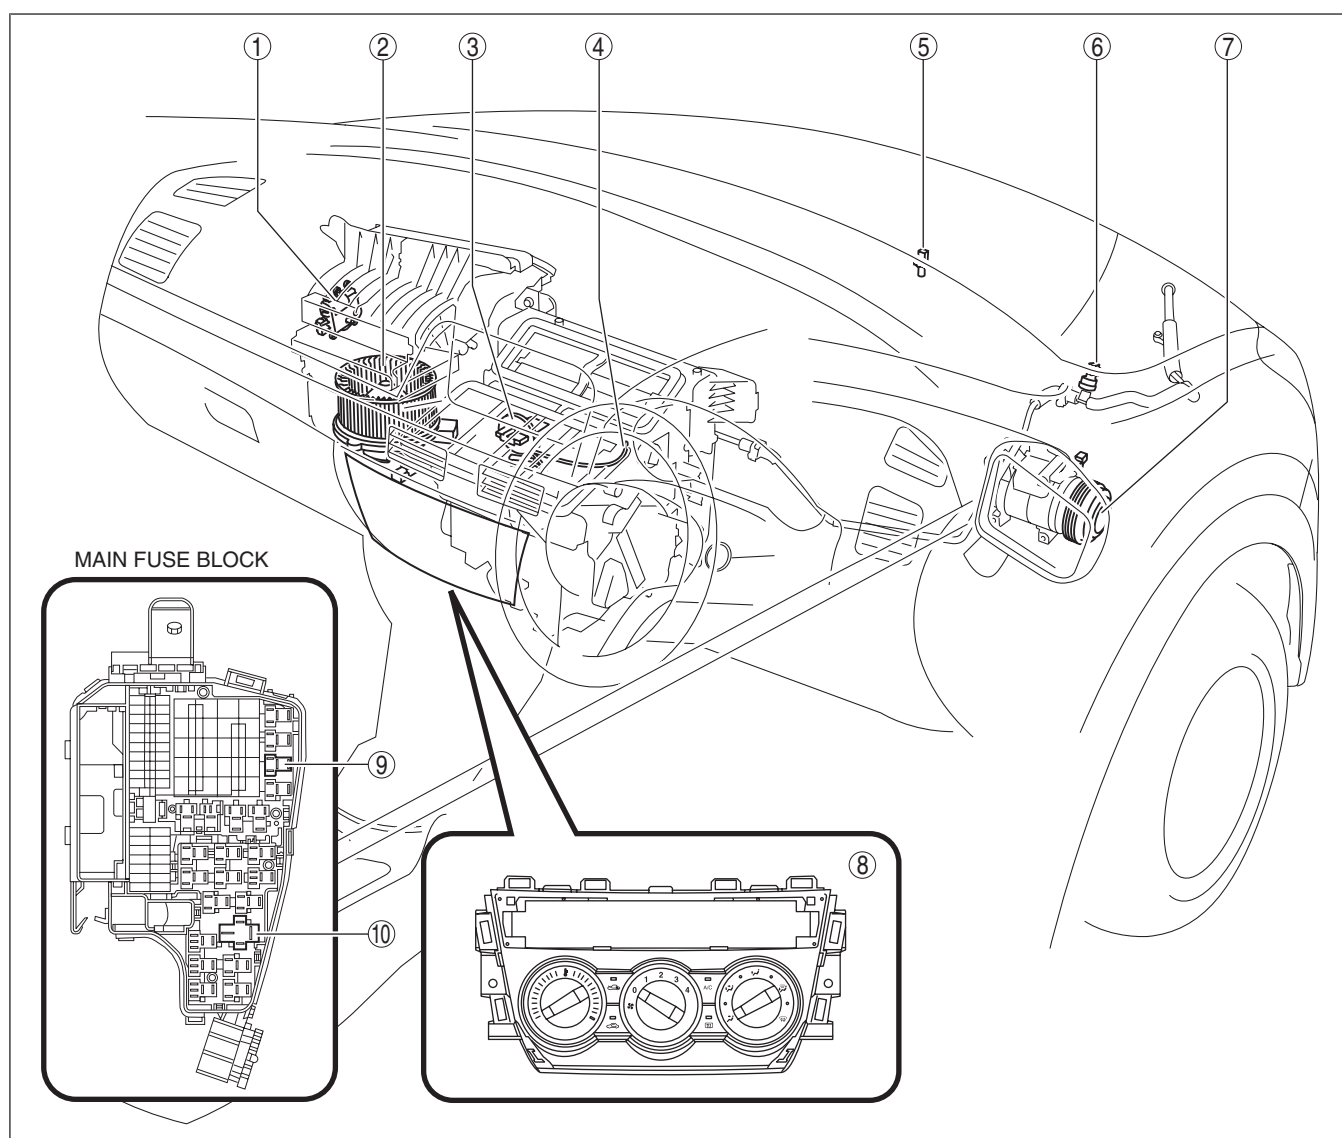

ac5wzw00001922

1	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
---	--

2	Blower motor (See BLOWER MOTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See BLOWER MOTOR INSPECTION [MANUAL AIR CONDITIONER].)
---	---

3	Resistor (See RESISTOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See RESISTOR INSPECTION [MANUAL AIR CONDITIONER].)
4	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
5	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
6	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)

7	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [MANUAL AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [MANUAL AIR CONDITIONER].) (See MAGNETIC CLUTCH INSPECTION [MANUAL AIR CONDITIONER].)
8	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See CLIMATE CONTROL UNIT DISASSEMBLY/ ASSEMBLY [MANUAL AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [MANUAL AIR CONDITIONER].) (See FAN SWITCH INSPECTION [MANUAL AIR CONDITIONER].)
9	A/C relay (See RELAY LOCATION.) (See RELAY INSPECTION.)
10	Blower relay (See RELAY LOCATION.) (See RELAY INSPECTION.)