

DOWN SWITCH [FW6A-EL, FW6AX-EL]


id0517h2360500

Purpose/Function

- The down switch detects the shift down operation of the selector lever.
- The down switch signal is sent to the TCM via CAN and is used for manual shift control and engine-transaxle integration control.

Construction


- The down switch is installed to the selector lever.
- The down switch is an on/off type switch.

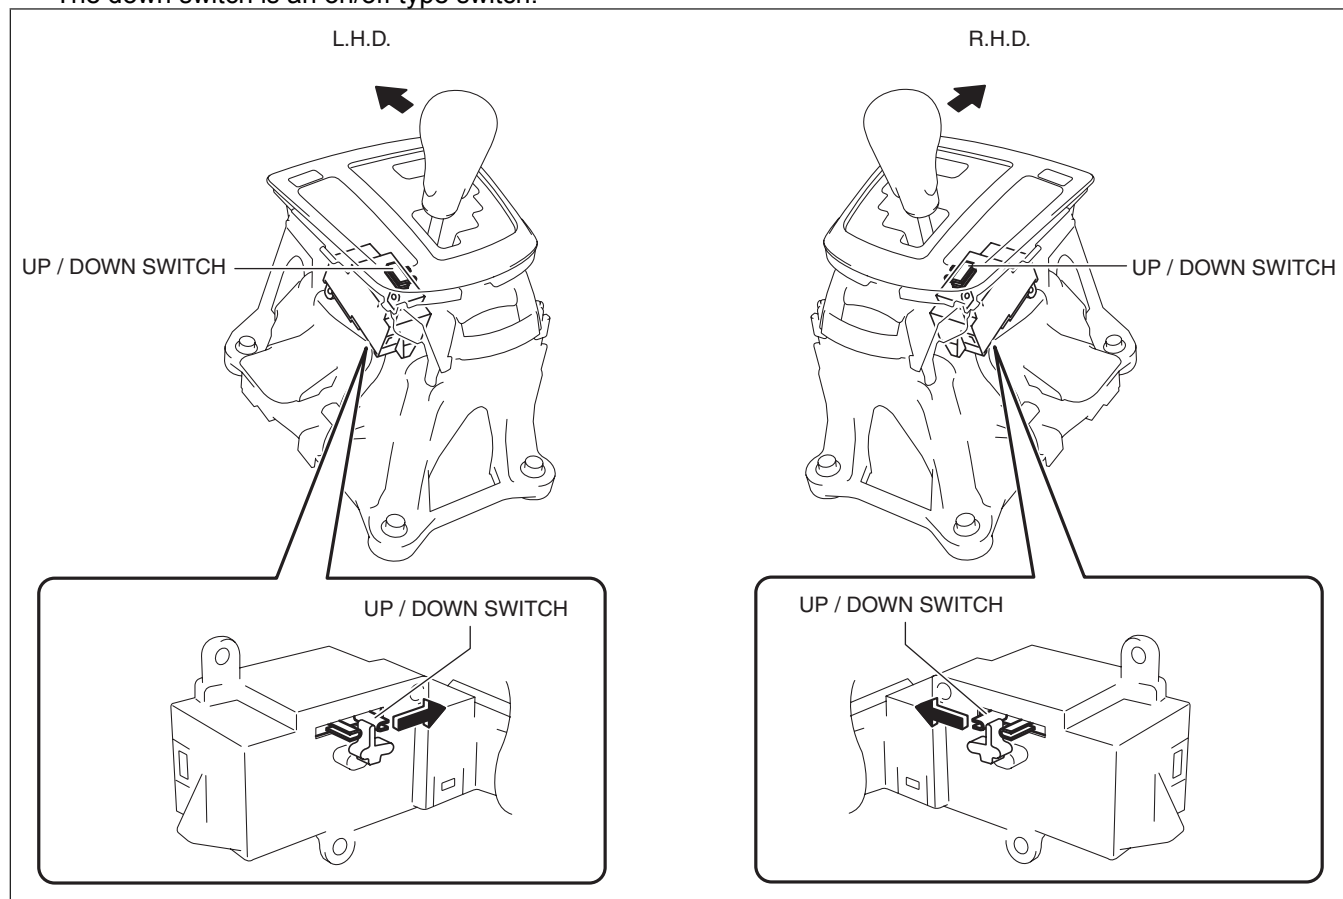

ac5wzn00000919

Operation

- When the selector lever is in the shift down position (-), the down switch contact point closes.
- Based on the opening and closing of the down switch contact point, the TCM detects that the shift down has been operated.

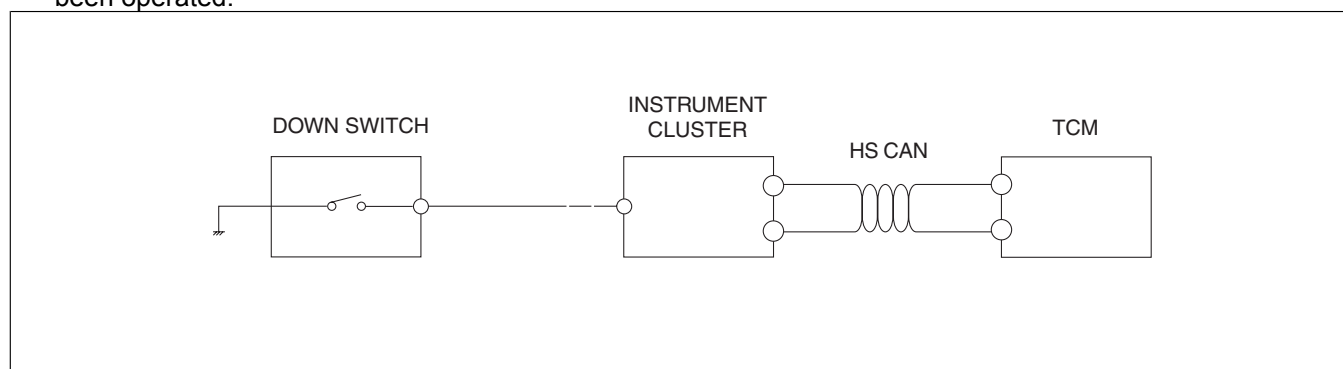

ac5uun00000564