


REAR BRAKE (DISC) REMOVAL/INSTALLATION

id041100800500

1. Loosen the adjusting nut. (See PARKING BRAKE LEVER ADJUSTMENT.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)
5. Pump the brake pedal a few times and inspect the following:
 - The disc pad projection is securely installed to the piston groove
 - Parking brake lever stroke
 - Brake drag

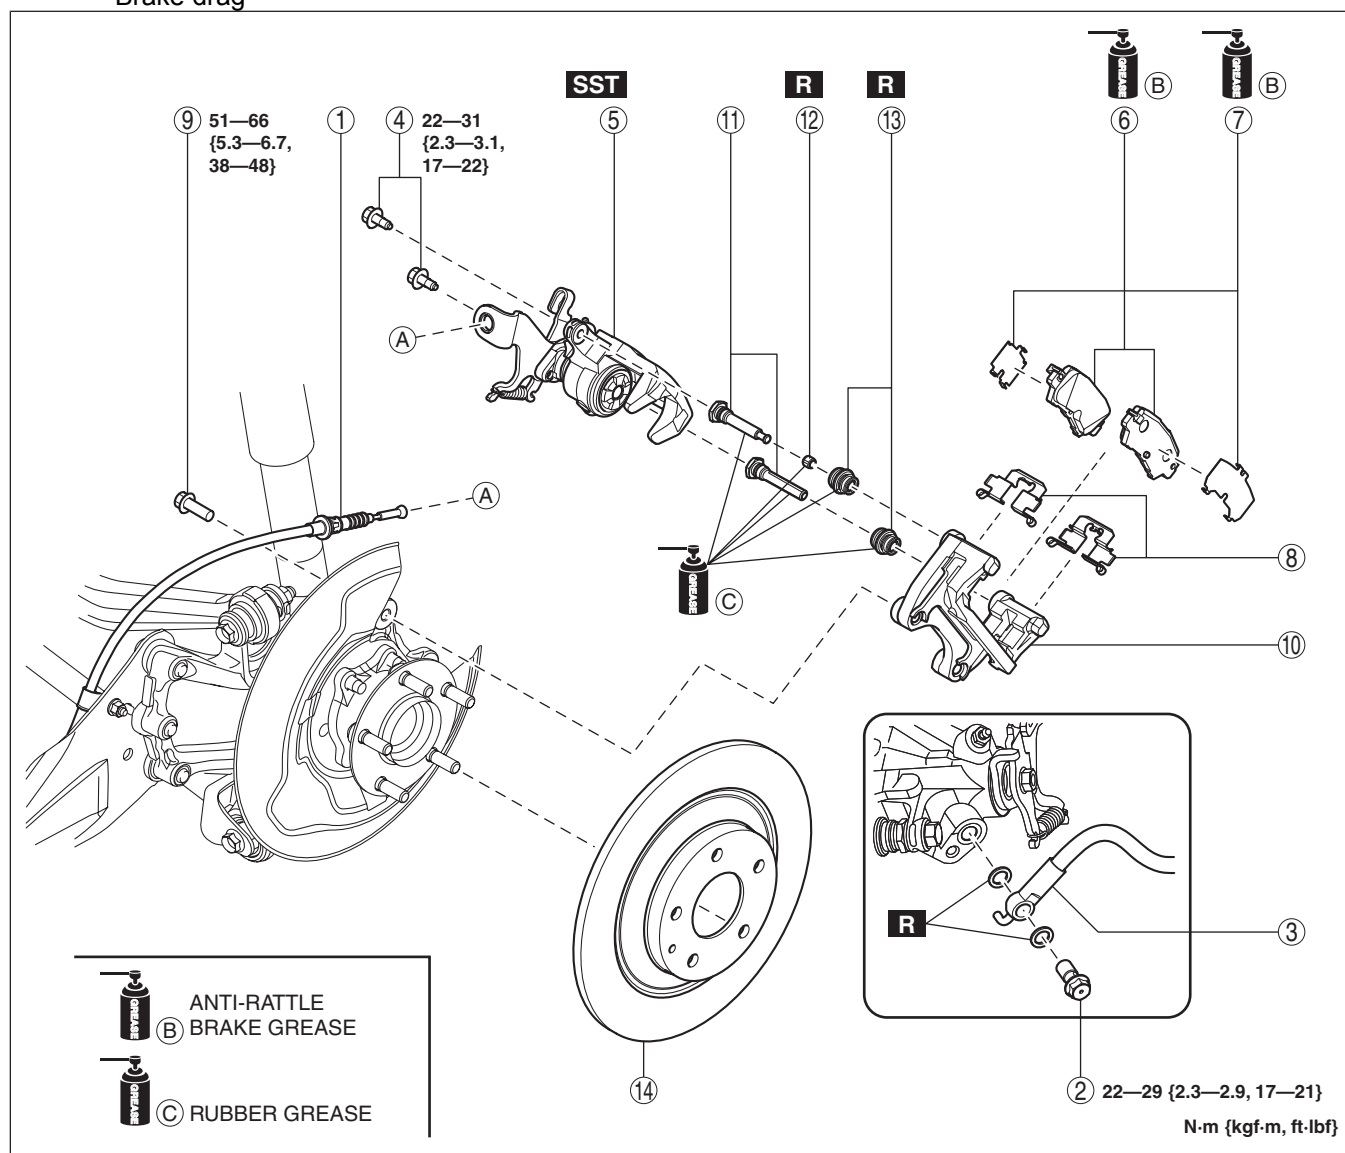

1	Rear parking brake cable (See Rear Parking Brake Cable Installation Note.)
2	Bolt
3	Brake hose
4	Bolt
5	Caliper (See Caliper Installation Note.)
6	Disc pad
7	Shim


8	Guide plate
9	Bolt
10	Mounting support
11	Slide pin
12	Bushing
13	Dust boot
14	Disc plate

Caliper Installation Note

1. Clean the exposed area of the piston.

ac5wzw00002452


2. Rotate the piston clockwise slowly using the SST and push the piston completely until the piston grooves are in the position shown in the figure.
3. Install the caliper.

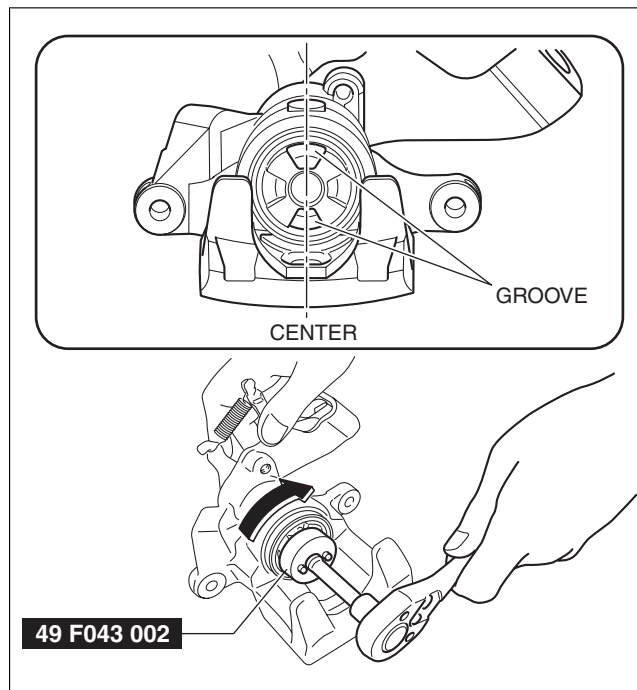

ac5wzw00000190

Rear Parking Brake Cable Installation Note

1. Install the rear parking brake cable to the rear caliper.
2. Verify that the outer end tabs of the rear parking brake cable is securely engaged with the bracket.

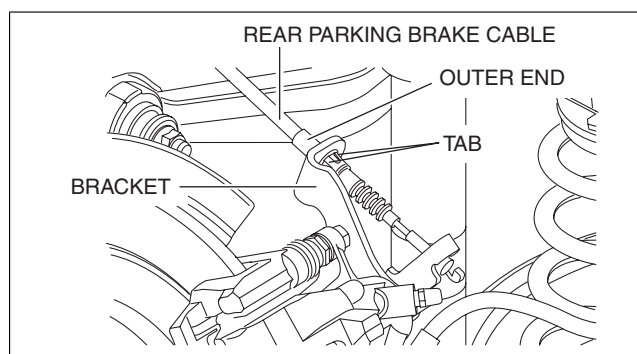

ac5wzw00000250