


## ROOF MOLDING REMOVAL

id091600447800

1. Insert a tape-wrapped flathead screwdriver in the position shown in the figure.
2. Rotate a tape-wrapped flathead screwdriver in the direction of the arrow in the order of (1), (2) shown in the figure and remove the roof molding from the front T-stud.

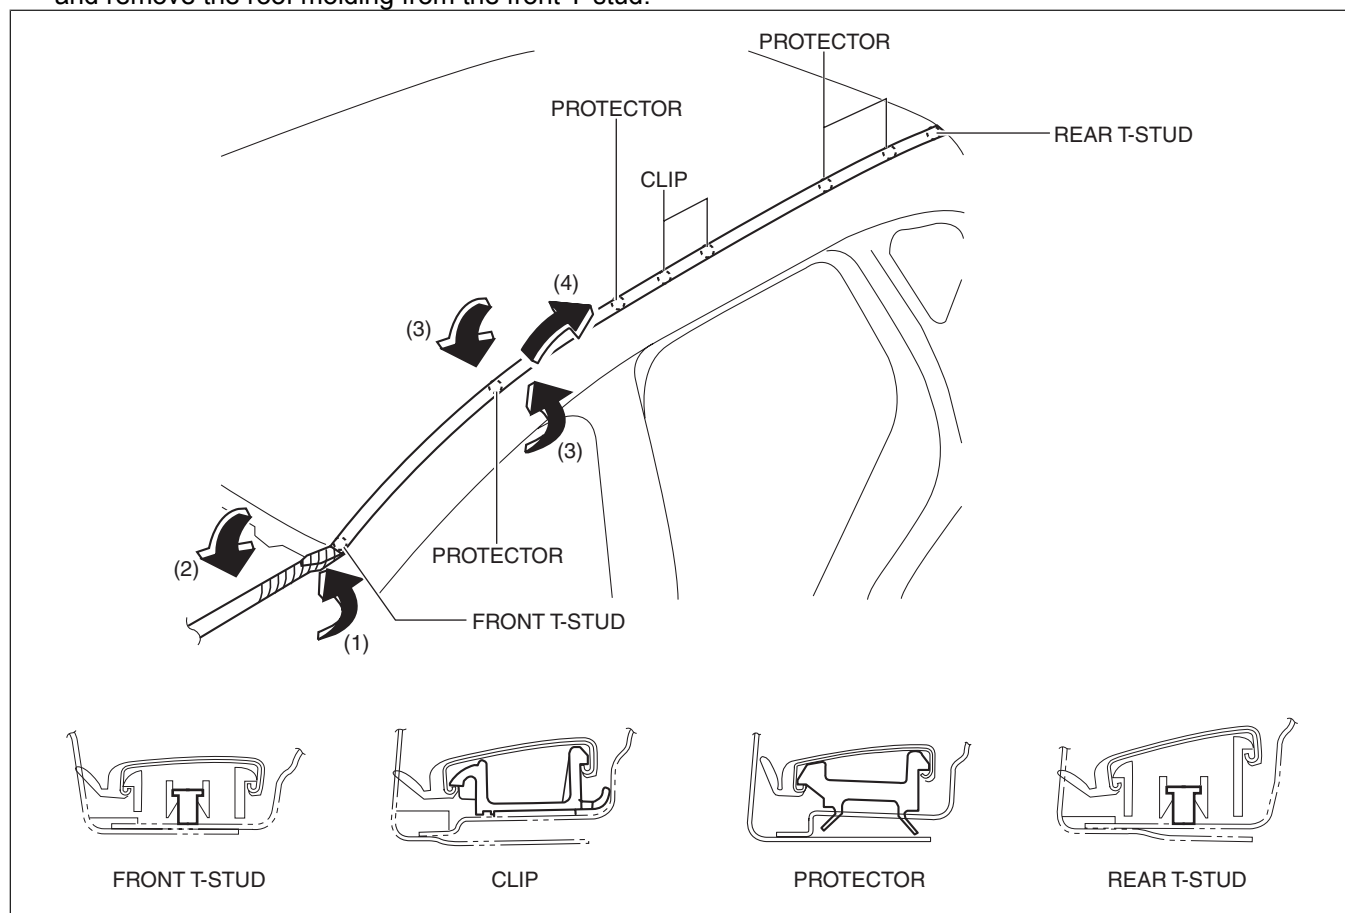

3. Rotate the roof molding in the direction of the arrow (3) shown in the figure, pull up the roof molding in the direction of the arrow (4) while detaching it from clips and protector, rear T-stud and then remove the roof molding.

ac5uuw00002036