


SEAL BOARD UPPER REMOVAL/INSTALLATION

id091000466600

1. Remove fasteners A.

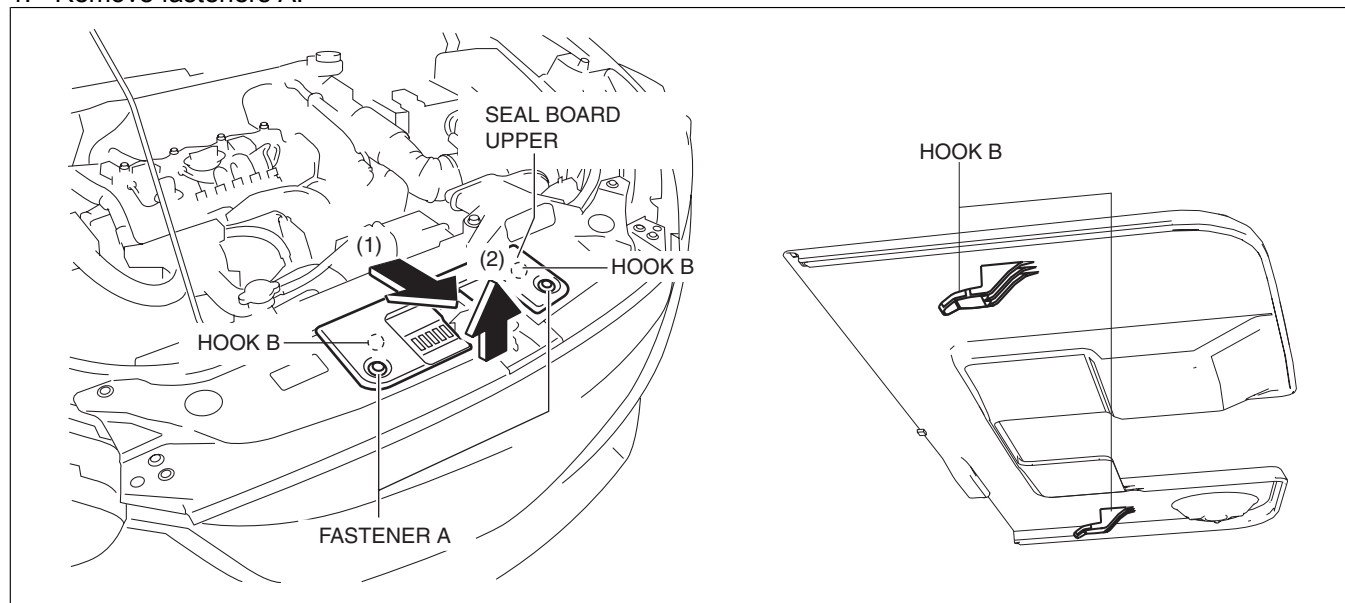

2. Pull the seal board upper in the direction of the arrow in the order of (1), (2) and remove it while detaching hooks B.
3. Install in the reverse order of removal.

ac5wzw00003094