

## NEUTRAL SWITCH INSPECTION [SKYACTIV-D 2.2]

id0140z7800800


### Neutral Switch No.1

#### Continuity inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the neutral switch No.1. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
3. Inspect for continuity between neutral switch No.1 terminal A and B.
  - If not as specified, replace the neutral switch No. 1. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)

#### Specification

Measured condition	Continuity
Rod pushed	Continuity detected
Rod not pushed	No continuity

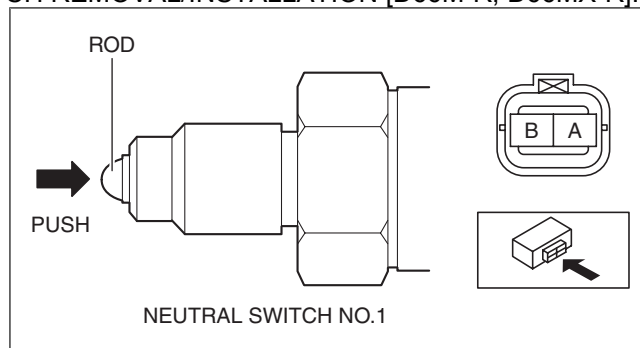

ac5wzw00006408


### Neutral Switch No.2 (Back-up Light Switch)

#### Continuity inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the back-up light switch. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
3. Inspect for continuity between neutral switch No.2 terminal B and C.
  - If not as specified, replace the back-up light switch. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)

#### Specification

Measured condition	Continuity
Rod pushed	Continuity detected
Rod not pushed	No continuity

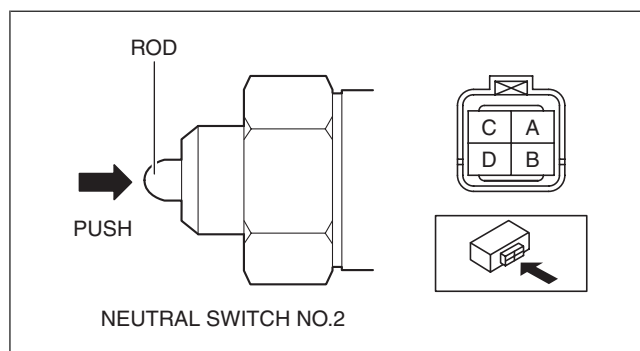

ac5wzw00006409