


AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER]

id0740a1801500

1. Connect battery positive voltage to air intake actuator terminal B (or C), connect terminal C (or B) to ground, and then verify that the air intake actuator operates as shown in the table.
 - If the operation condition is not normal, replace the air intake actuator.

L.H.D.

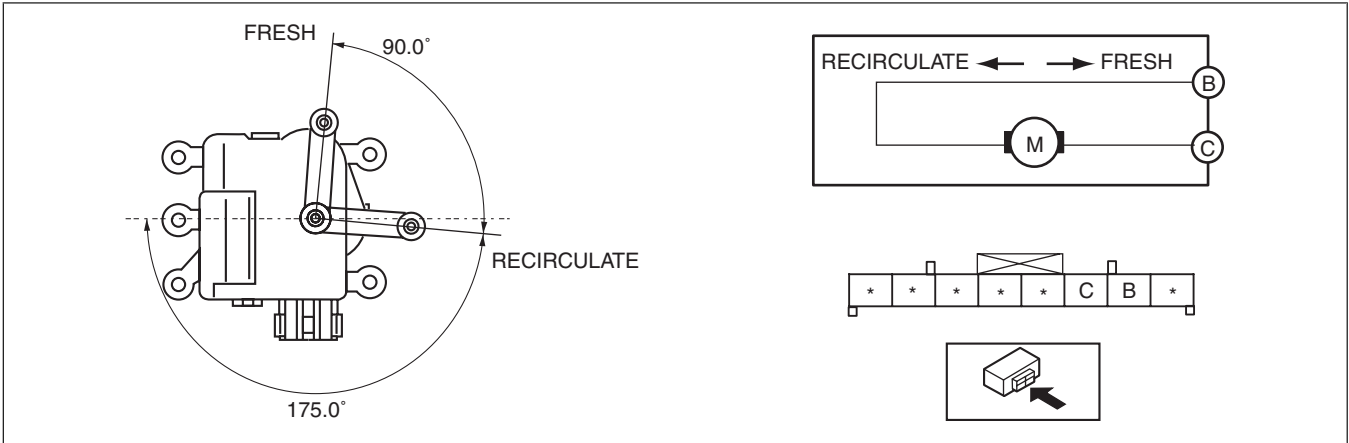


ac5wzw00001846

Terminal		Air intake actuator operation
B	C	
B+	Ground	FRESH → RECIRCULATE

Terminal		Air intake actuator operation
B	C	
Ground	B+	RECIRCULATE → FRESH

R.H.D.

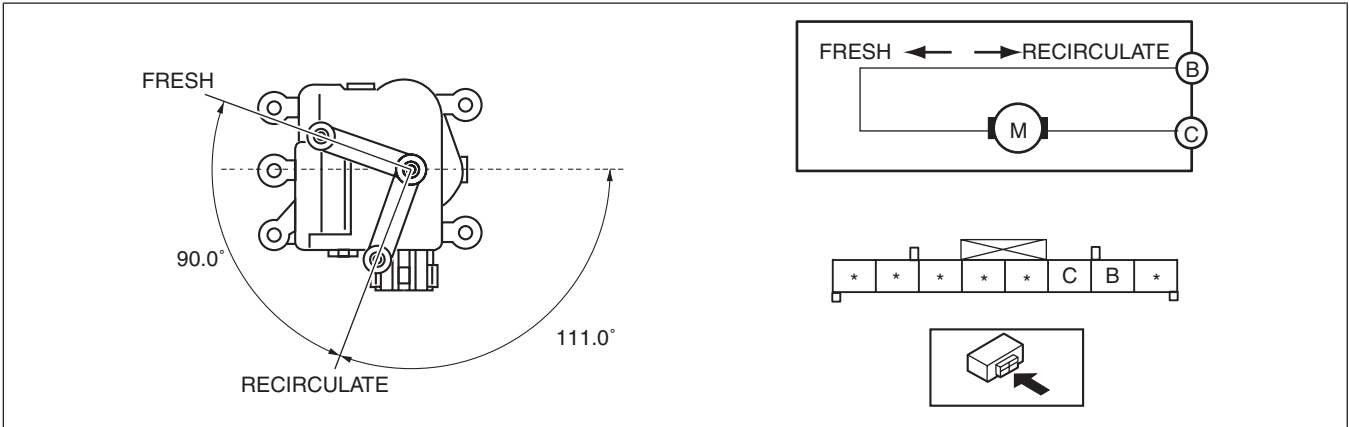

ac5wzw00001847

Terminal		Air intake actuator operation
B	C	
B+	Ground	RECIRCULATE → FRESH
Ground	B+	FRESH → RECIRCULATE