


## REAR PARKING SENSOR BUZZER INSPECTION

id092200030700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
  - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
  - (4) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
  - (5) Rear parking sensor buzzer (See REAR PARKING SENSOR BUZZER REMOVAL/INSTALLATION.)
3. Verify the continuity between rear parking sensor buzzer terminals A and B.

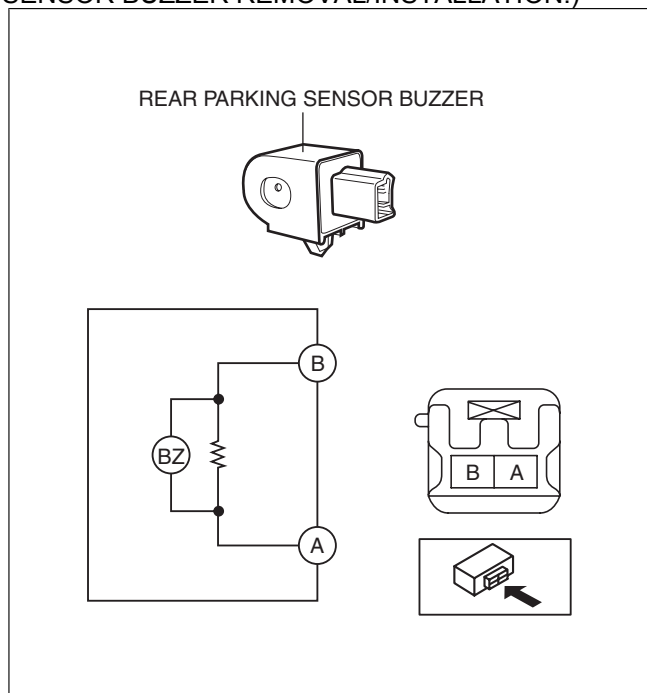

ac5wzw00003791

- If not as indicated in the table, replace the rear parking sensor buzzer.

○—○ : Continuity

Test condition	Terminal	
	A	B
Under any condition	○—○	○—○

ac5wzw00005599