
SHIFT SOLENOID NO.1 [FW6A-EL, FW6AX-EL]


id0517h2361100

Purpose/Function

- Shift solenoid No.1 adjusts the hydraulic pressure in the low clutch circuit based on the current demand from the TCM according to the vehicle conditions.

Construction

- Shift solenoid No.1 is installed to the solenoid control valve body.
- Shift solenoid No.1 is a normal closed-type linear solenoid.

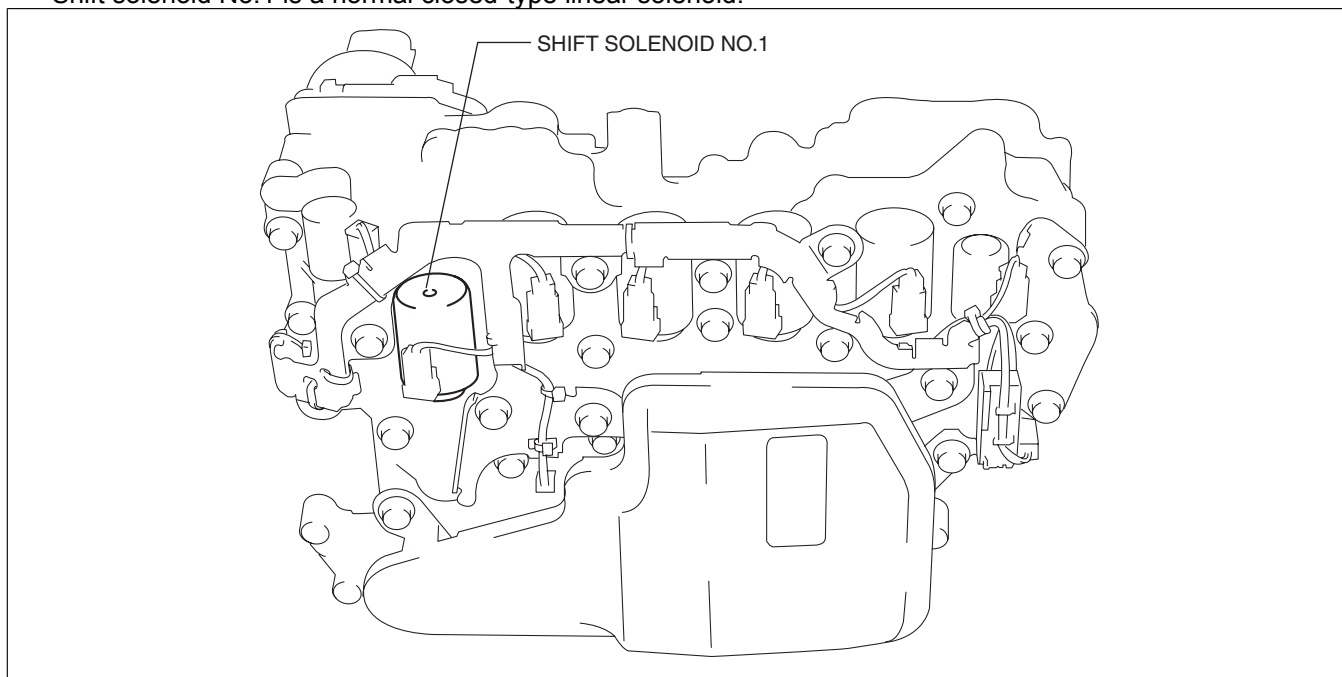

am3uun00002355

Operation

- Adjusts the low clutch pressure by increasing/decreasing the energization current to shift solenoid No.1 according to the signal from the TCM.