


SIDE WALL REMOVAL/INSTALLATION

id091700805400

1. Pull the side wall in the direction of the arrow in the order of (1), (2) and remove it while detaching hooks A and clip B.

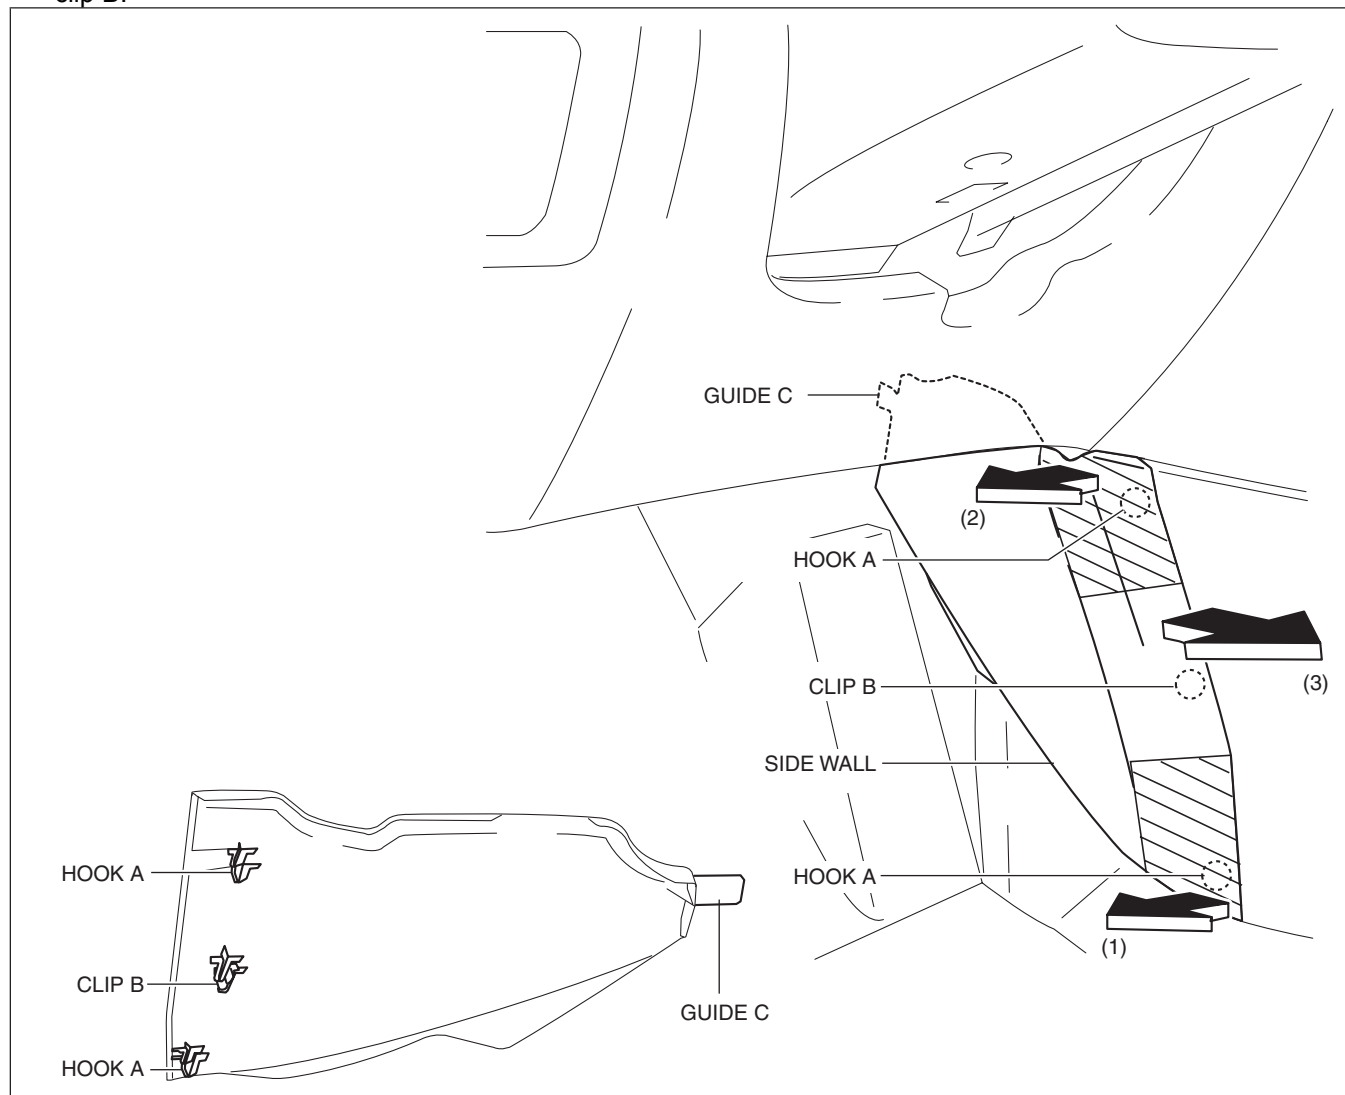

ac5uuw00001795

2. Pull the side wall in the direction of the arrow (3) and remove it while detaching the guide C.

Caution

- If the hooks A and clip B is removed forcefully, guide C may be damaged. Carefully remove hooks A and clip B so as not to damage guide C.

3. Install in the reverse order of removal.