


POWER BRAKE UNIT VACUUM SENSOR REMOVAL/INSTALLATION

id041100806000

L.H.D.

1. Remove the battery. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Remove in the order indicated in the table.

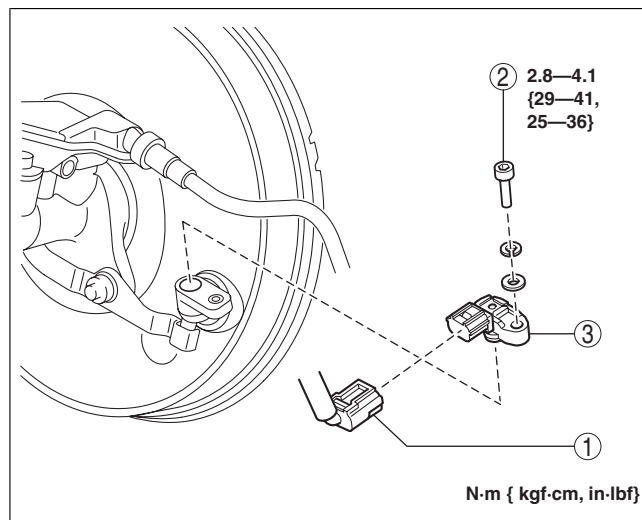


| | |
|---|--|
| 1 | Power brake unit vacuum sensor connector |
| 2 | Bolt |

| | |
|---|--------------------------------|
| 3 | Power brake unit vacuum sensor |
|---|--------------------------------|

3. Install in the reverse order of removal.

R.H.D.

1. Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
2. Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)
3. Remove the windshield wiper motor and link. (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
4. Remove the cowl panel. (See COWL PANEL REMOVAL/INSTALLATION.)
5. Remove in the order indicated in the table.

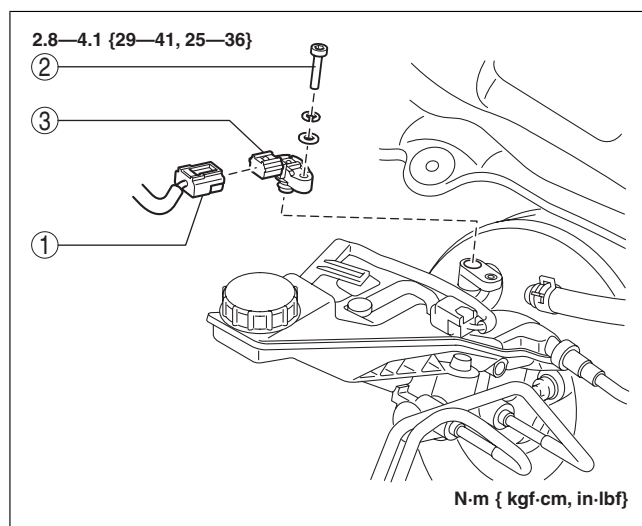

| | |
|---|--|
| 1 | Power brake unit vacuum sensor connector |
| 2 | Bolt |

| | |
|---|--------------------------------|
| 3 | Power brake unit vacuum sensor |
|---|--------------------------------|

6. Install in the reverse order of removal.