


REAR WIPER MOTOR REMOVAL/INSTALLATION


id091900801400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Rear wiper arm and blade (See REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
 - (2) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
 - (5) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3. Remove the rear wiper motor connector.

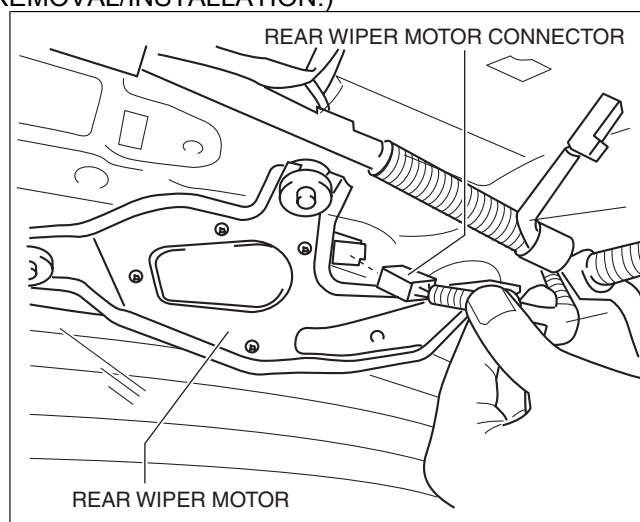


ac5uuw00000809

4. Remove bolts shown in the figure.

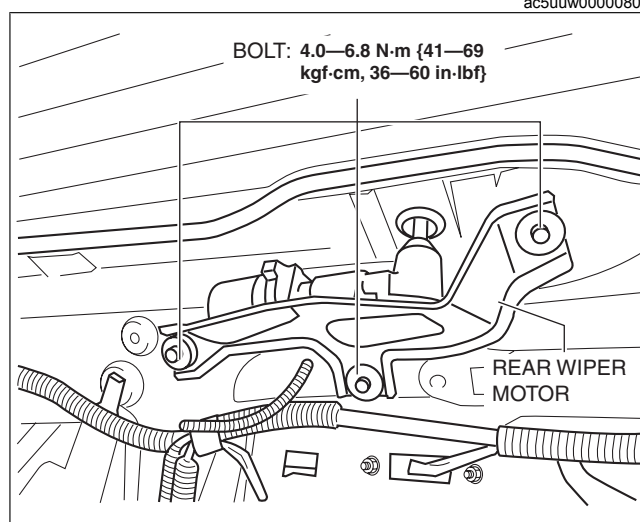


ac5wzw00001181

5. Pull out the rear wiper motor from the outer bushing hole and remove it.

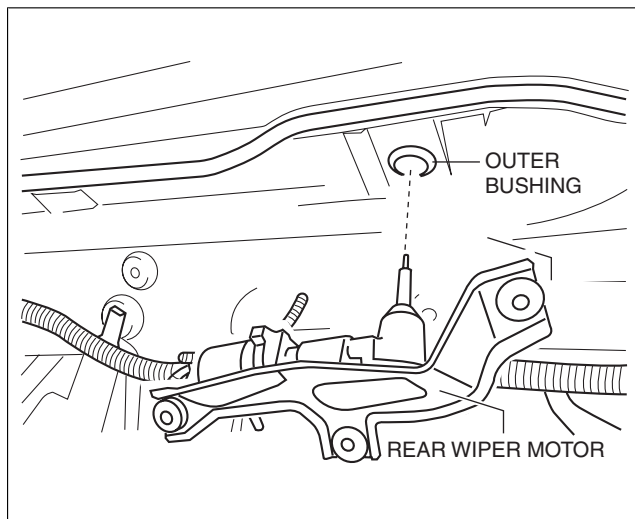


ac5wzw00002484

6. Press in the outer bushing from the outside of the liftgate in the direction of the arrow (1) shown in the figure.

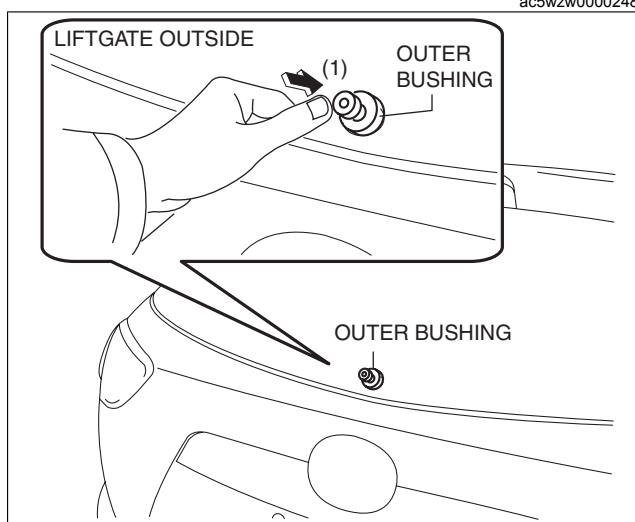

ac5wzw00002485

7. Detach the liftgate and outer bushing while pressing the outer bushing in the direction of the arrows shown in the figure, pull the outer bushing from the inside of the liftgate in the direction of the arrow (2), and remove it.
8. Install in the reverse order of removal.

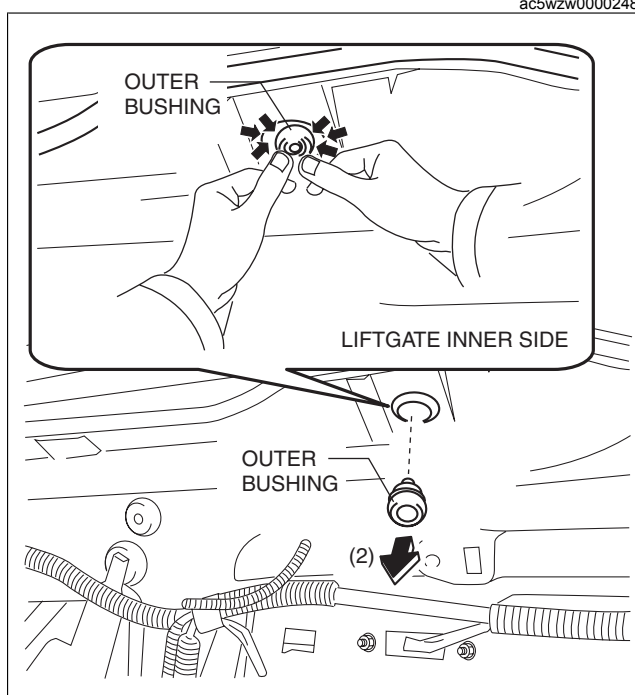

ac5wzw00002486