

FUEL WARMER INSPECTION [SKYACTIV-D 2.2]


id0114z7089300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Perform the "Fuel Line Safety Procedure" referring to the "BEFORE SERVICE PRECAUTION". (See BEFORE SERVICE PRECAUTION [SKYACTIV-D 2.2].)
3. Remove the fuel warmer. (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
4. Connect the vacuum pump to the fuel warmer.
5. When a fuel warmer vacuum is within **26.7—40.0 kPa**, measure the resistance between the fuel warmer and terminal B

Fuel warmer resistance (specification)

Approx. 0.5—2.0 ohms

- If not within the specification, replace the fuel warmer. (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

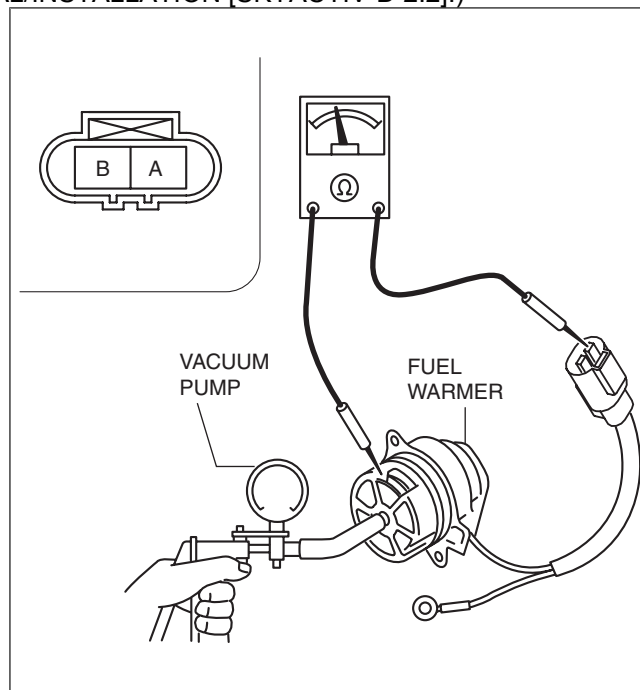

ac5wzw00005786