


SET PLATE REMOVAL/INSTALLATION

id091000878900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the seal board upper. (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
3. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
4. Remove fasteners A.

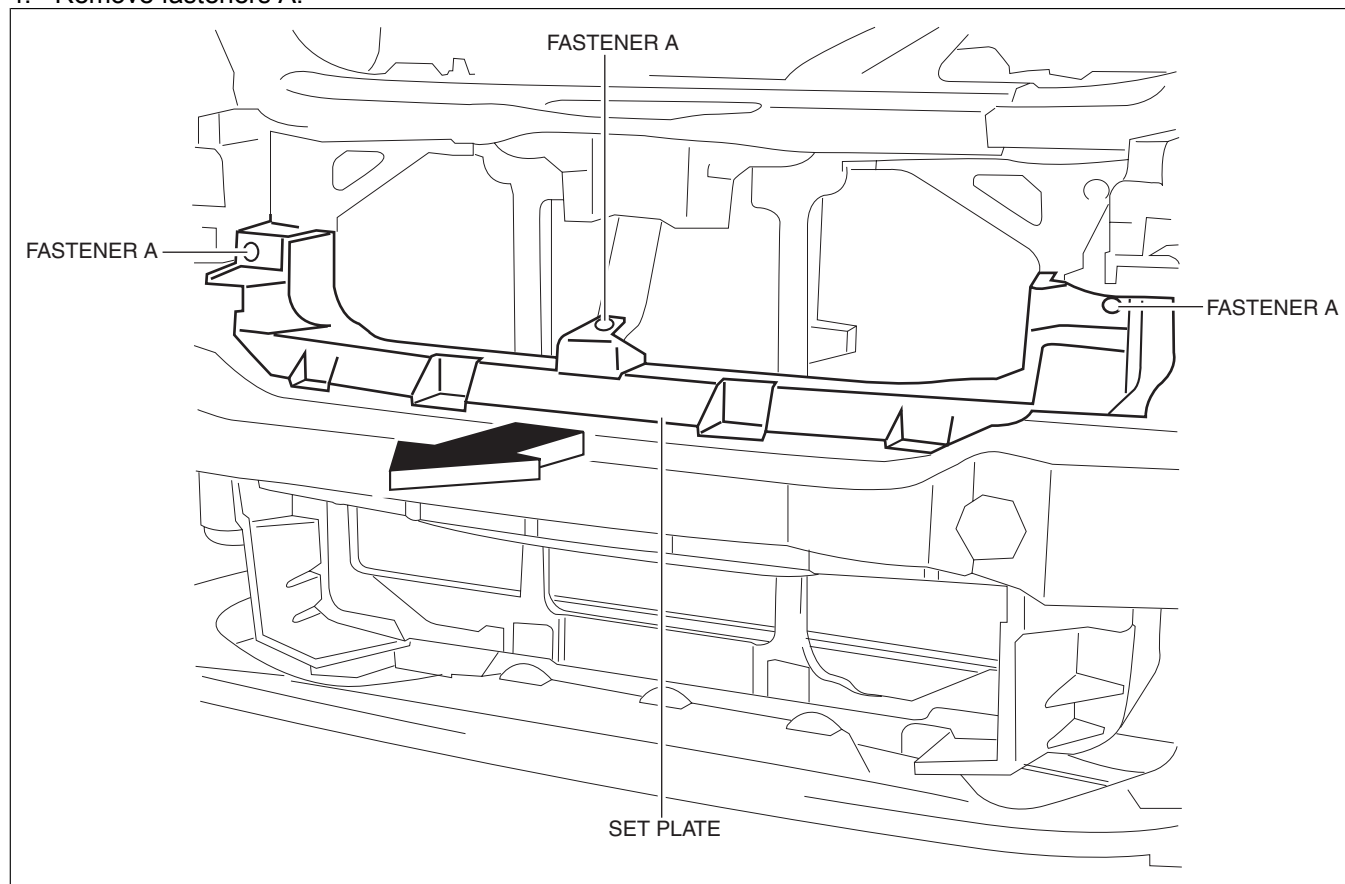

5. Remove the set plate in the direction of the arrow shown in the figure.
6. Install in the reverse order of removal.
7. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
8. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)

ac5wzw00001318