

## REAR FOG LIGHT INDICATOR LIGHT

id091800013900

### Purpose


- Notifies the user that the rear fog lights are illuminated.

### Function

- Illuminates when the rear fog light illumination conditions are met.

### Construction


- Displayed in the instrument cluster.

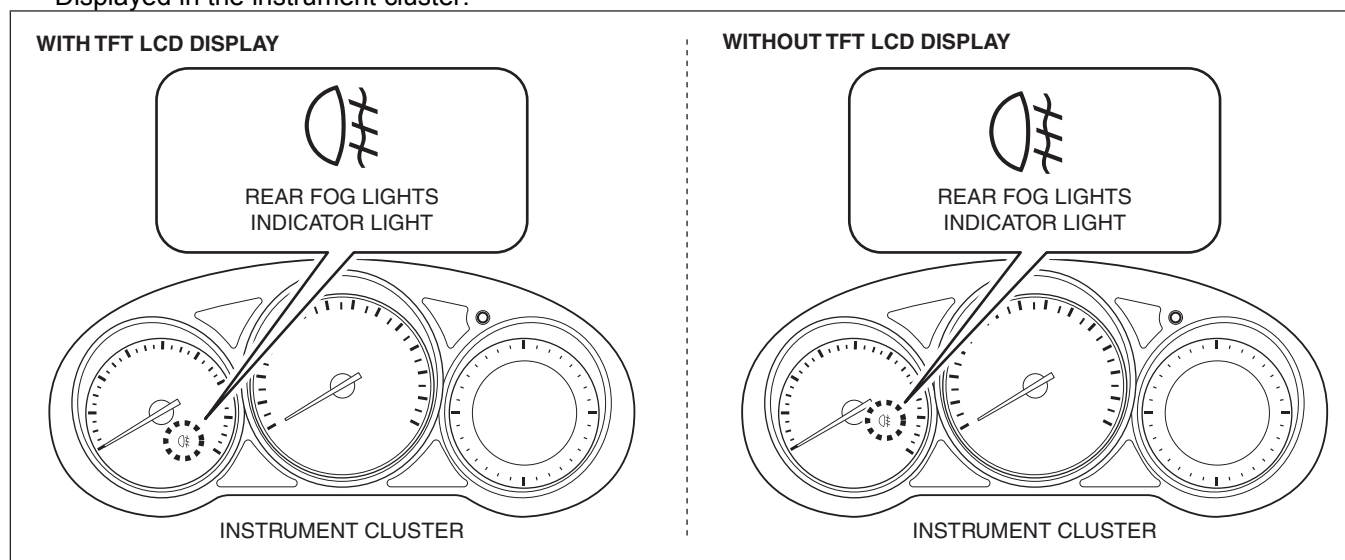

ac5wzn00001312

### Operation

1. With the light switch in the TNS or HEAD position, a rear fog light switch signal is input to the start stop unit when the rear fog light switch is operated to the on position.
2. The start stop unit sends the rear fog light switch signal to the front body control module (FBCM).
3. The front body control module (FBCM) sends the rear fog light switch signal to the instrument cluster as a rear fog light illumination signal.
4. The instrument cluster illuminates the rear fog light indicator light when it receives the rear fog light illumination signal.

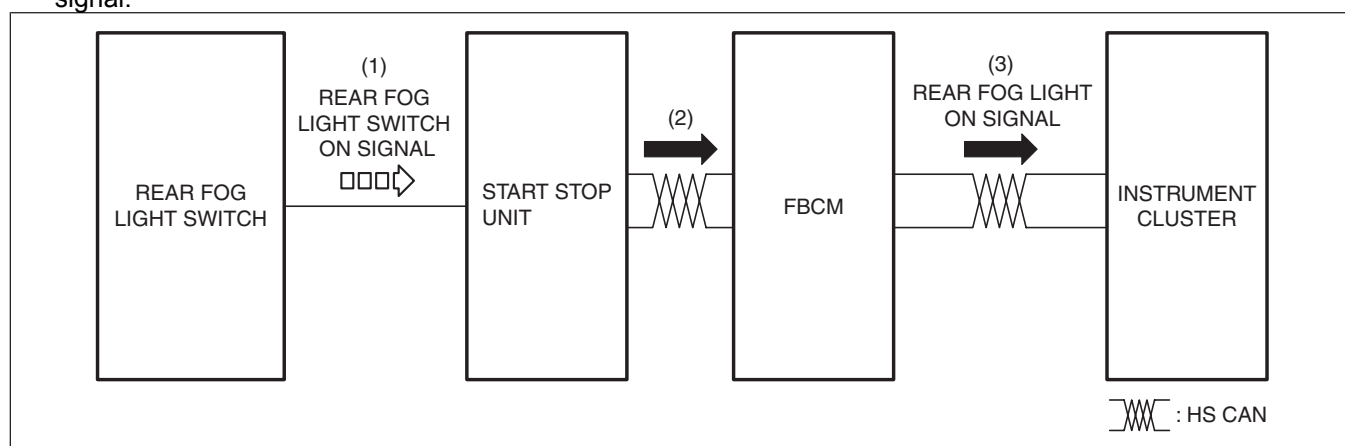

ac5wzn00001313

### Fail-safe

- Function not equipped.