


AIR CLEANER ELEMENT REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0113z7800200


1. Remove the air cleaner element as shown in the figure.
2. Install in the reverse order of removal. (See Air Cleaner Cover Installation Note.)

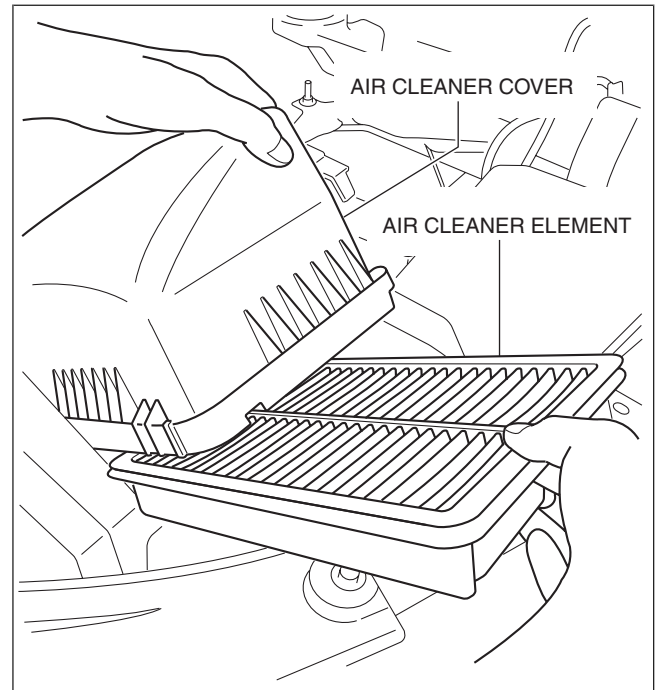

ac5wzw00004712


Air Cleaner Cover Installation Note

1. Install the air cleaner cover as shown in the figure.

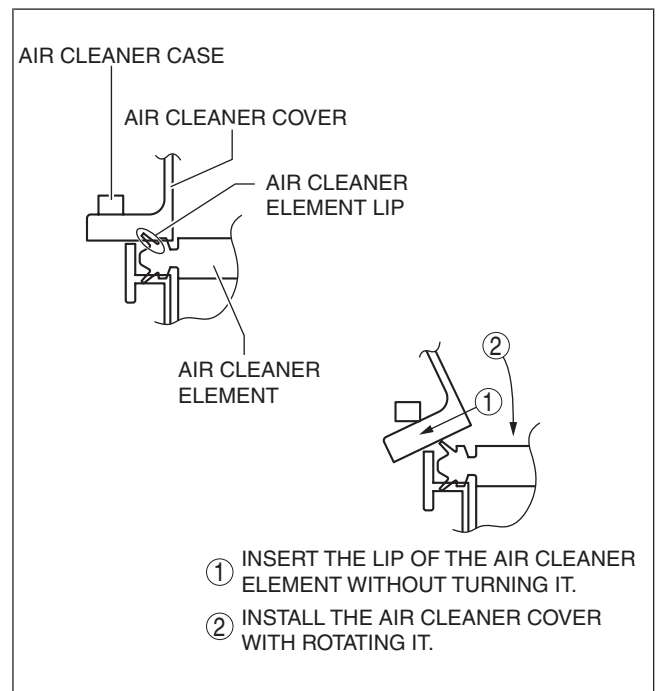

ac5wzw00005280

2. Secure the air cleaner cover and the air cleaner case with the clip.

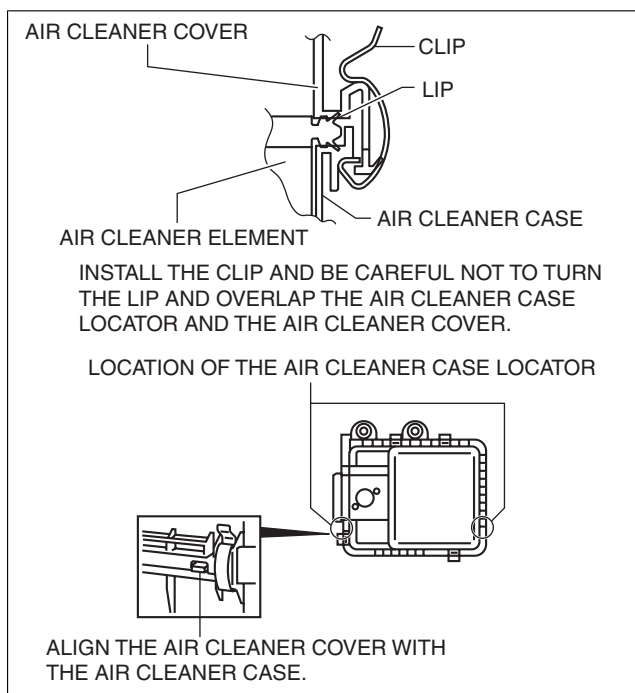

ac5wzw00005281