

REAR DOOR LATCH SWITCH INSPECTION


id091400511900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
 - (2) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
 - (3) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
3. Verify that the continuity is as indicated in the table.

○—○: CONTINUITY

DOOR LATCH SWITCH	TERMINAL	
	LH:L RH:B	LH:J RH:D
LATCH		
UNLATCH	○—○	○—○

ac5jjw00000042

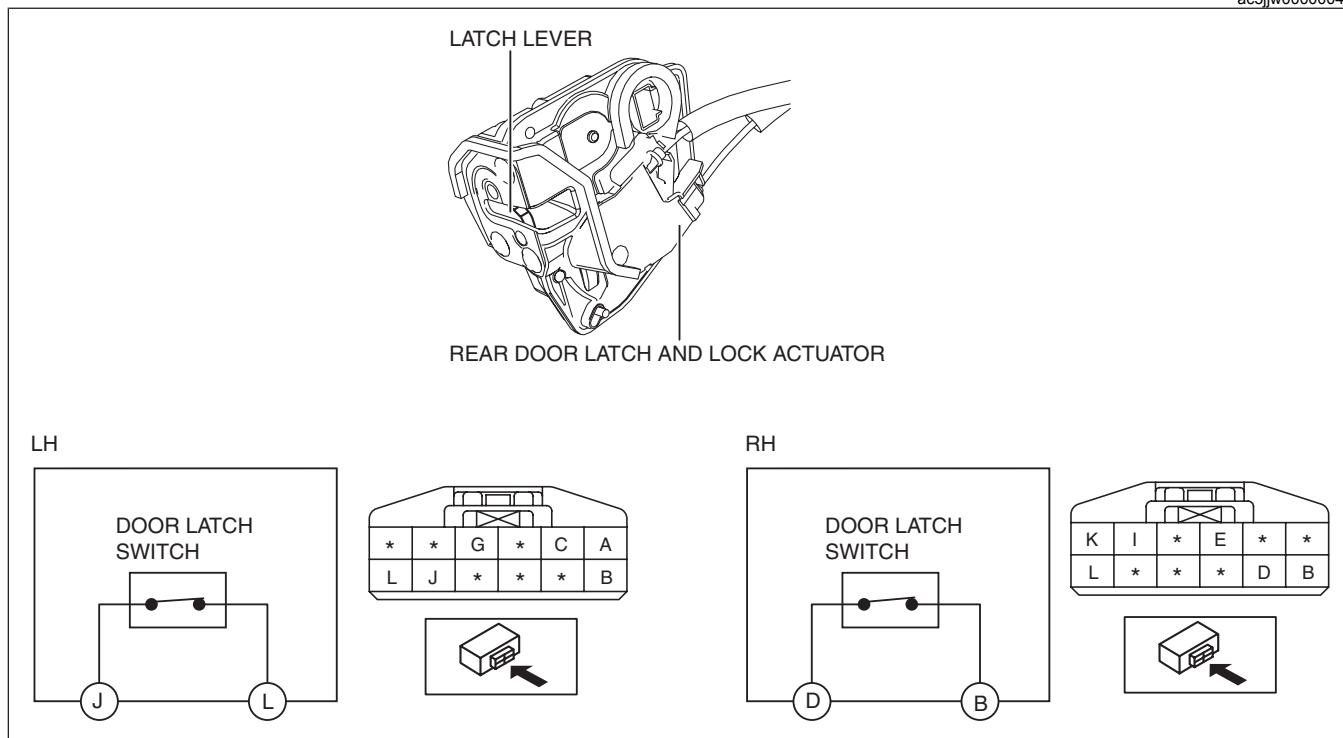


ac5jjw00000043

- If not as indicated in the table, replace the rear door latch and lock actuator.


Note

- When inspecting the latch side of the rear door latch switch, press in the latch lever using a flathead screwdriver and set it to the latched position.

UNLATCH

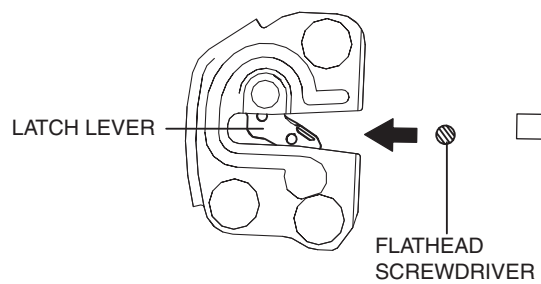

LATCH

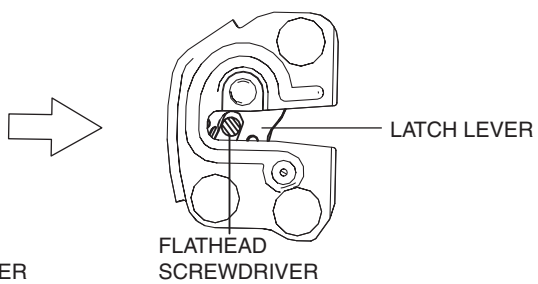

ac5jjw00000020