


TCS/DSC INDICATOR LIGHT

id041500108900

Purpose/Function

- The TCS/DSC indicator light, built into the instrument cluster, informs the driver of the following vehicle conditions.
 - TCS is operating. (Drive wheel is slipping.)
 - DSC is operating. (Vehicle side-slip condition.)
 - Roll over mitigation (ROM) is operating.
 - DSC system malfunction.

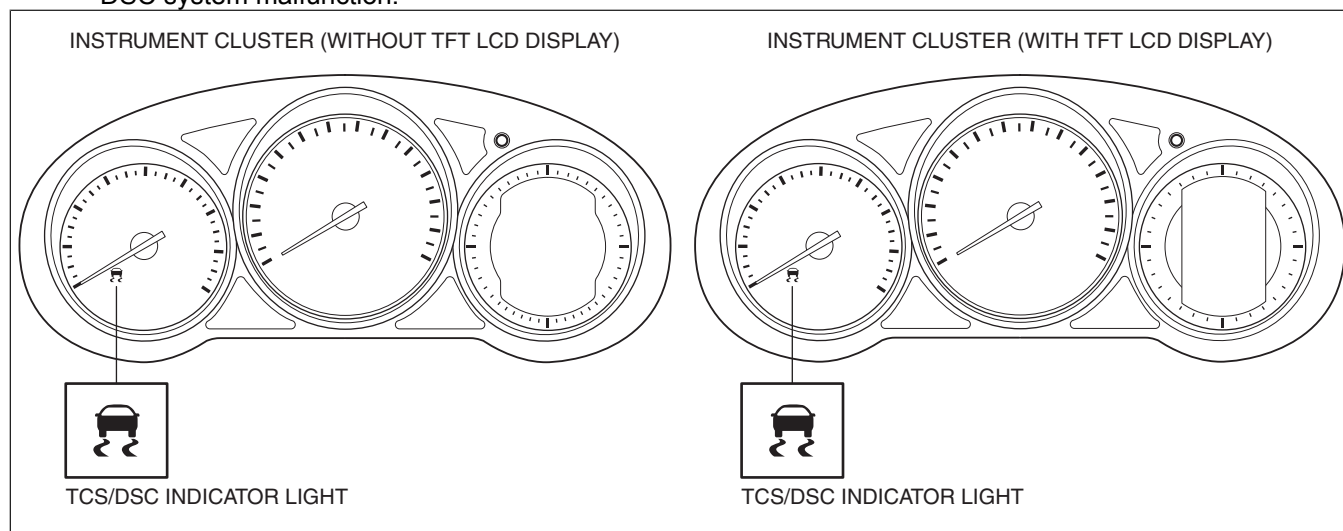

Operation

- When the DSC system and CAN lines are normal, the TCS/DSC indicator light illuminates for approx. 3.0 s when the ignition is switched to ON to check the light function. When the system is malfunctioning, the TCS/DSC indicator light remains illuminated.
- When the TCS, DSC or roll over mitigation (ROM) are non-operational, operational and malfunctioning, the TCS/DSC indicator light operates according to the following table.

TCS/DSC indicator light operation

Item	TCS/DSC indicator light
TCS, DSC, and roll over mitigation (ROM) not operating	Not illuminated
TCS operating	Flashes (0.5 s intervals)
DSC operating	
Roll over mitigation (ROM) operating	Illuminated
DSC system malfunction	

Fail-safe

- Function not equipped.