


SEDIMENTOR SWITCH INSPECTION [SKYACTIV-D 2.2]

id0114z7085700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Perform the "Fuel Line Safety Procedure" referring to the "BEFORE SERVICE PRECAUTION". (See BEFORE SERVICE PRECAUTION [SKYACTIV-D 2.2].)
3. Drain the fuel from the fuel filter.
4. Remove the sedimentor switch. (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
5. Verify that there is continuity when pulling up the float as shown in the figure.
 - If there is no continuity, replace the sedimentor switch. (See FUEL FILTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

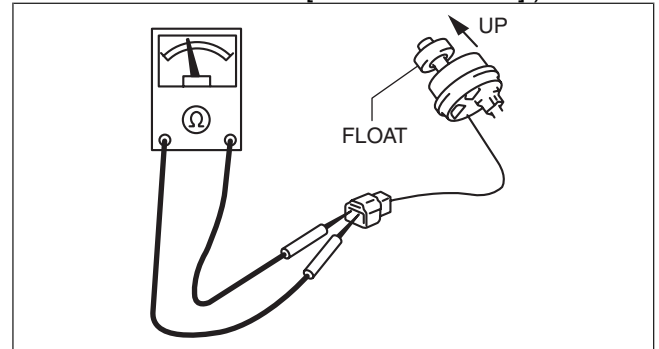

ac5wzw00005785