

## MANUAL TRANSAXLE OIL INSPECTION [C66M-R, C66MX-R]

id0515ma159600

1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the oil level plug and gasket.
4. Verify that the manual transaxle oil is near the brim of the plug port.
  - When the oil level is lower than the lower limit, add manual transaxle oil.

**Manual transaxle oil grade**

**API service GL-4**

**Manual transaxle oil viscosity**


**SAE 75W-80**

5. Install a new gasket and the oil level plug.

**Tightening torque**

**39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}**

6. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

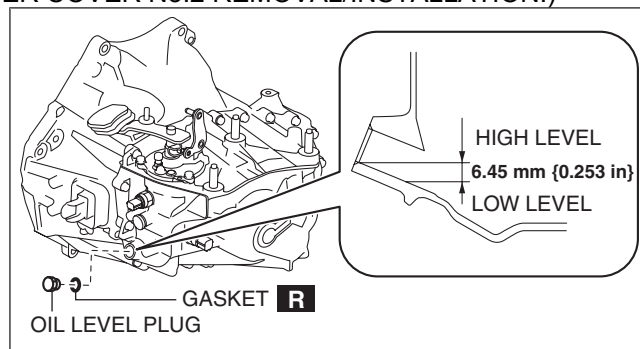

ac5wzw00002834