

## LOW CLUTCH HUB INSPECTION

id051700663100

### Bush Inner Diameter Inspection

1. Measure the inner diameter of the bush in two locations shown in the figure.


#### Note

- When measuring, measure near the center of the bush avoiding the oil groove, and then calculate the average value of the X and Y directions as shown in the figure.
- Recommended measuring instrument: Cylinder gauge or caliper gauge

#### Maximum:

**31.270 mm {1.2311 in}**

- If it is more than the maximum specification, replace the low clutch hub with a new one.

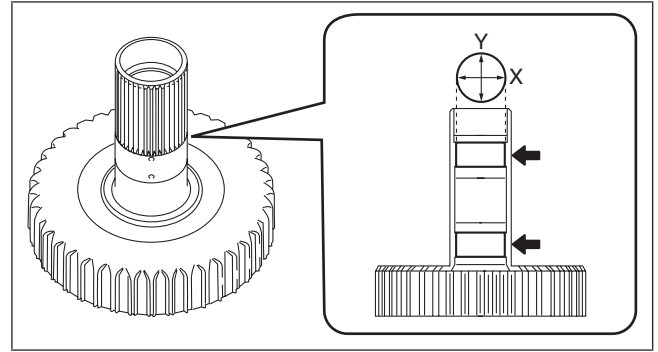

azzjjw00001348