


INTAKE-AIR SYSTEM LOCATION INDEX [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0113z9801700

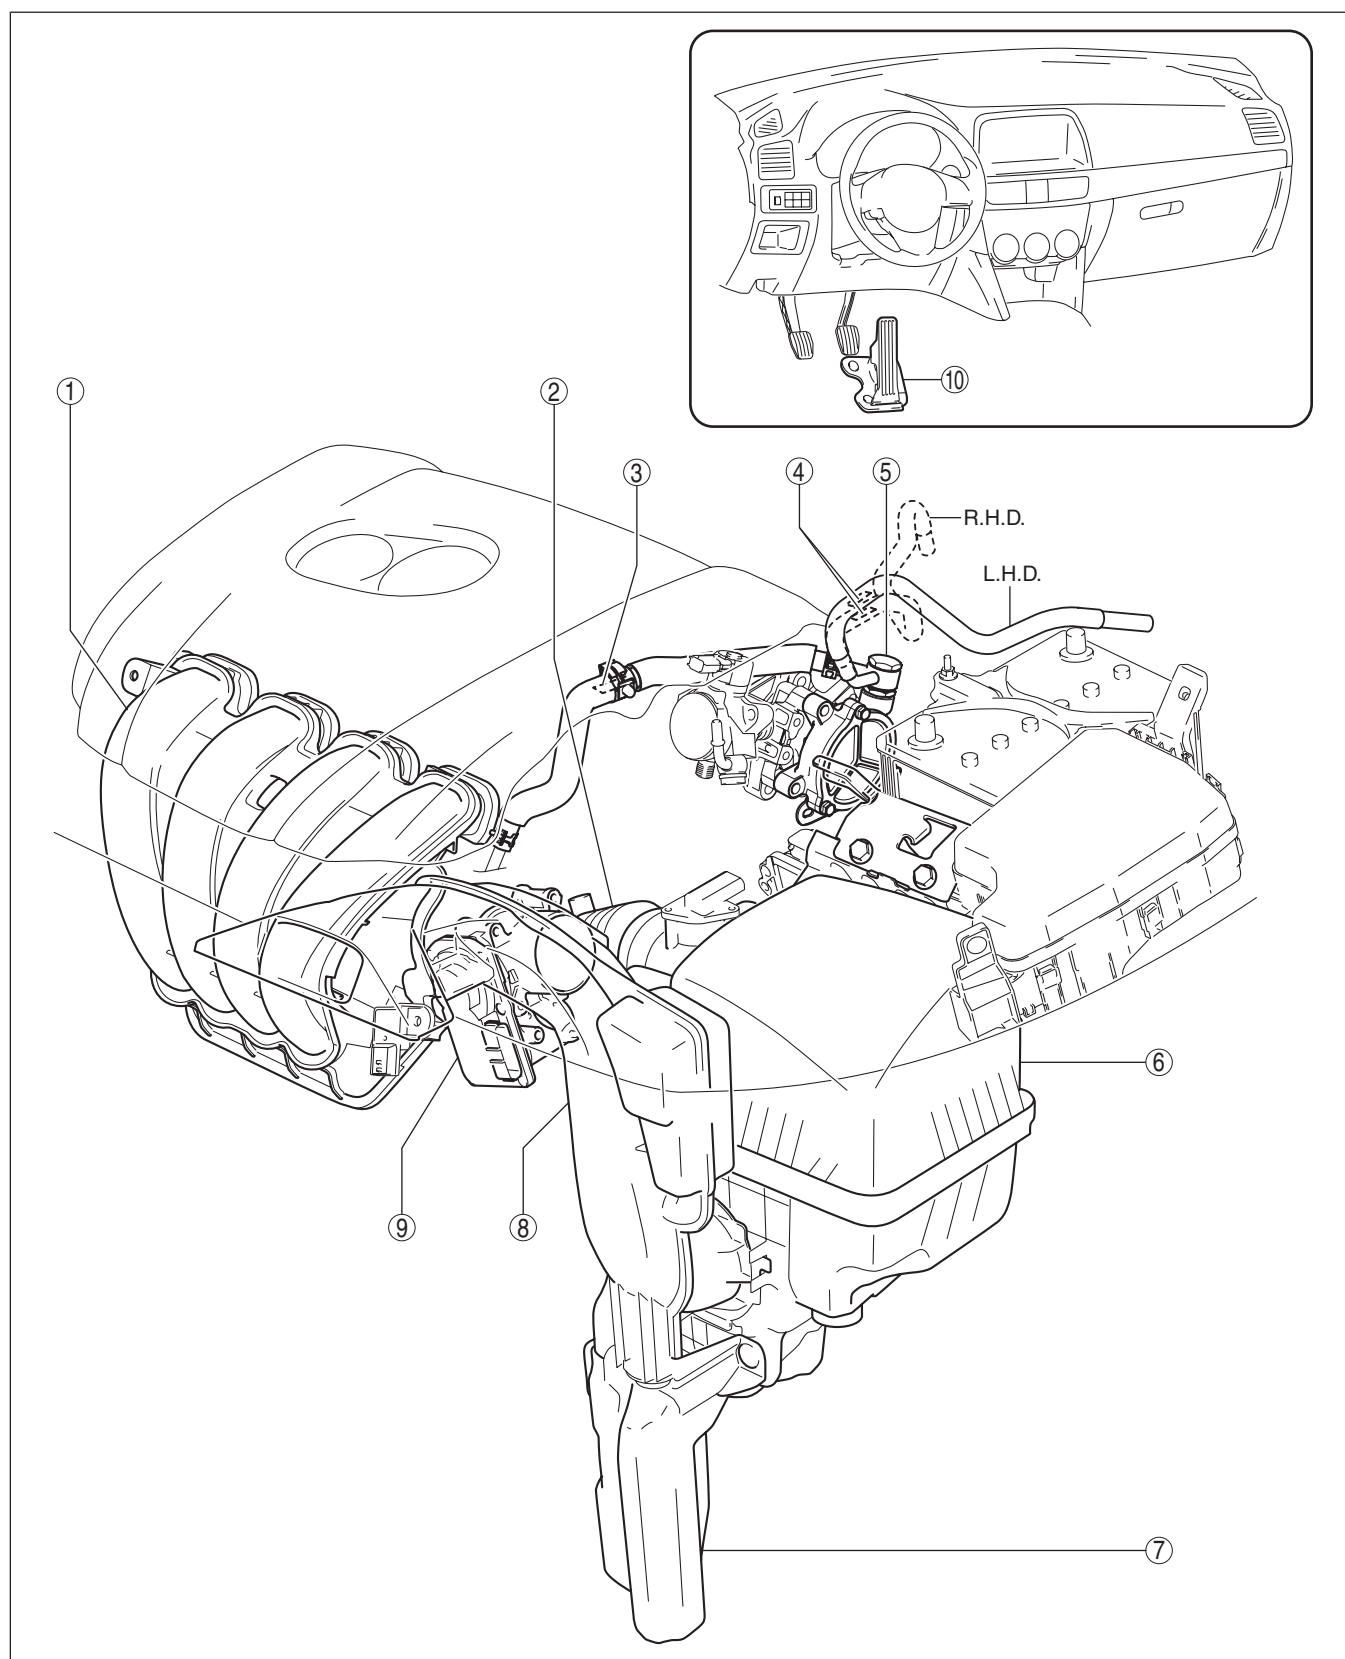

ac5wzw00006454

1 Intake manifold
(See INTAKE-AIR SYSTEM REMOVAL/
INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G
2.5].)
(See INTAKE MANIFOLD VACUUM INSPECTION
[SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

2 Air hose
(See INTAKE-AIR SYSTEM REMOVAL/
INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G
2.5].)

3	Check valve (between intake manifold and vacuum pump) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CHECK VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
4	Check valve (between vacuum pump and power brake unit) (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See CHECK VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Vacuum pump (See VACUUM PUMP REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See VACUUM PUMP INSPECTION.)
6	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See AIR CLEANER ELEMENT REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See AIR CLEANER ELEMENT INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

7	Resonance chamber (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
8	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
9	Throttle body (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See THROTTLE BODY INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
10	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)