

RELAY BOX

id092100900300

Purpose

- Relays used by each system are grouped and housed together for smooth inspection and replacement servicing.


Function

- Relays used by each system are grouped and housed together.

Construction


- Installed the inside front bumper.

SKYACTIV-G 2.0, SKYACTIV-G 2.5

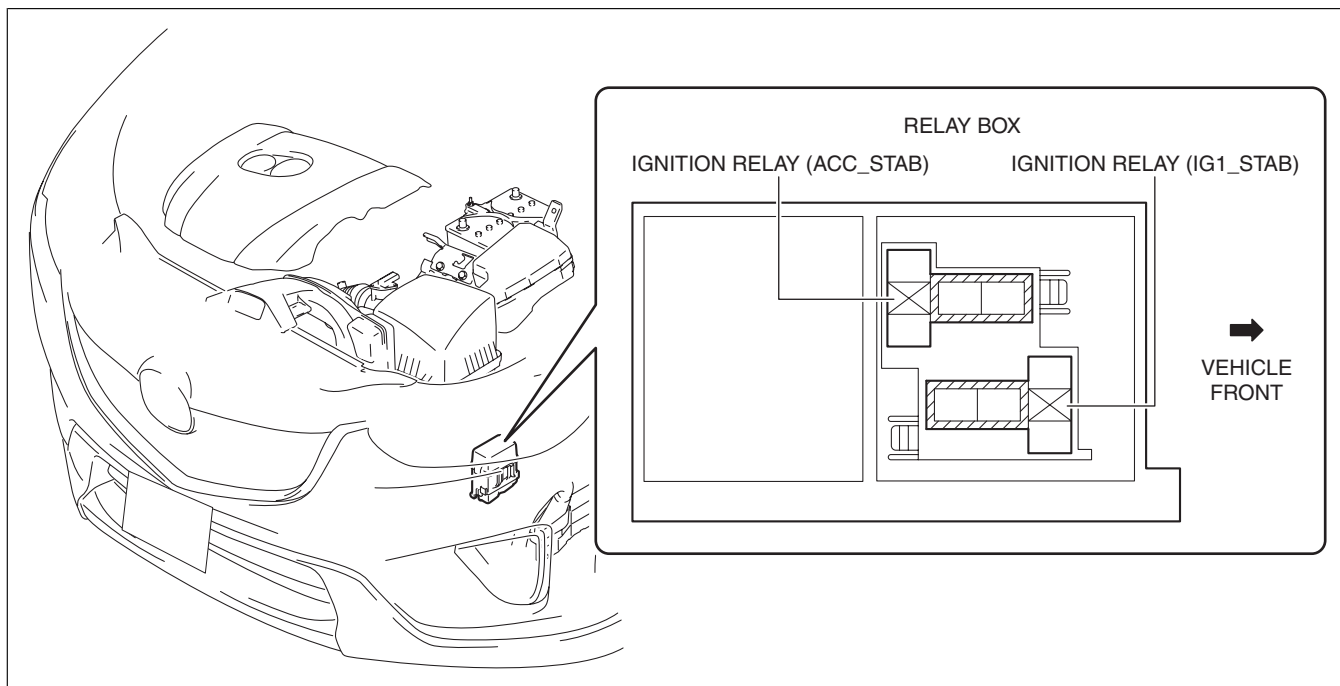

ac5wzn00001560

SKYACTIV-D 2.2

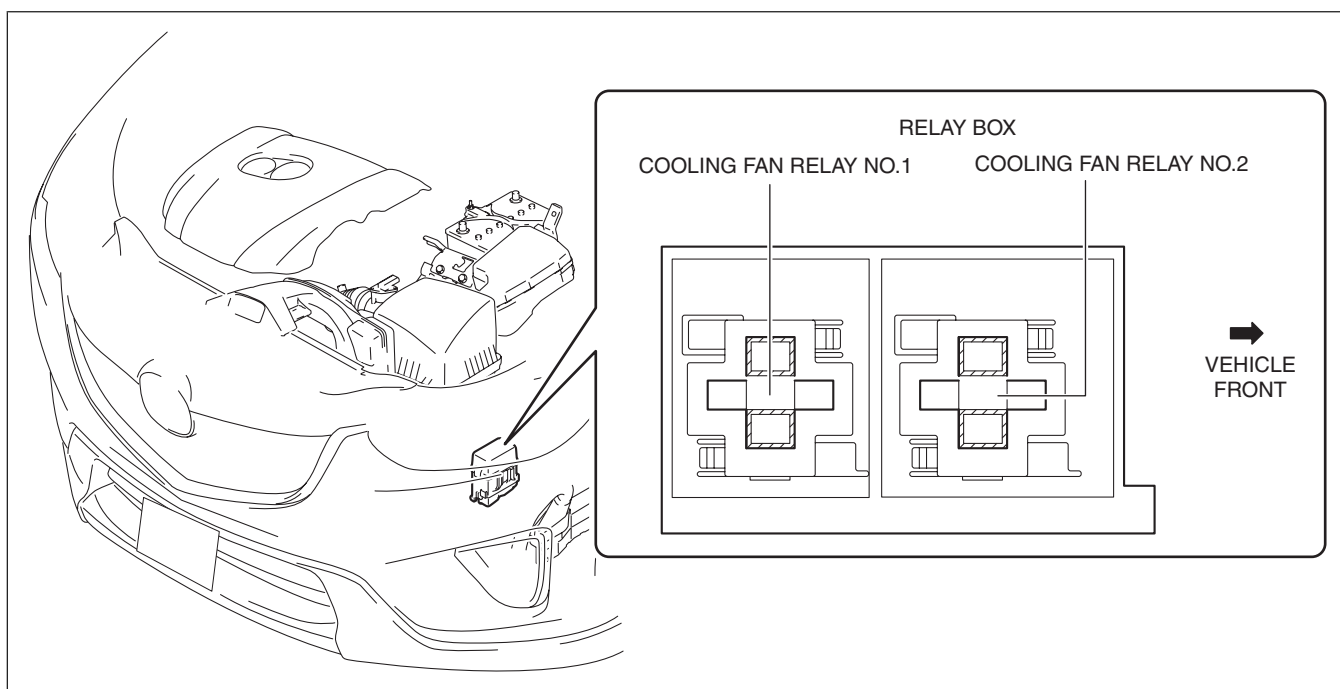


ac5wzn00001871

Operation

Relay operation

- When electric current flows to the coil, electromagnetic power is generated.

-
2. The switch is attracted by the generated electromagnetic power and switches on.
 3. Electric current flows to each part downstream of the fuse.

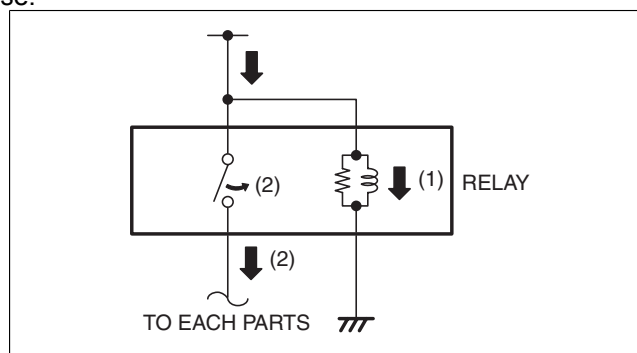

ac5wzn00000285

Fail-safe

- Function not equipped.