


DASHBOARD UNDER COVER REMOVAL/INSTALLATION

id091700807200

1. Detach hooks A in the direction of arrow (1) shown in the figure.

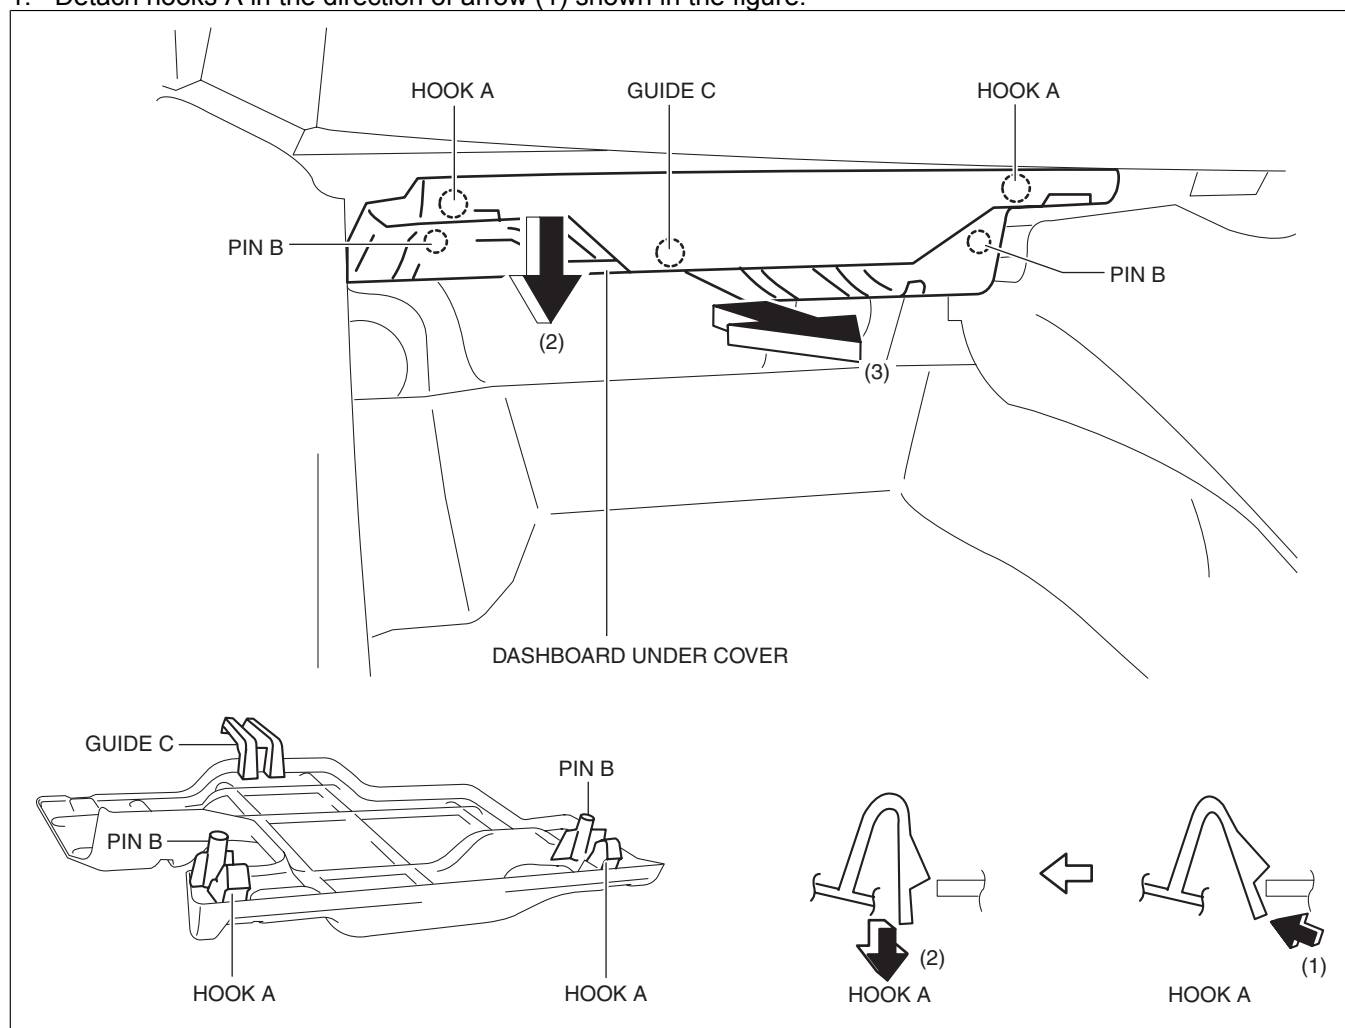

2. Pull the dashboard under cover in the direction of arrow (2) while detaching pins B.
3. Remove the dashboard under cover in the direction of the arrow (3) shown in the figure while detaching the guide C.

Caution

- If hooks A and pins B is removed forcefully, guide C may be damaged. Carefully remove hooks A and pins B so as not to damage guide C.

4. Install in the reverse order of removal.