




REAR TRAILING LINK REMOVAL/INSTALLATION

id021400800100

1. Remove the floor under cover. (See FLOOR UNDER COVER REMOVAL/INSTALLATION.)
2. Disconnect the rear parking cable. (See REAR PARKING BRAKE CABLE REMOVAL/INSTALLATION.)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.
5. Inspect the wheel alignment and adjust it if necessary. (See REAR WHEEL ALIGNMENT.)

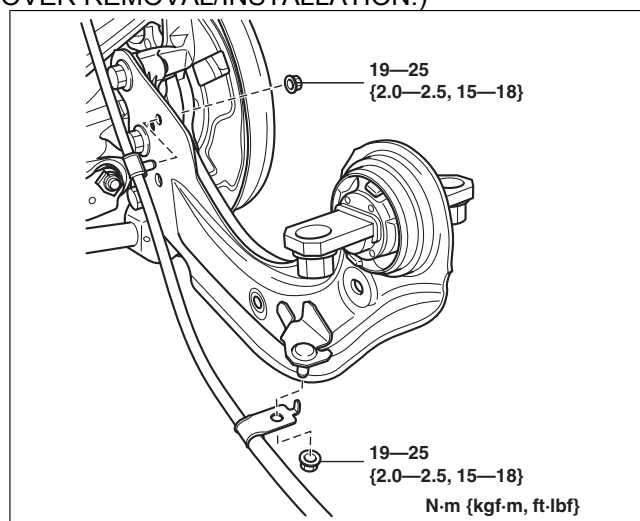

ac5wzw00002146

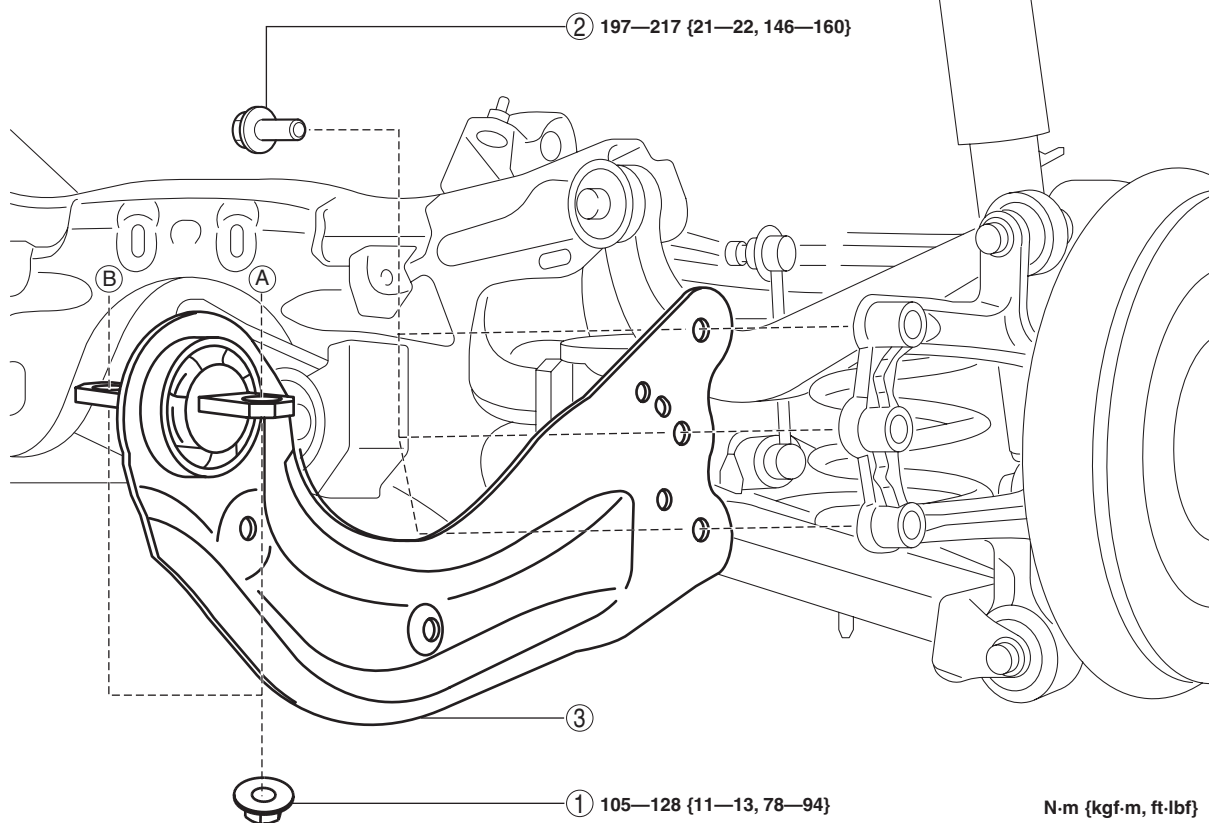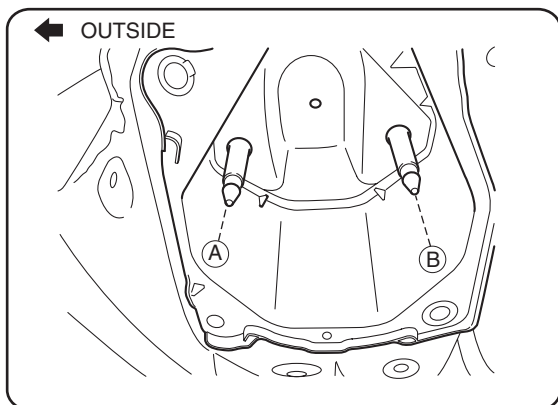


ac5wzw00002753

1	Rear trailing link installation nut
2	Rear trailing link installation bolt

3	Rear trailing link (See Rear Trailing Link Installation Note.)
---	---

Rear Trailing Link Installation Note

1. Install the rear trailing link installation bolts using a jack.
2. Install the rear trailing link installation nut.

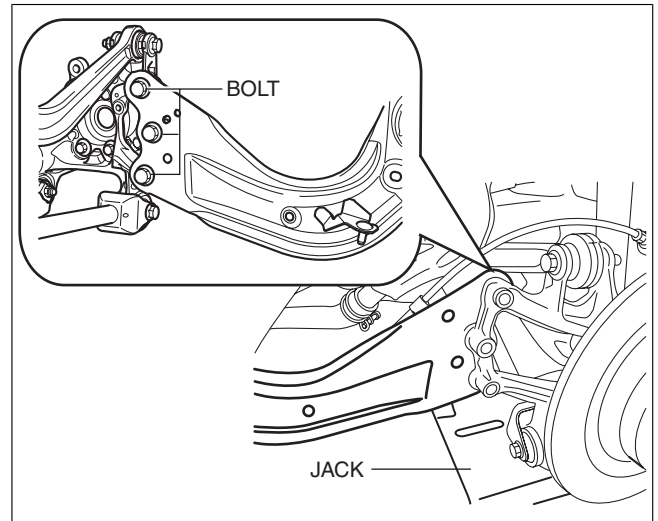

ac5uuw00000357