


FRONT CENTER SPEAKER INSPECTION

id092000866700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the center speaker grille. (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
3. Remove the front center speaker. (See FRONT CENTER SPEAKER REMOVAL/INSTALLATION.)
4. Verify that the resistance between the front center speaker terminals is as indicated in the table.

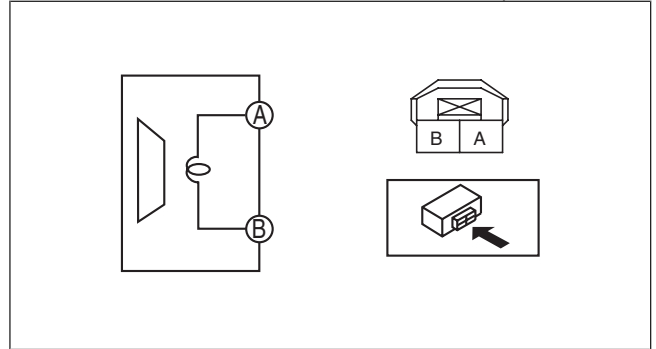

am6zzw00001612

- If not as indicated in the table, replace the front center speaker.

○○ : Resistance

Test condition	Terminal		Resistance (ohm)
	A	B	
Under any condition	○○		3.24—3.96

ac5uuw00002875