


SOLAR RADIATION SENSOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1802800


Note

- When removing the solar radiation sensor, perform the procedure in the posture shown in the figure.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (4) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
 - (5) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (6) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (7) Lower panel (passenger-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
 - (8) Blower unit (See BLOWER UNIT REMOVAL/INSTALLATION.)
3. Press the tab from the inside of the dashboard and press out the solar radiation sensor as shown in the figure.

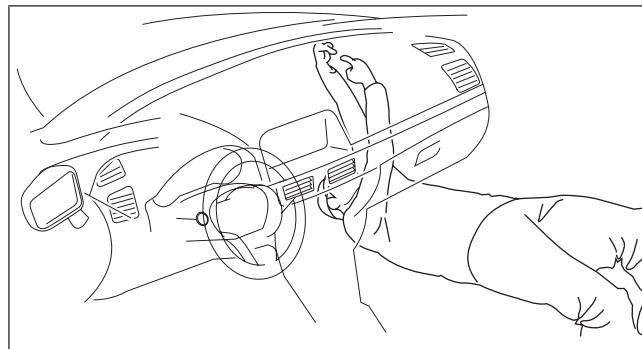


ac5wzw00001865

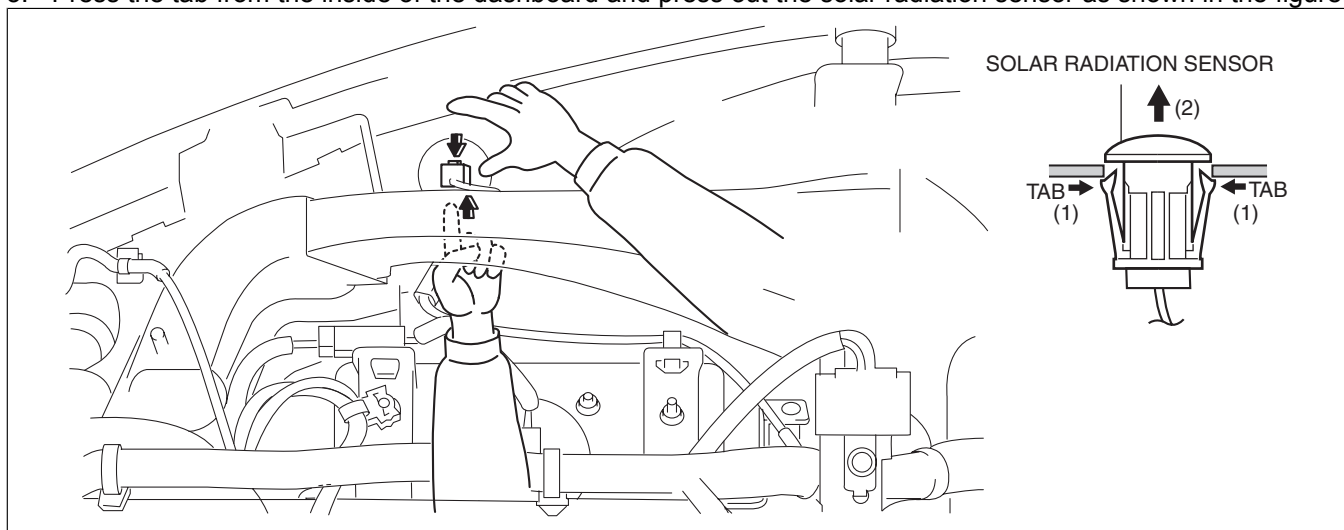

ac5wzw00001866


4. Disconnect the solar radiation sensor connector.
5. Remove the solar radiation sensor.
6. Install in the reverse order of removal.

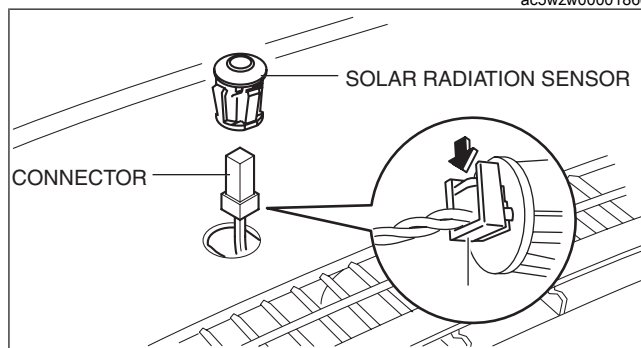

ac5wzw00001867

Solar Radiation Sensor Installation Note

1. Align the shape of the solar radiation sensor with the shape of the installation hole on the dashboard side, and install as shown in the figure.

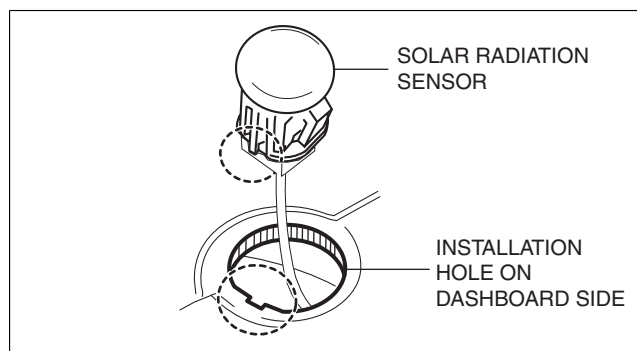

ac5wzw00001868