

AIR CLEANER [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0113z9003500

Purpose, Function

- Prevents engine internal damage caused by penetration of dust or foreign material.


Construction

- The air cleaner is installed in front of the battery.

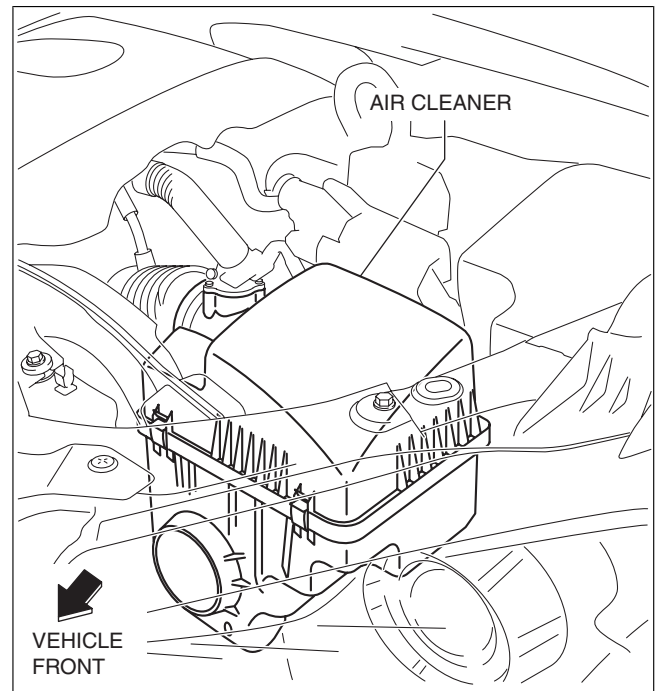


ac5uun00000026

- The air cleaner consists of the air cleaner case, air cleaner cover, and air cleaner element.

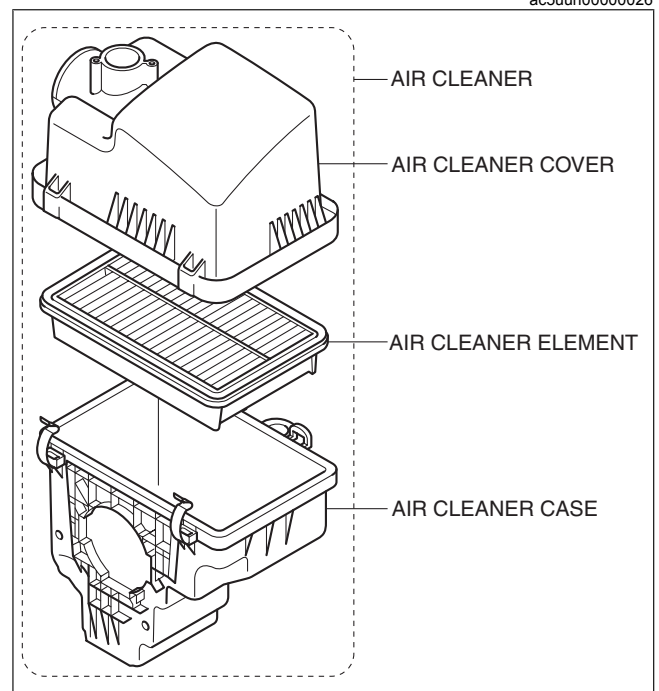

ac5uun00000027

-
- Non-woven fabric (dry type) air cleaner element has been adopted to remove dust and foreign material in the intake air.

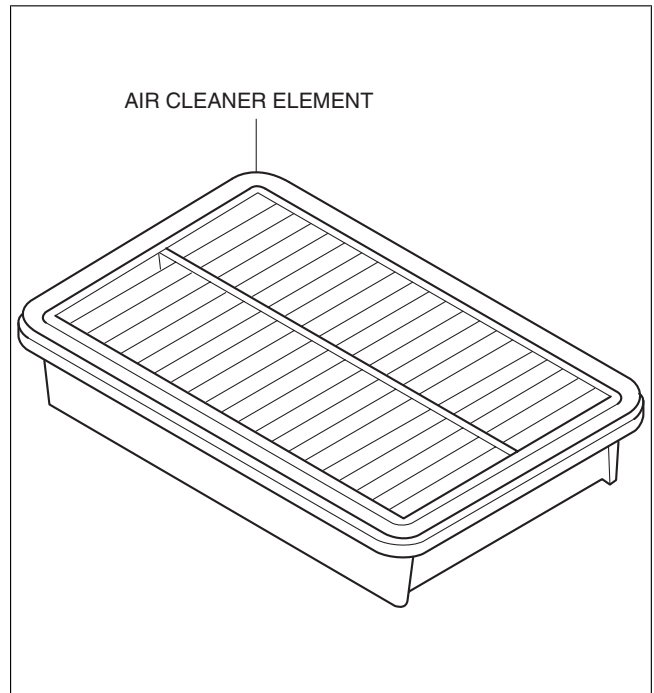

ac5uun00000028