


SIDE TURN LIGHT INSPECTION


id091800811600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Outer mirror glass (See OUTER MIRROR GLASS REMOVAL.)
 - (2) Outer mirror garnish (upper side) (See OUTER MIRROR GARNISH REMOVAL/INSTALLATION.)
 - (3) Side turn light (See SIDE TURN LIGHT REMOVAL/INSTALLATION.)
3. Apply battery voltage to side turn light terminal A, and connect terminal B to ground.

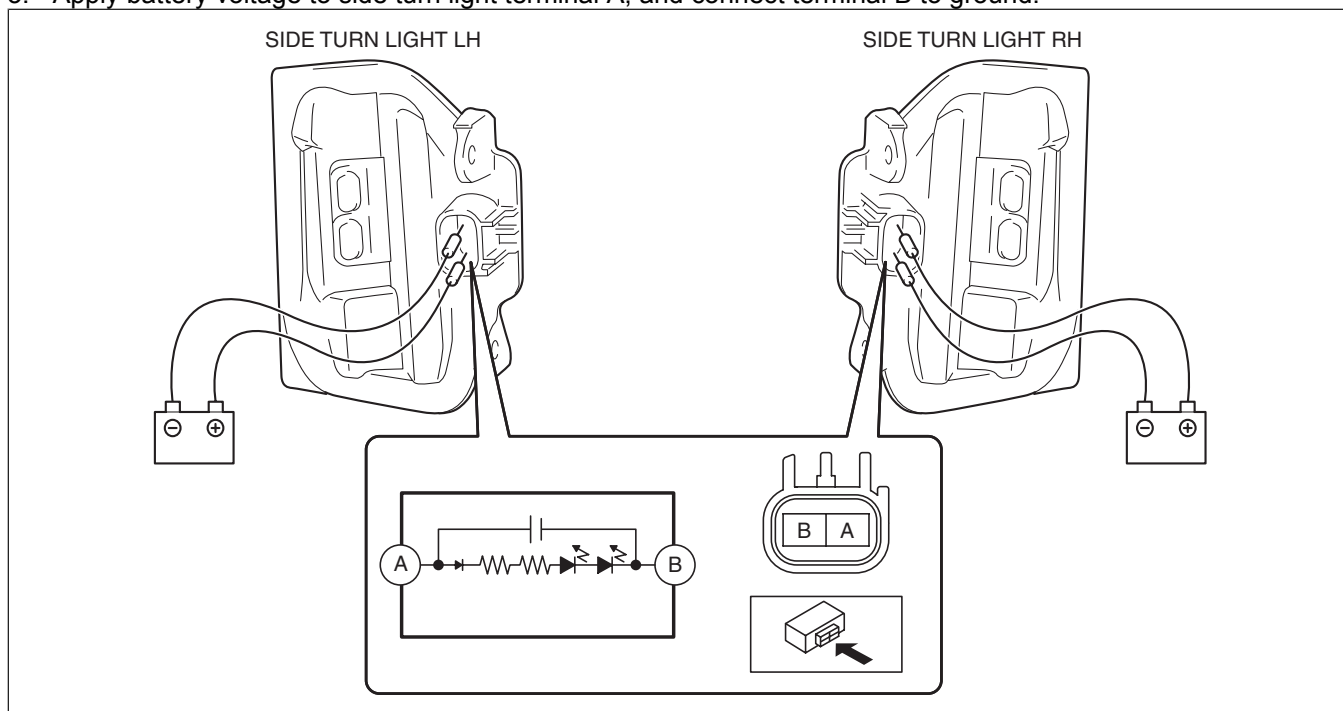

ac5uuw00002725

4. Verify that the LED illuminates.
 - If the LED illuminates, go to the next step.
 - If the LED does not illuminate, replace the side turn light. (See SIDE TURN LIGHT REMOVAL/INSTALLATION.)
5. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Power outer mirror connector (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)
6. Verify that the continuity between the side turn light terminals from the power outer mirror is as indicated in the table.

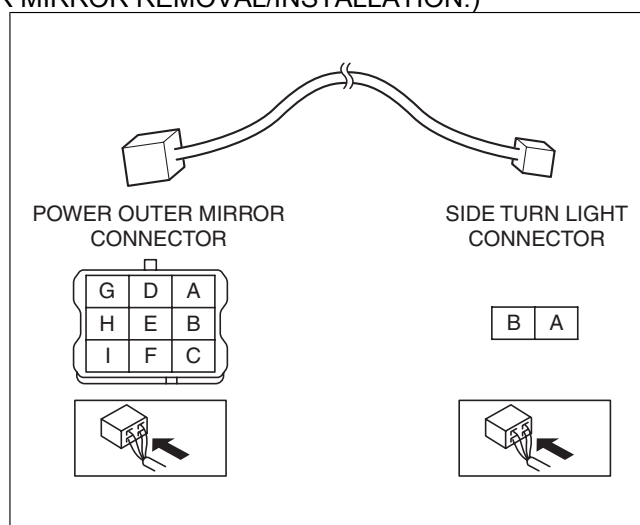

ac5wzw00000108

- If not as indicated in the table, replace the power outer mirror. (See POWER OUTER MIRROR REMOVAL/INSTALLATION.)

○ — ○ : Continuity

| Test condition | Power outer mirror terminal | | Side turn light terminal | |
|---------------------|-----------------------------|-----|--------------------------|-----|
| | E | G | A | B |
| Under any condition | ○ — | | ○ — | |
| | | ○ — | | ○ — |

ac5wzw00000471