


LIFTGATE LOWER TRIM REMOVAL/INSTALLATION


id091700803800

1. Remove the following parts:
 - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
2. Remove fasteners A.

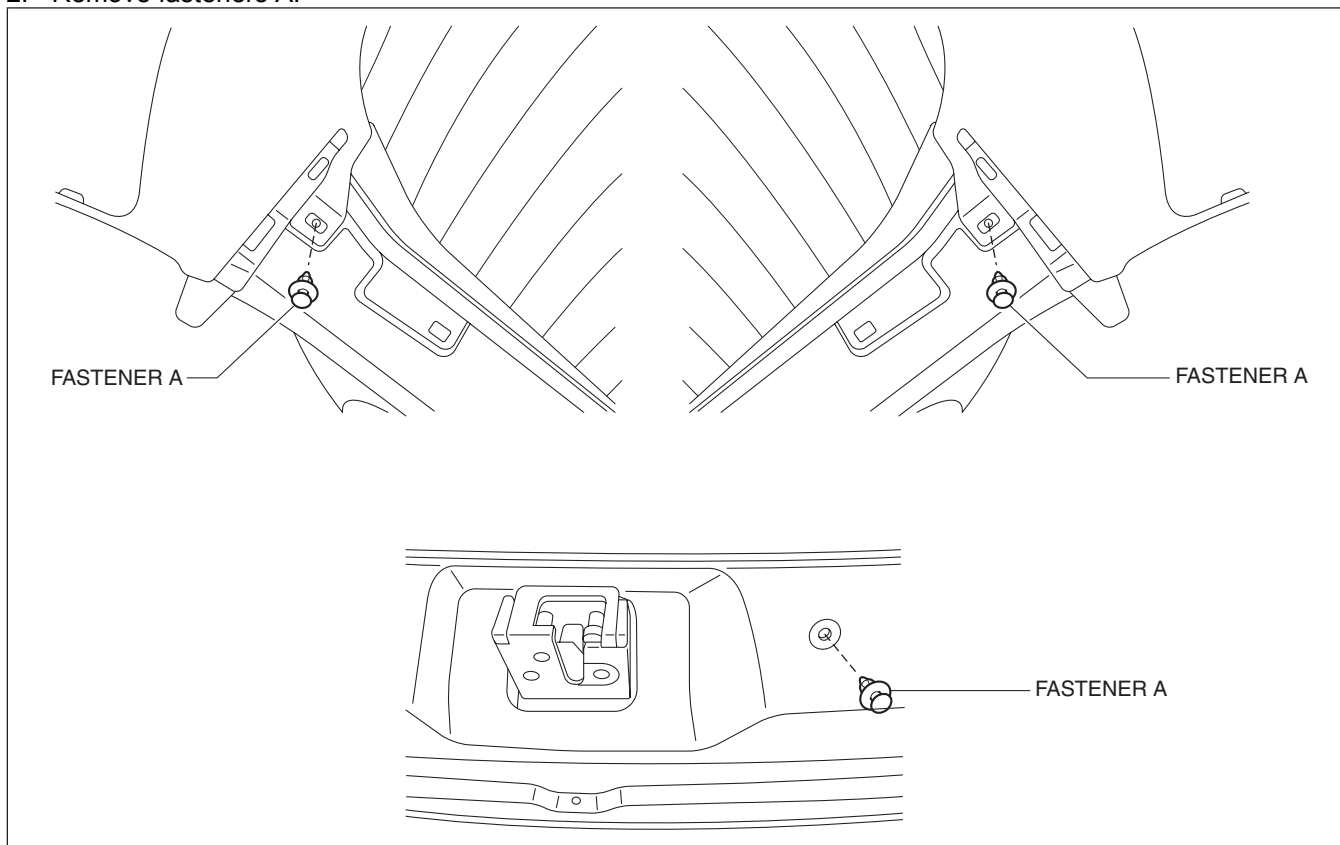

ac5wzw00001475

3. Take the shaded area shown in the figure, and pull the liftgate lower trim in the direction of the arrow in the order of (1), (2), (3), (4) and remove it while detaching clips B, clips C and pins D.

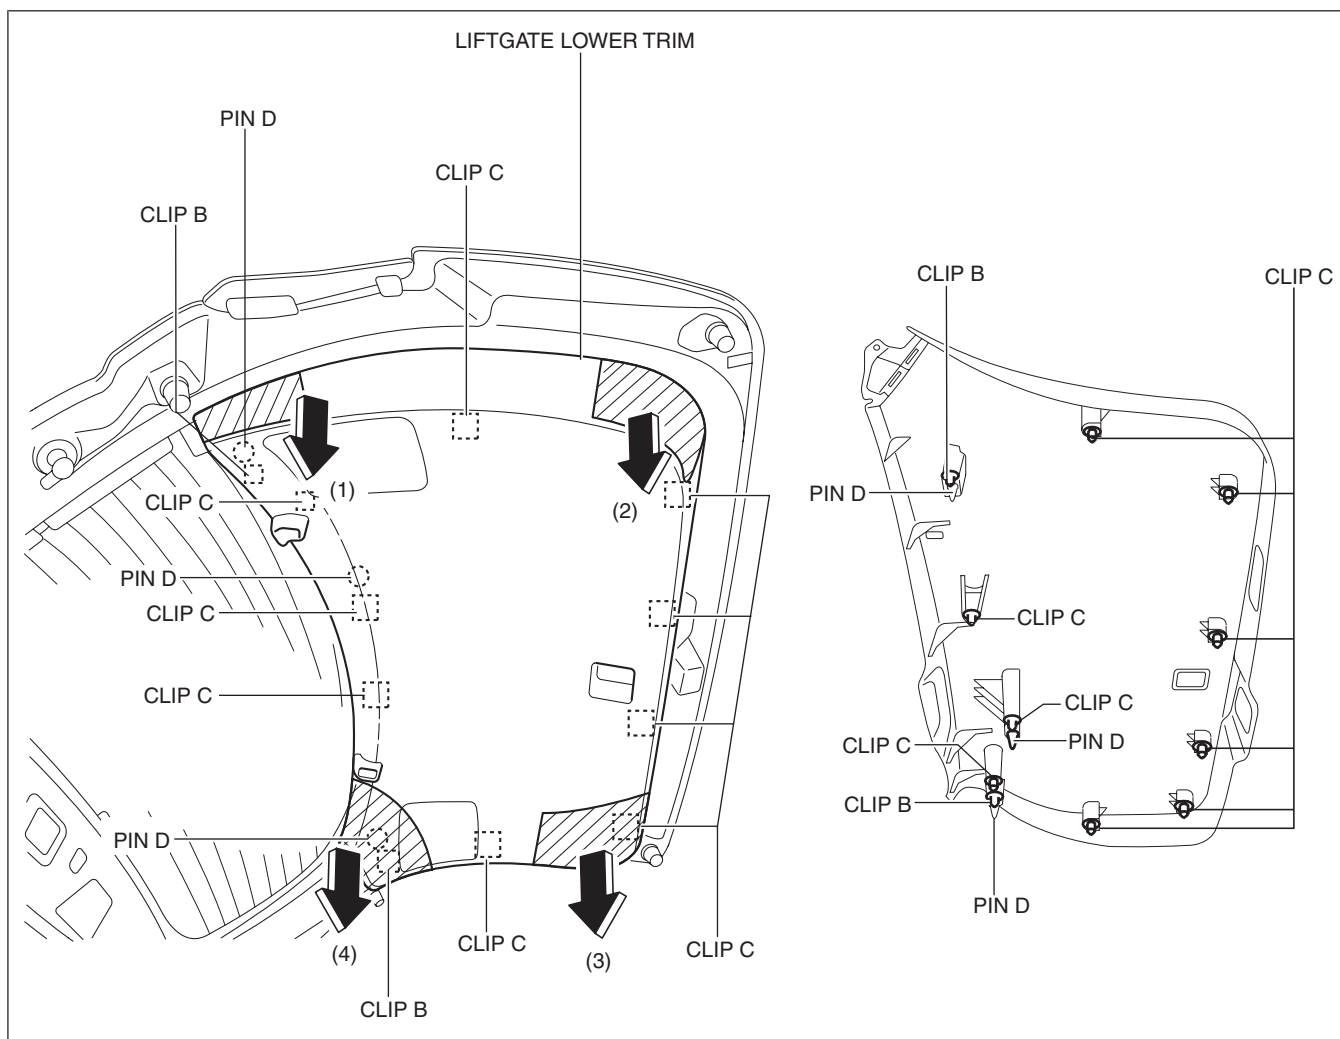

ac5uuw00001783

4. Install in the reverse order of removal.