


## SUNROOF MOTOR REMOVAL/INSTALLATION

id091500801800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the map light. (See MAP LIGHT REMOVAL/INSTALLATION.)
3. Remove screws.

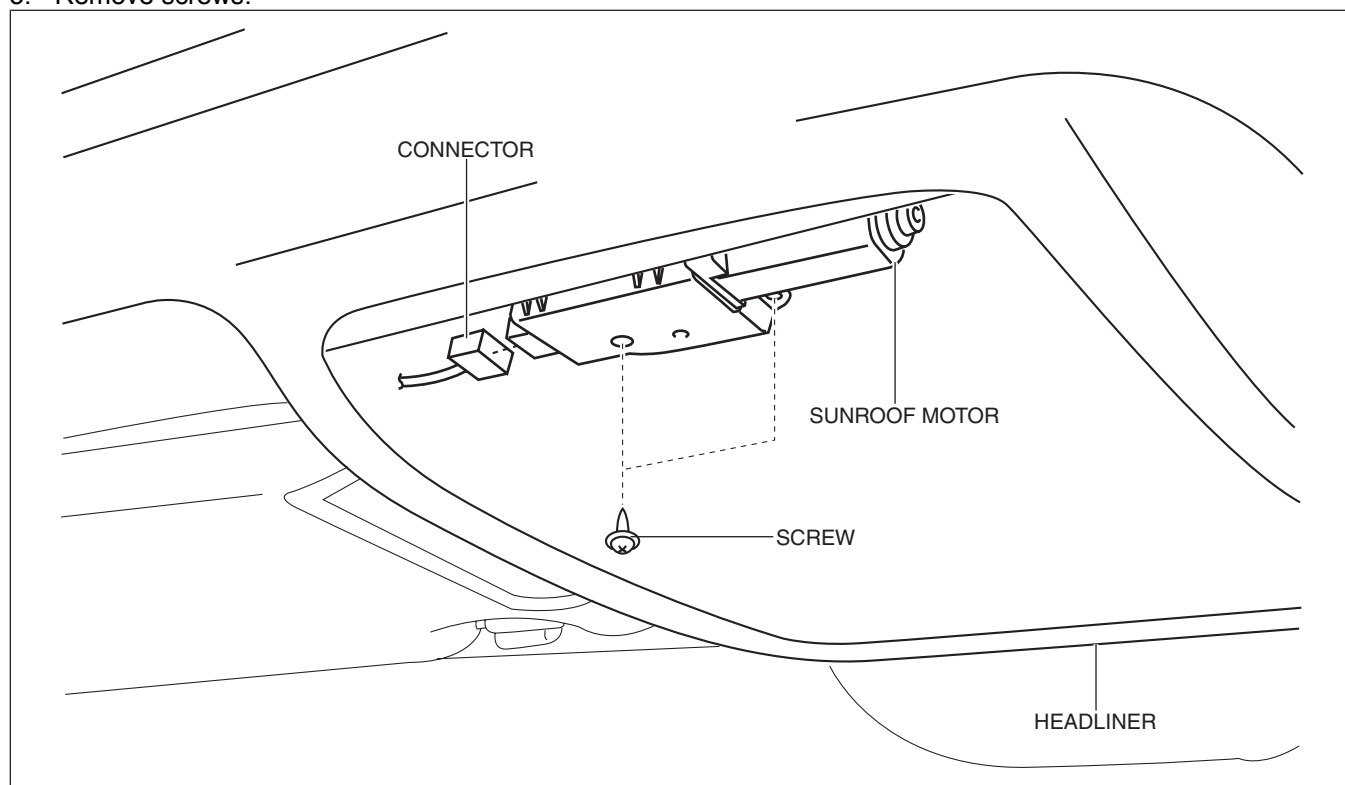

4. Disconnect the connector.
5. Remove the sunroof motor.
6. Install in the reverse order of removal.

ac5wzw00001514