


AIR CLEANER ELEMENT REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0113z9800200

1. Remove the air cleaner element as shown in the figure.
2. Install in the reverse order of removal.

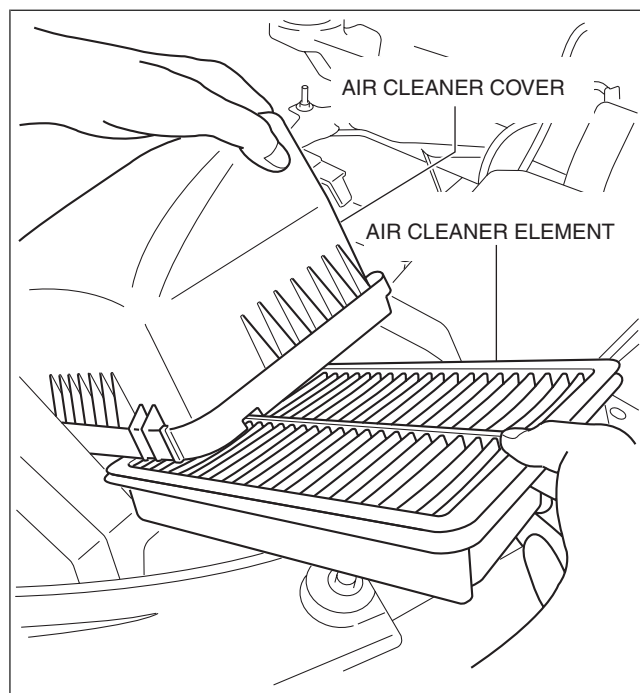

ac5uuw00000360