


## CIGARETTE LIGHTER REMOVAL/INSTALLATION


id092000803100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (2) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (3) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (4) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
  - (5) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (6) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (7) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. Insert a tape-wrapped flathead screwdriver into the gap between the ring tab and socket.

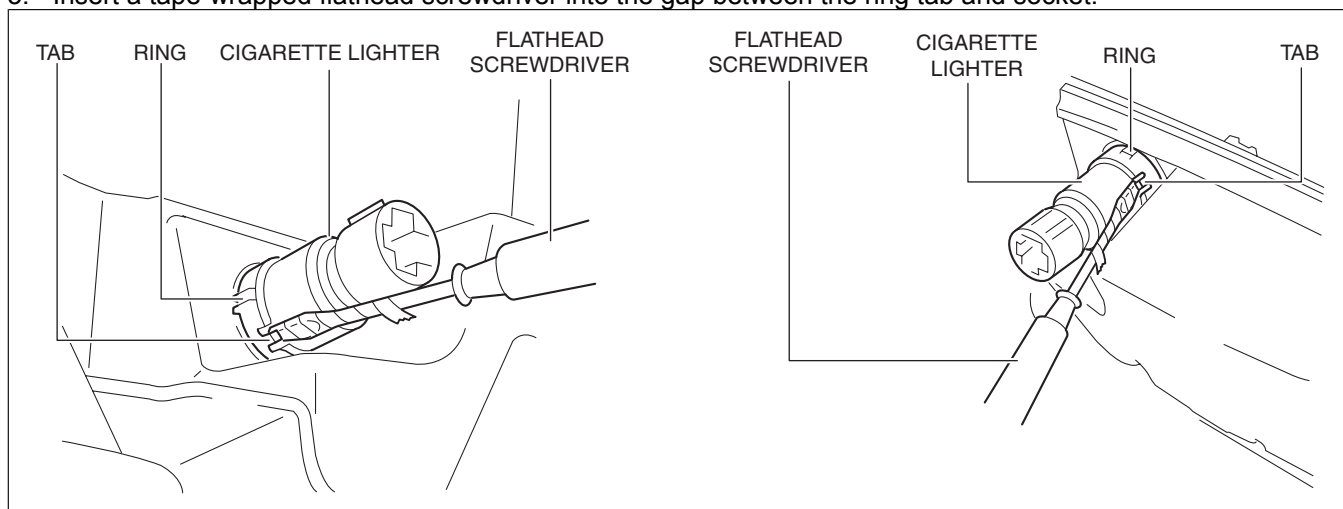


ac5wzw00004608

4. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, press the cigarette lighter in the direction of the arrow (2) shown in the figure, and detach the ring tab from the socket.

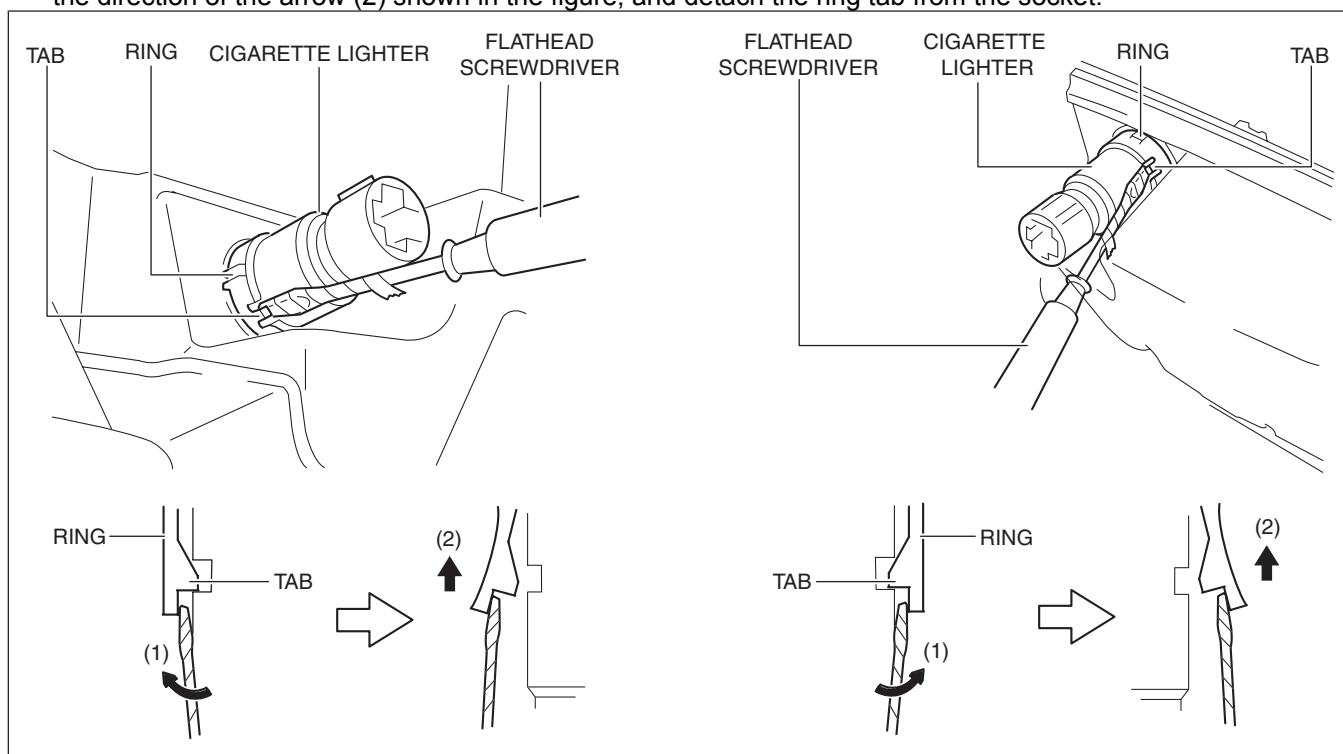


ac5wzw00004609

5. Pull the cigarette lighter in the direction of the arrow shown in the figure and remove it.

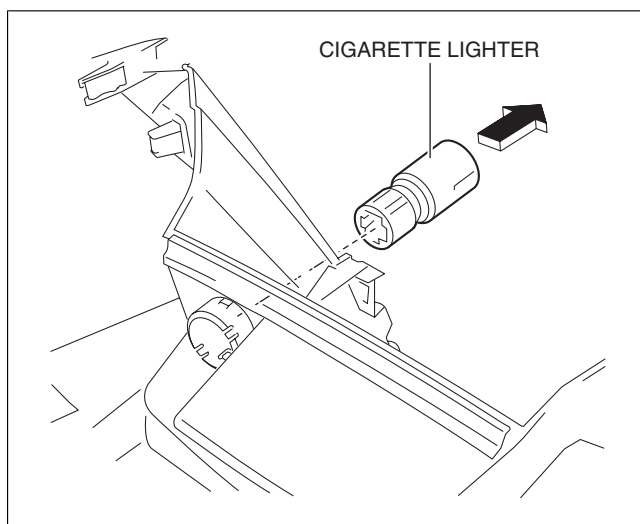

ac5wzw00004610

6. While pressing the ring tabs in the direction of arrows (3) shown in the figure, press the ring in the direction of arrow (4) to detach the ring tabs from the front console.

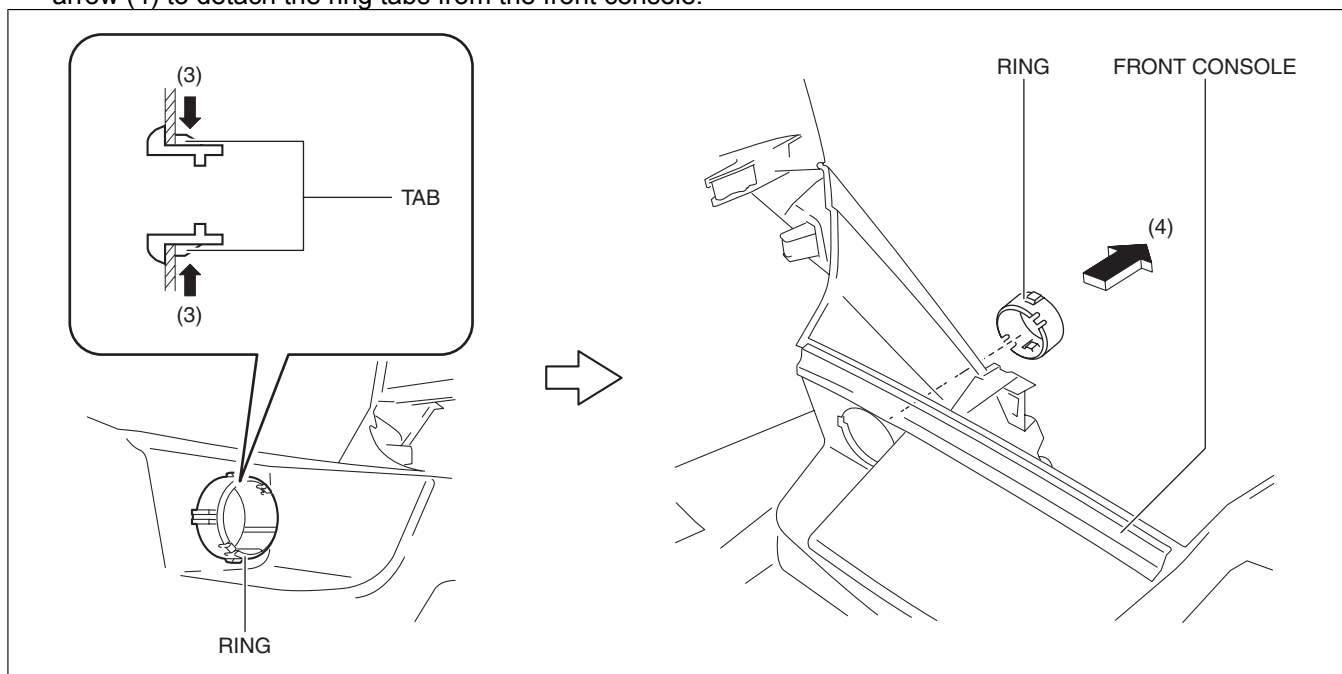

ac5wzw00004611

7. Remove the ring.  
8. Install in the reverse order of removal.