


PURGE SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0]

id0116z8804300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
3. Remove the air cleaner and air hose as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
4. Disconnect the high pressure fuel pump connector.
5. Disconnect the harness clip as shown in the figure.

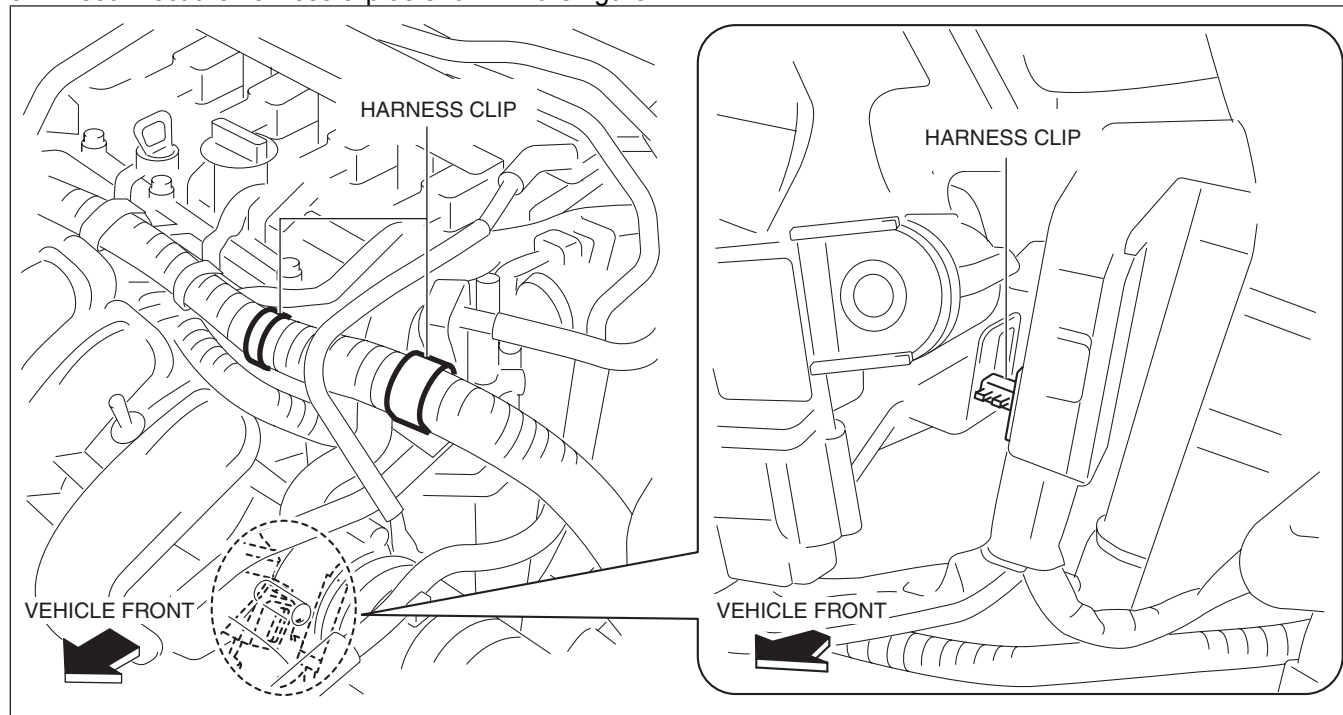


am3uuw00008598

6. Remove in the order indicated in the table.

1	Evaporative hose No.1 (See Evaporative Hose No.1 Installation Note.)
2	Catch tank
3	Evaporative hose No.2
4	Purge solenoid valve connector
5	Evaporative hose No.3 (See Evaporative Hose No.3 Installation Note.)
6	Purge solenoid valve bracket installation bolt
7	Purge solenoid valve (See Purge Solenoid Valve Installation Note.)

7. Install in the reverse order of removal.

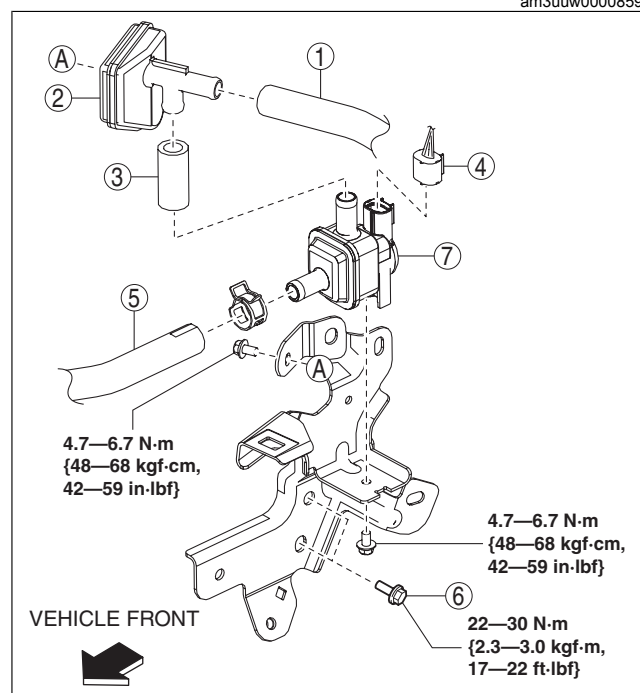


am3uuw00008527

Purge Solenoid Valve Installation Note

1. Temporarily install the purge solenoid valve to the bracket.


2. Lift up and tighten the purge solenoid valve as shown in the figure.

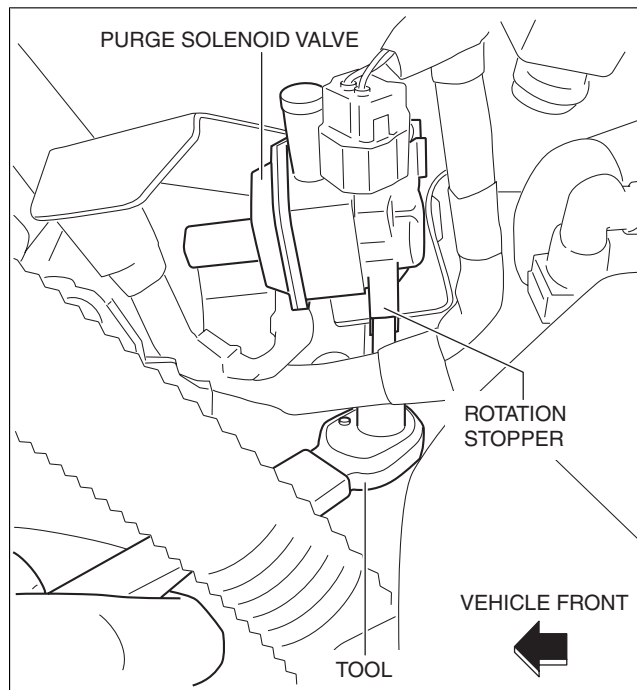

am3uuw00008599

Evaporative Hose No.3 Installation Note

1. Install the evaporative hose No.3 as shown in the figure.

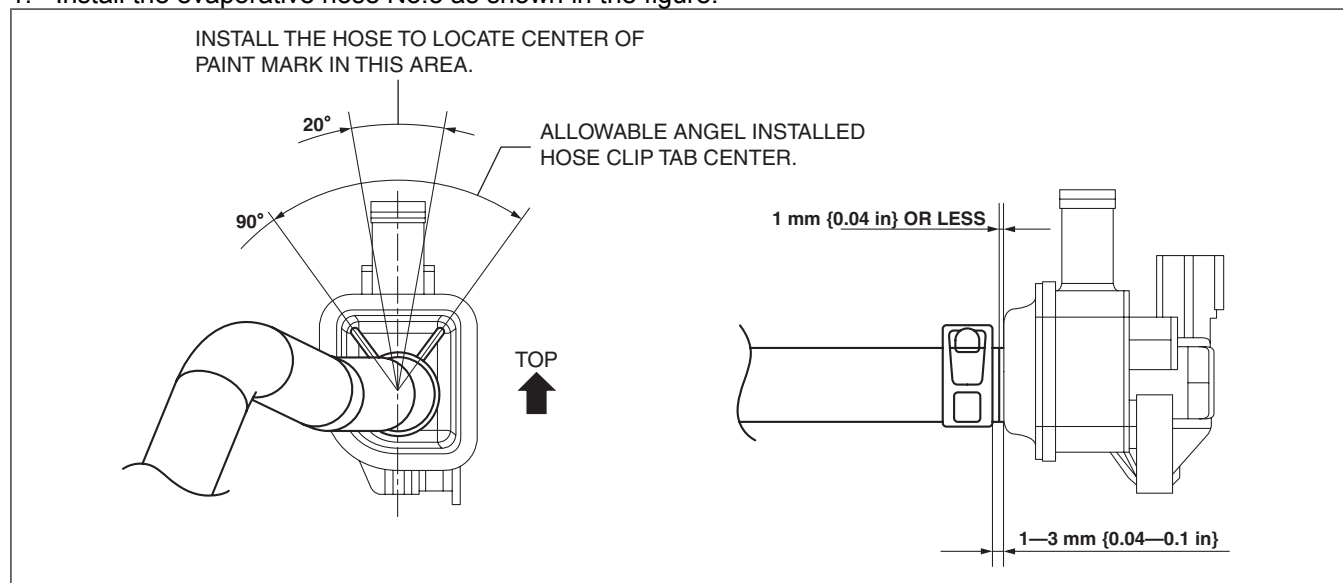

am3uuw00008528

Evaporative Hose No.1 Installation Note

1. Install the evaporative hose No.1 as shown in the figure.

