

## REQUEST SWITCH INSPECTION


id091400515400

### Driver's Door/Passenger's Door

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the following parts:
  - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
  - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
  - (3) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
  - (4) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
  - (5) Front door key cylinder (driver's side) (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
  - (6) Front outer handle (See FRONT OUTER HANDLE REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

○—○:CONTINUITY		
REQUEST SWITCH (REQUEST SWITCH CONDITION)	TERMINAL	
	A	D
ON (PRESSED)	○—○	○—○
OFF (NOT PRESSED)		

ac5wzw00000945

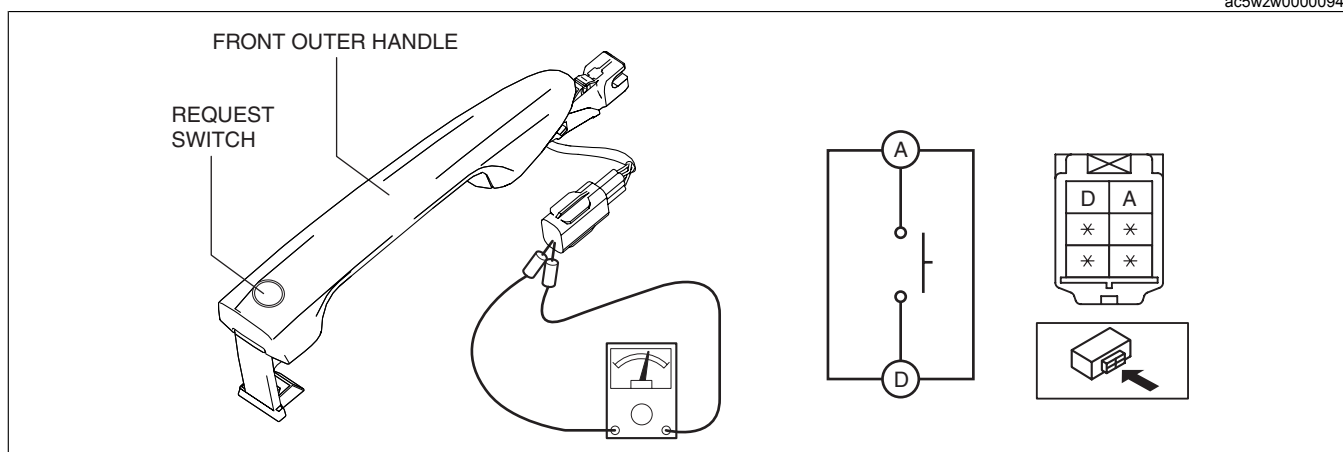

ac5wzw00000265

- If not as indicated in the table, replace the front outer handle.


### Liftgate

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
  - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
  - (4) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
  - (5) Liftgate garnish (See LIFTGATE GARNISH REMOVAL/INSTALLATION.)
  - (6) Request switch (liftgate)(See REQUEST SWITCH REMOVAL/INSTALLATION.)

3. Verify that the continuity is as indicated in the table.

REQUEST SWITCH (REQUEST SWITCH CONDITION)	○—○:CONTINUITY	
	TERMINAL	
	A	B
ON (PRESSED)	○—○	○—○
OFF (NOT PRESSED)		

ac5wzw00000946

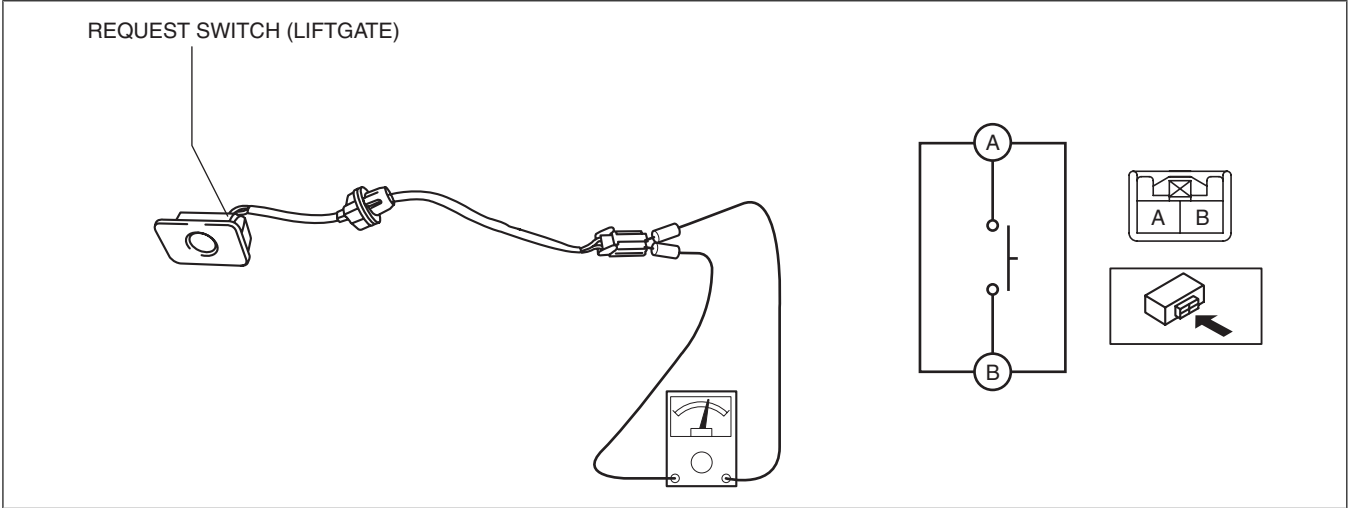

ac5wzw00000266

- If not as indicated in the table, replace the request switch.