

OCCUPANCY SENSOR


id091300110400

Purpose, Function

- The occupancy sensor detects weight on the seat area of the front passenger seat cushion.

Construction

- The occupancy sensor is integrated into the front passenger seat cushion.
- The occupancy sensor includes 6 pressure sensors.

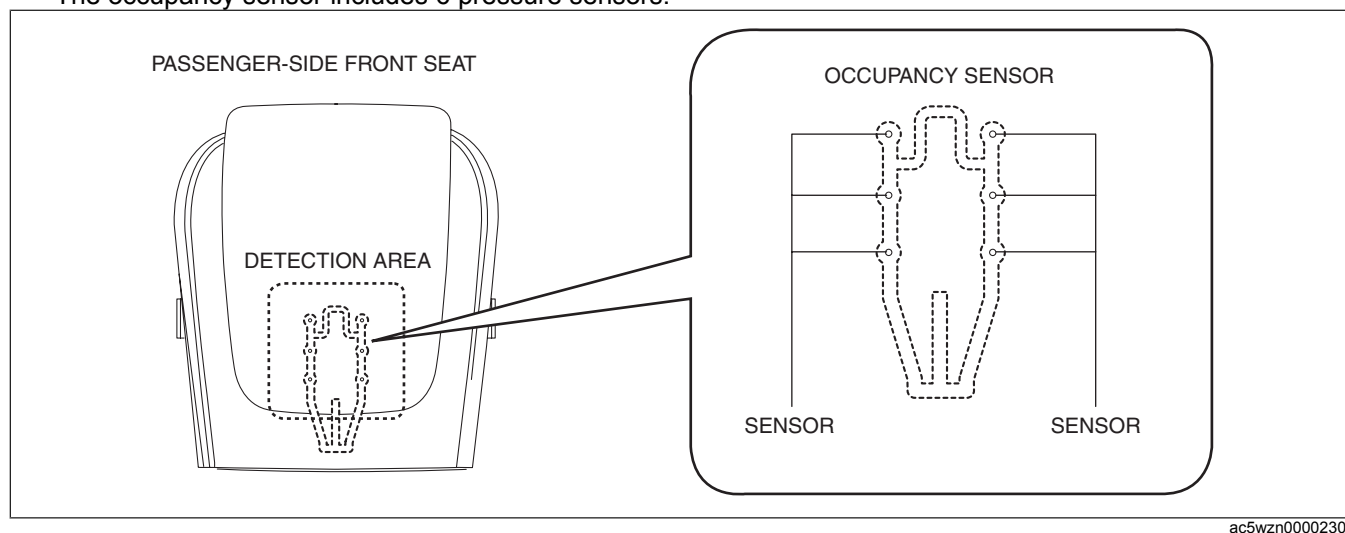

ac5wzn00002307

Operation

1. The pressure sensors of the occupancy sensor turn on and off according to the weight applied to the sensor detection area.

Fail-safe

- Function not equipped.