



REAR FOG LIGHT REMOVAL/INSTALLATION

id091800805100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
3. Disconnect the connector.

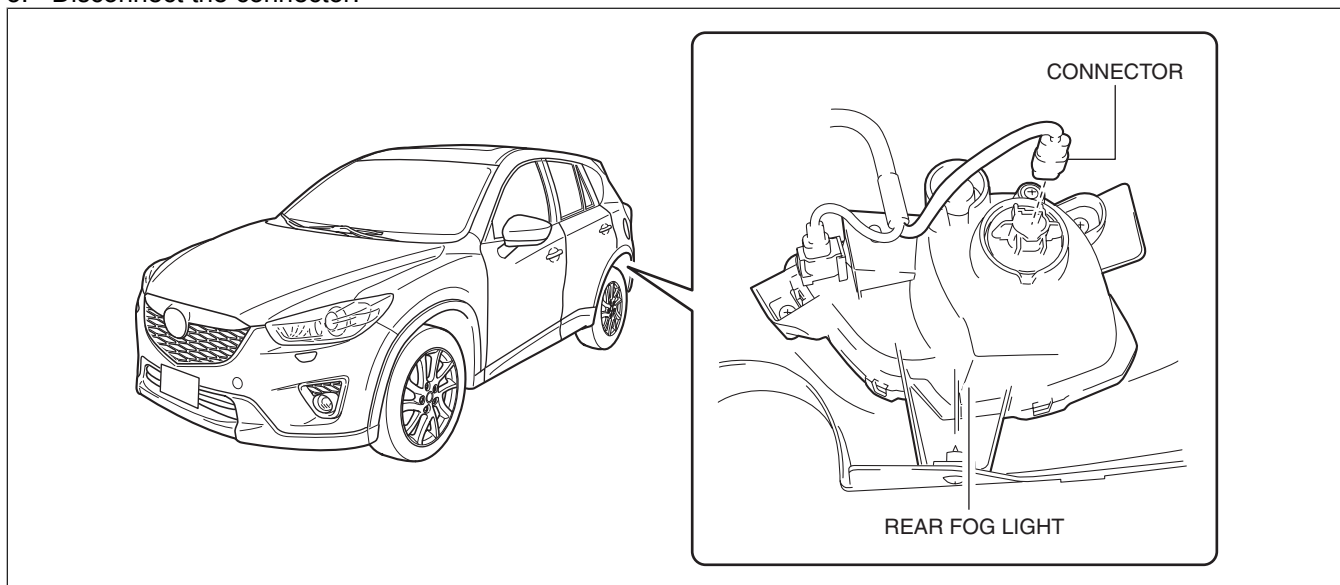


4. While pressing the tabs of the clip in the direction of the arrow (1) shown in the figure, press the clip in the direction of the arrow (2) to detach the tabs of the clip and rear fog light (with parking sensor system).

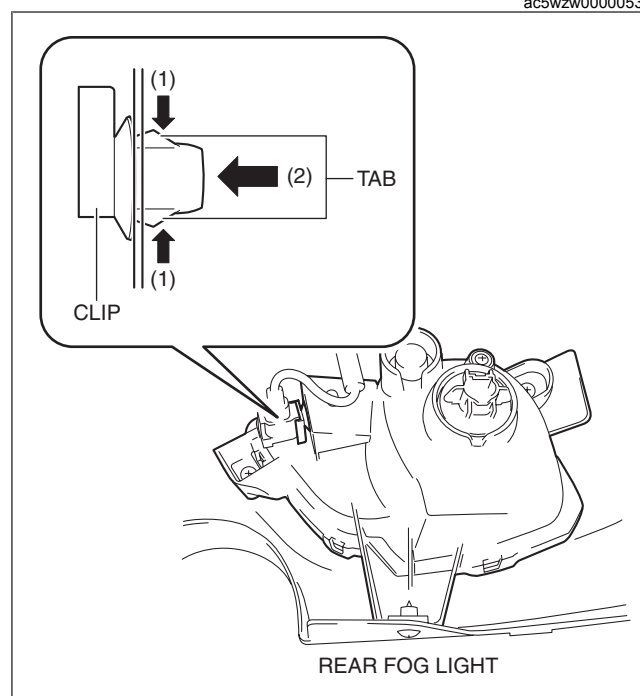


ac5wzw00001194

5. Remove the clip (with parking sensor system).

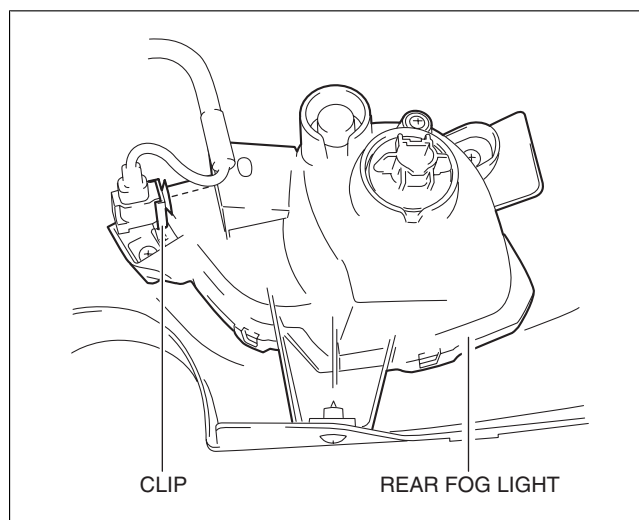


ac5wzw00000532

6. Remove the screws.

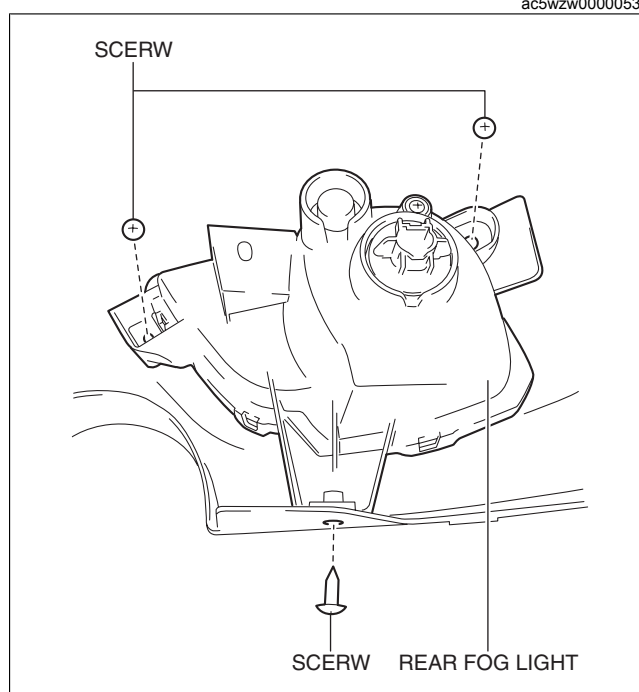

ac5wzw00000533

7. Remove the rear fog light.
8. Install in the reverse order of removal.

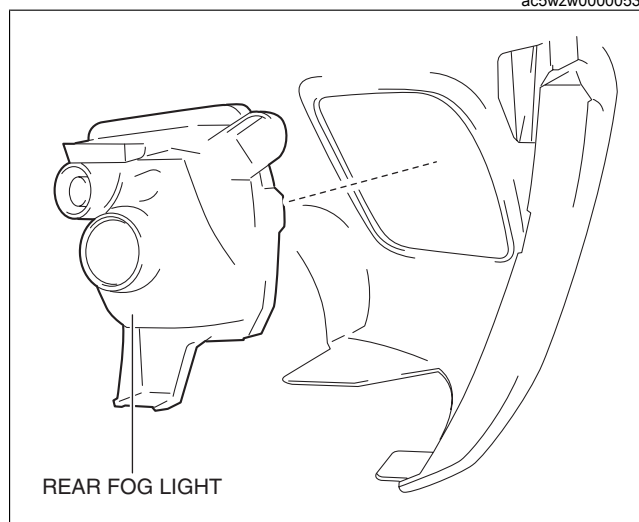

ac5wzw00000534