


## DIFFERENTIAL [D66M-R, D66MX-R]

id0515md284200

### Purpose, Function

- The differential absorbs the rotation speed of the inside and outside wheel of a wheel set when the vehicle is cornering.


### Construction

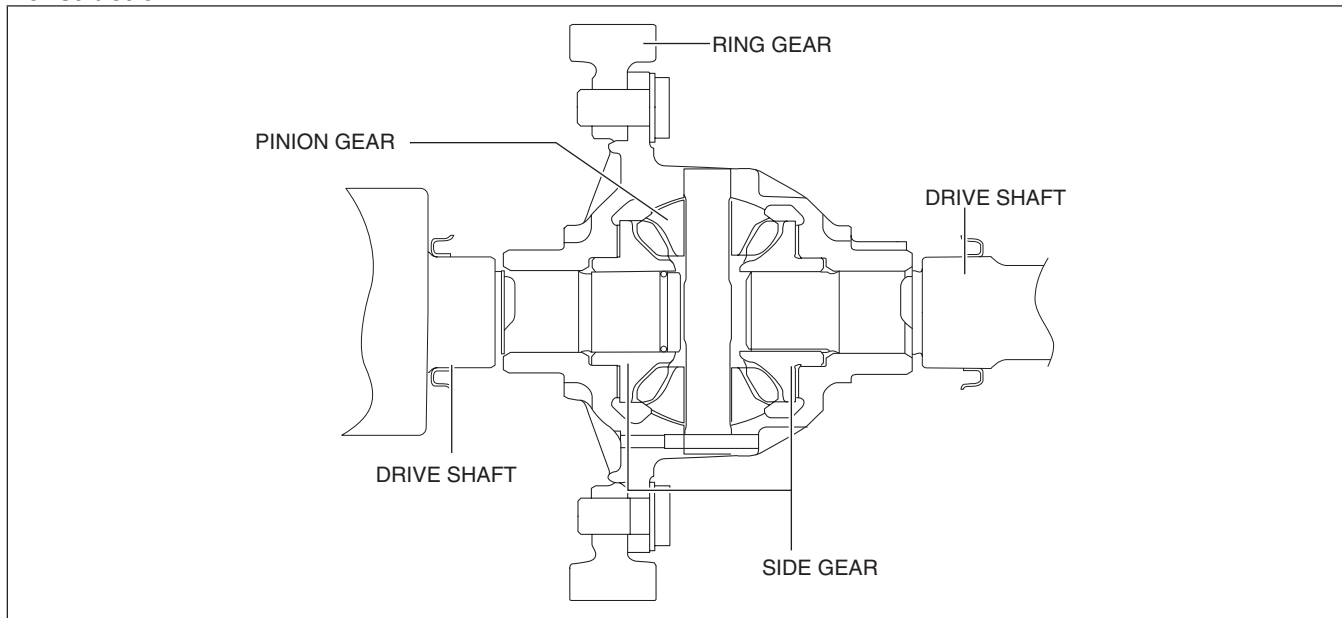

ac5wzn00001795


### Operation

#### Driving in a straight line

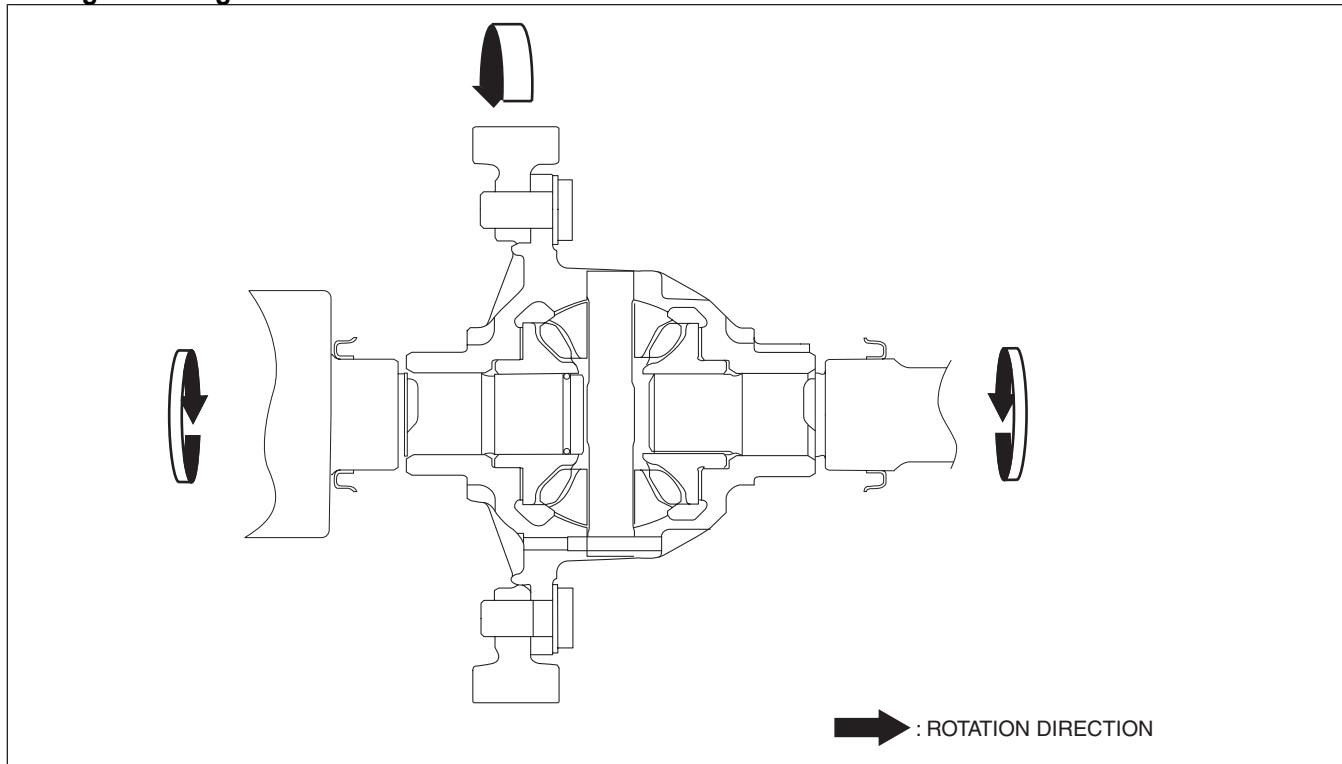

am3uun00001802

## Cornering

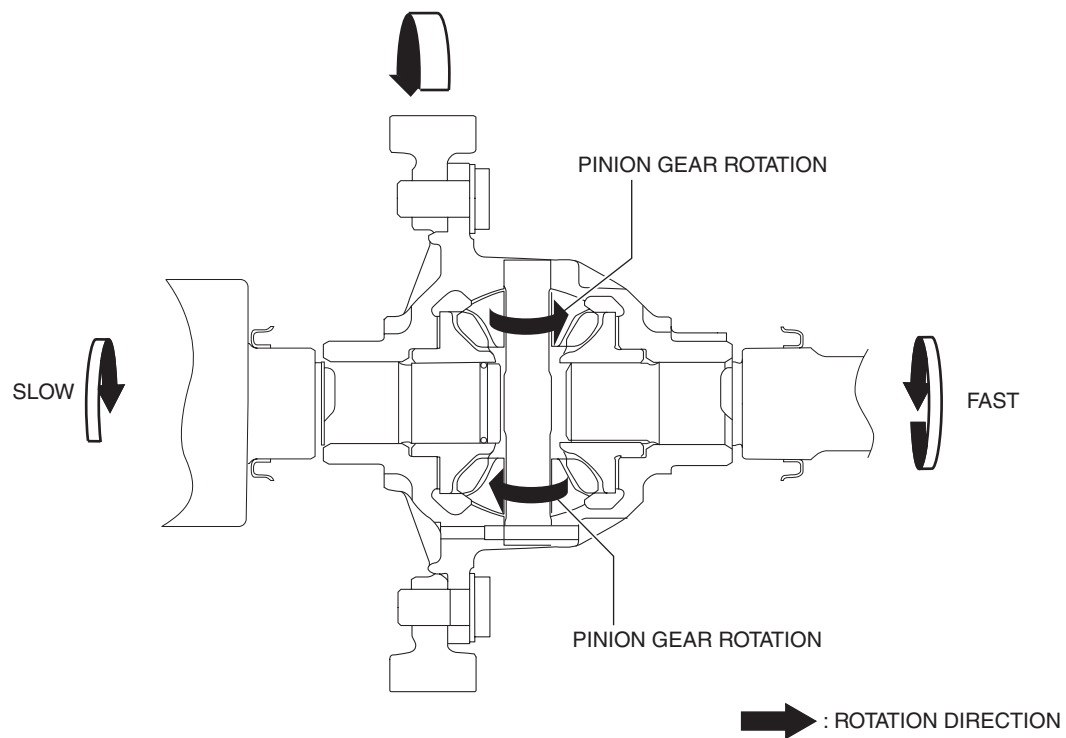

am3uun00001803